

2006  
XCB634

# Electrical Catalogue

The power to Switch



*Driving the Lucas brand  
into the future*

**Lucas Electrical**

**Lucas Lighting & Mirrors**

**Lucas Engine Management**

**Lucas Batteries**

**Lucas Starters & Alternators**

**Lucas Warning & Safety**



The power of EXCELLENCE



# Contents

## 1 Application List

## 2 Products

Fuelling Relays	2.3
Flasher Units	2.6
Panel Switches	2.10
Column Switches	2.14
Classic Relays	2.30
Solenoids	2.31
General Purpose Relays	2.35
Battery Master Switches	2.38
Land Rover Ignition Switches and Steering Locks	2.40
Lucas Original Equipment	2.41

## 3 Technical Specification

## 4 Cross Reference



# Column Switches

- Quality Lucas brand product
- Designed and built to Original Equipment specification
- Continuous range development
- Direct replacement for vehicle manufacturers' switchgear
- Comprehensive range of product
- Most part numbers unique to the Lucas programme

SQB425



SQB427



SQB160




SQB188



36641




SQB500

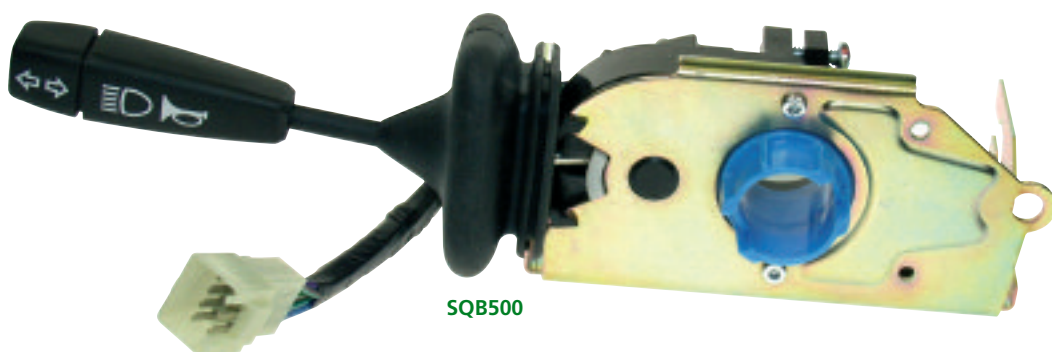


# Battery Master Switches


- Quality Lucas brand product
- Designed and built to the highest specifications
- Battery master switches suitable for passenger, commercial and industrial applications
- Conform to the latest Energy Institute ADR guidelines
- A requirement for "Safe Loading Passes"
- Essential for vehicles carrying dangerous loads, e.g. petroleum products, gases, acids, etc
- Technical information provided in catalogue

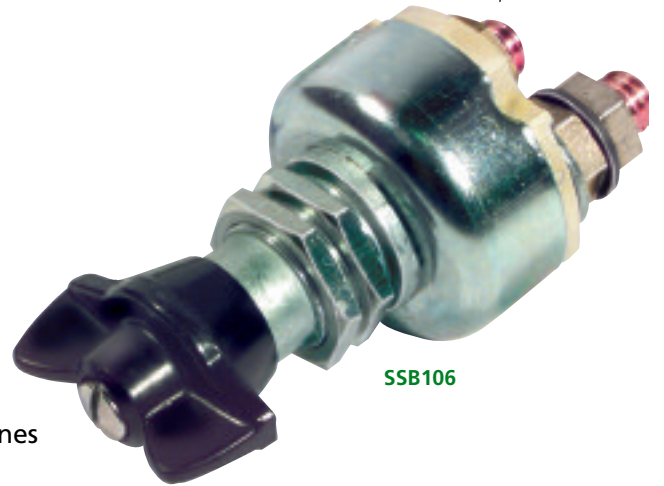

SSB106

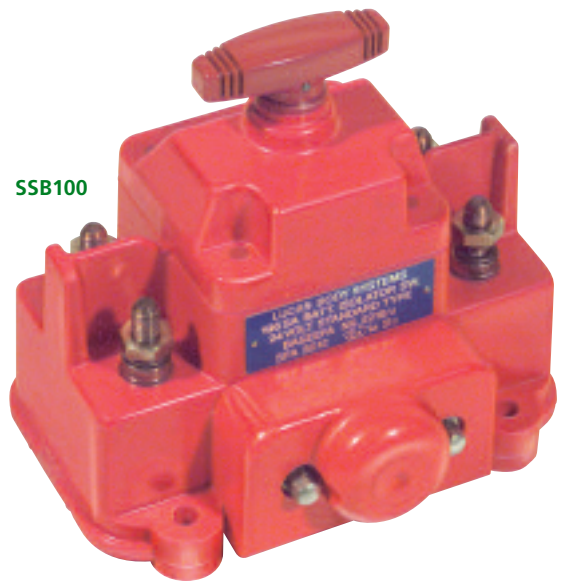

SSB100

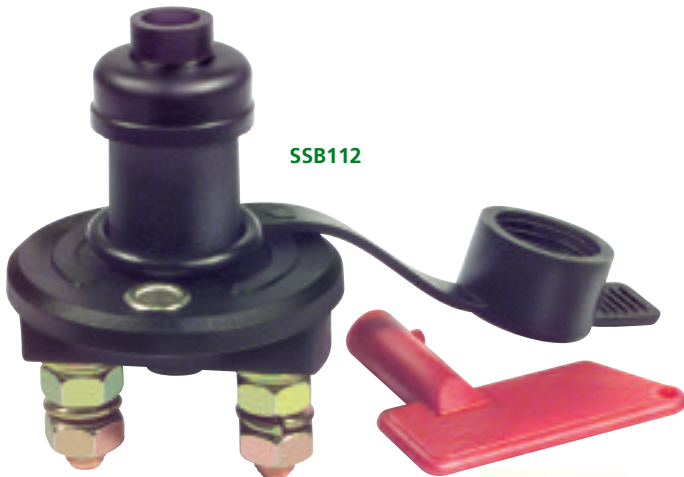

SSB112



SSB111




SSB153




SSB111

## Ignition Switches

- Quality Lucas brand product
- Designed and built to Original Equipment specification
- Continuous range development
- Direct replacement for vehicle manufacturers' switchgear
- Comprehensive range of product
- Specific Ignition Switches are suitable for commercial, agricultural and industrial applications
- Technical information provided in catalogue

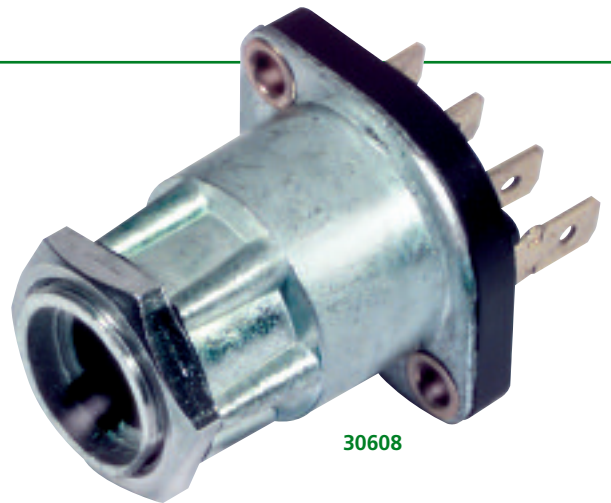


30608

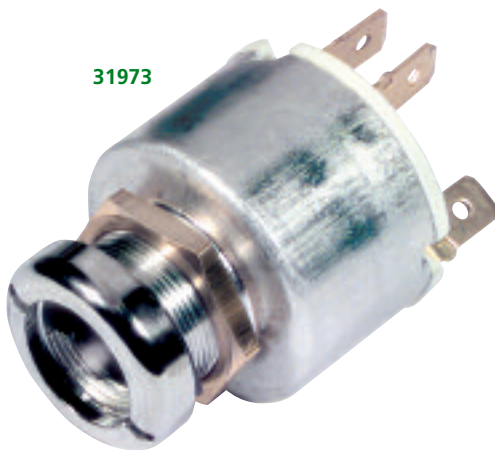

31973



35670

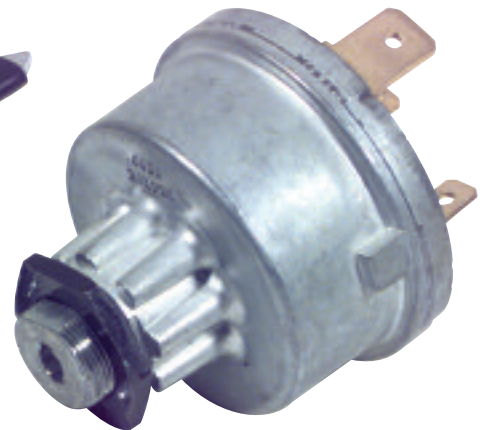

## Panel Switches

- Quality Lucas brand product
- Designed and built to Original Equipment specification
- Direct replacement for vehicle manufacturers' switchgear
- Most part numbers unique to the Lucas programme
- Comprehensive range of product including:

- Rocker Switches
- Lever Switches
- Rotary Switches
- Push Pull Switches
- Rheostats



30949



39737




SPB106



# Lucas Original Equipment


- Classic quality Lucas brand product
- Designed and built to original equipment specification
- Direct replacement for vehicle manufacturers' equipment
- Technical specifications detailed in catalogue
- Range of product including:

Ignition Switches  
 Column Switchgear  
 Panel Switches  
 Fuse Boxes

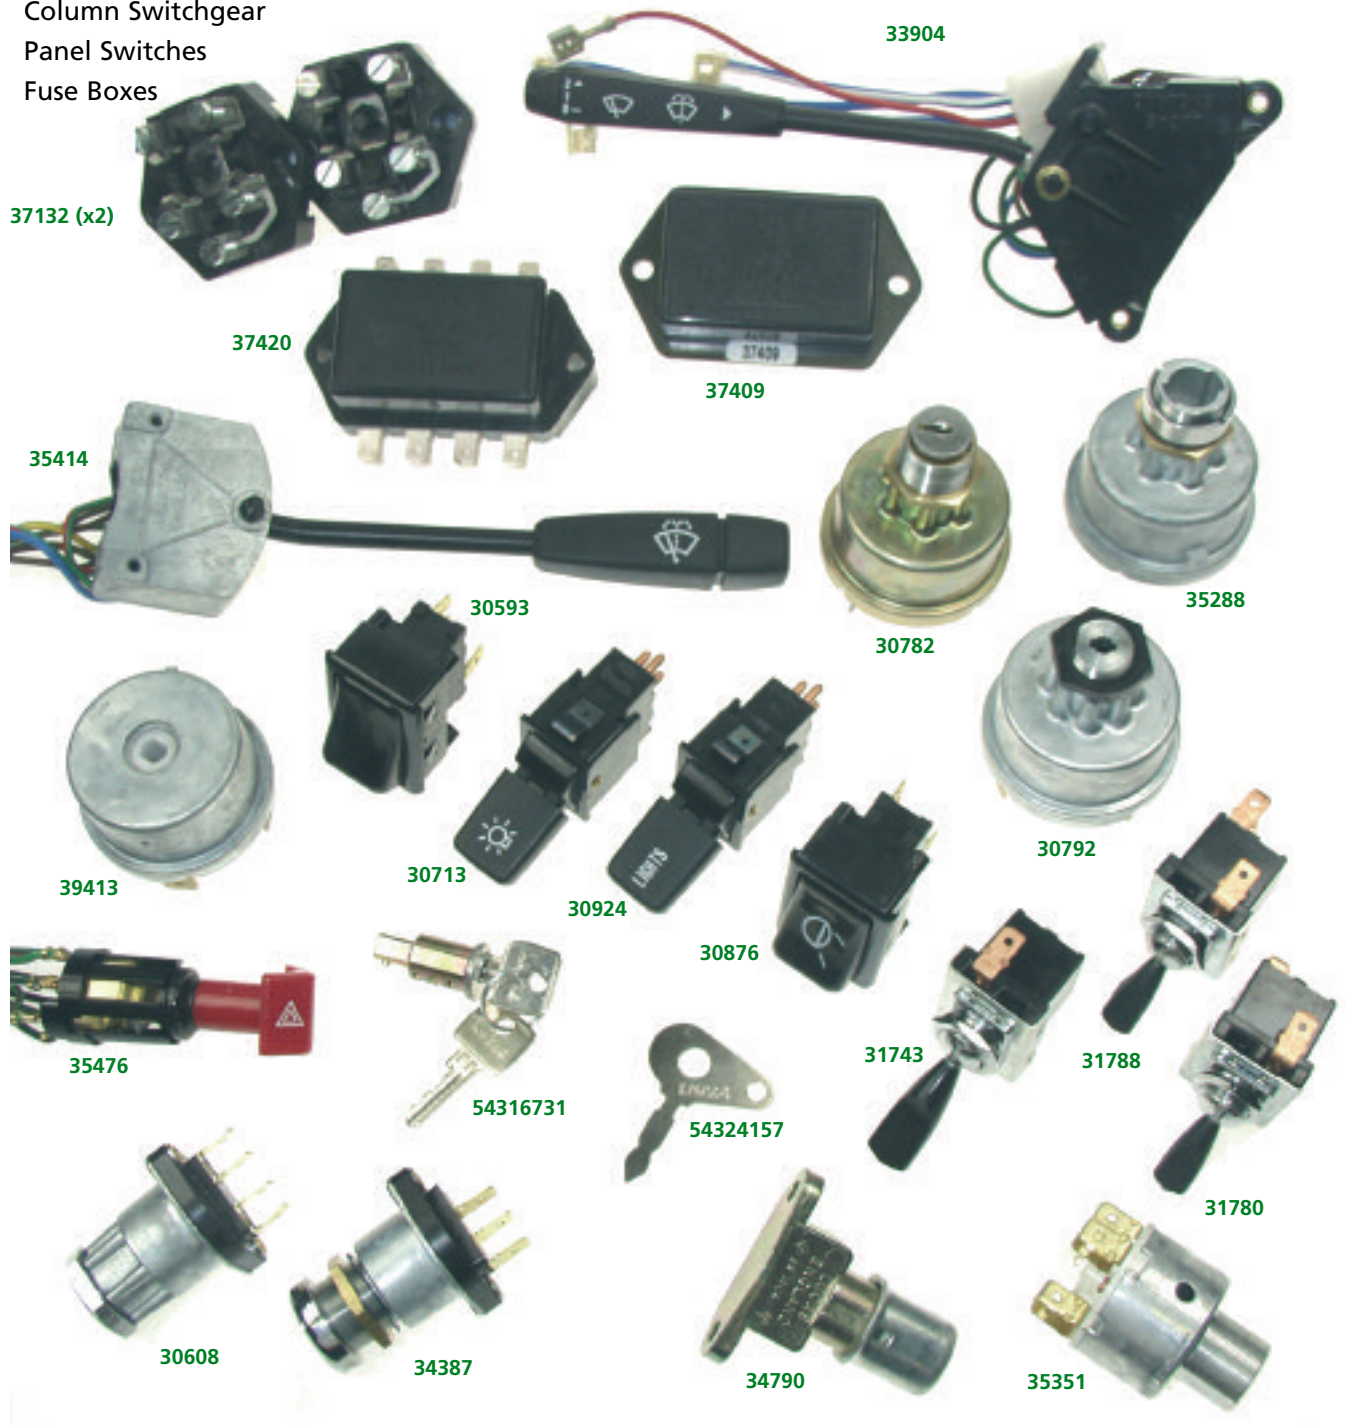

## Solenoids


- Quality Lucas brand product
- Designed and built to Original Equipment specification
- Direct replacement for vehicle manufacturers' equipment
- Suitable for automotive and industrial plant applications
- Technical specifications detailed in catalogue

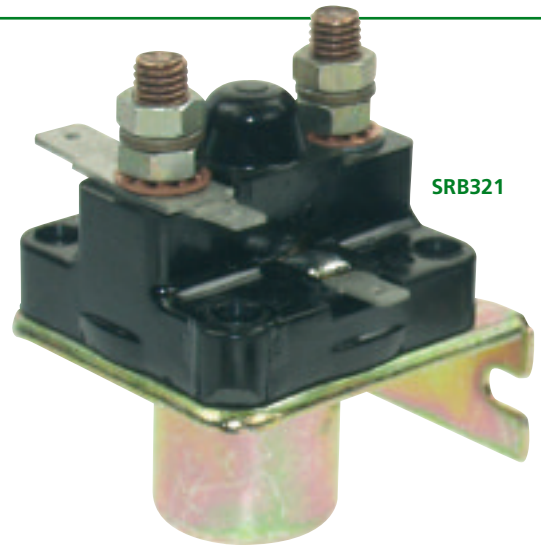

SRB321



SRB321

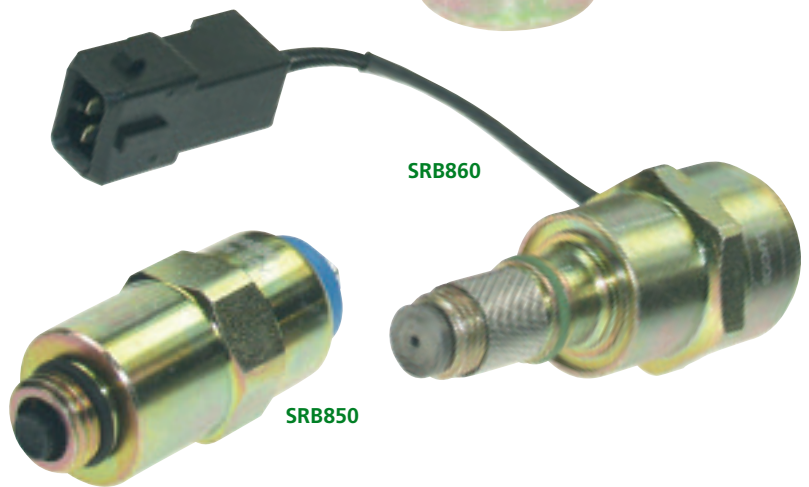


SRB860

SRB850


## Flasher Units

These sensors provide an audible indication that the caravan/trailer flasher system is working satisfactorily. Malfunction of the system (such as a faulty bulb) is indicated by the absence of the audible buzz.

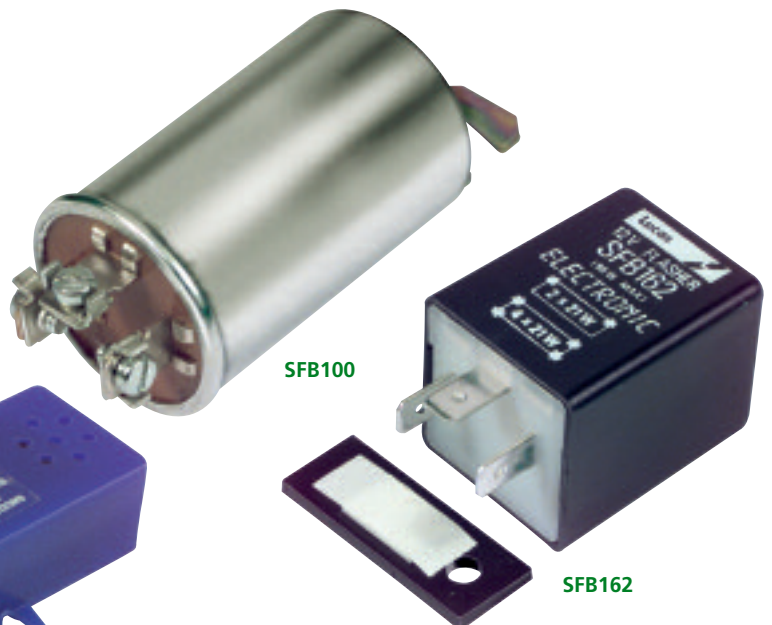

SFB100

SFB162

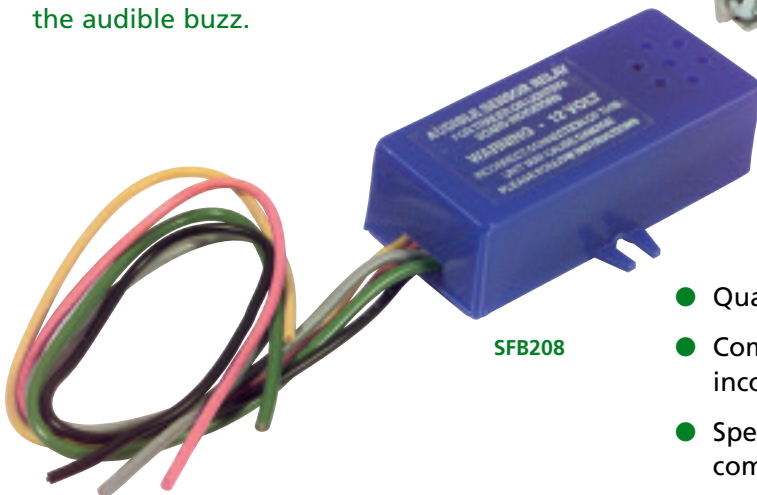

SFB208

- Quality Lucas product
- Comprehensive coverage of the vehicle parc, incorporated in a dedicated Flasher Unit range
- Specific Flasher Units suitable for passenger, light commercial, heavy goods and agricultural vehicles



## Classic Lucas Relays


- Quality Lucas brand product
- Designed and built to the highest specifications
- Metal casing for robust durability
- Many classic vehicle applications
- Technical information provided in catalogue



SRB111




SRB411

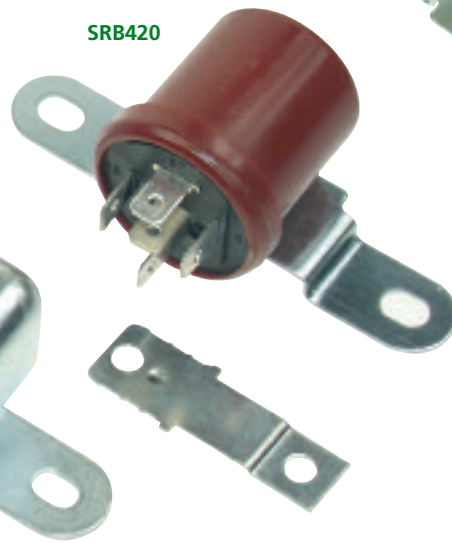

SRB420




SRB201

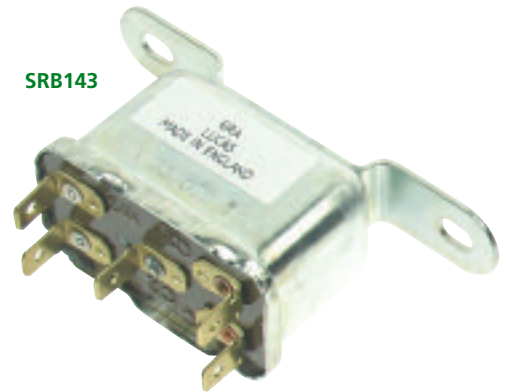

SRB143

## General Purpose Relays

- Quality Lucas brand product
- Designed and built to the highest specifications
- A relay for all eventualities
- A comprehensive range of split charge relays
- 24v to 12v voltage dropping relays
- Technical information provided in catalogue

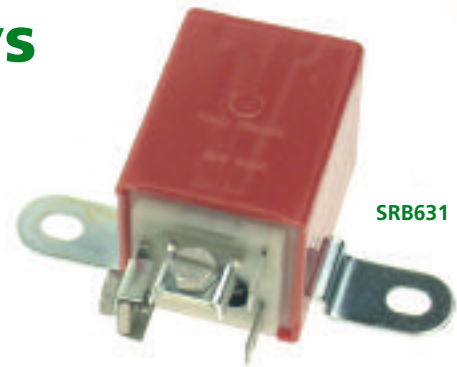

SRB631



SRB630

# Lucas catalogues



Lucas



The power to SWITCH

# Application List





Description

Function

Engine Info

cc

OE

Part No.

**AC**

3000 ME	Panel Switch	Door Lock Actuator	Ford V6	2994	1979-85	<b>33727</b>
3000 ME	Column Switch	DI, Horn, Lighting	Ford V6	2994	1979-85	<b>SQB119</b>
428	Solenoid 4ST			7016	1969-74	<b>SRB335</b>

**AEC >> Volvo Leyland****ALLIS CHALMERS {US}**

5000 Combine	Solenoid 2ST			5800	1969-72	<b>SRB319</b>
Super 'A' Combine	Solenoid 2ST			3860	1969-72	<b>SRB319</b>

**ASTON MARTIN**

DB6	Solenoid 4ST			3995	1969-71	<b>SRB341</b>
DBS V8	Solenoid 4ST			5340	1969-71	<b>SRB335</b>
DBS V8	Solenoid 4ST			5340	1969-71	<b>SRB341</b>
DBS, 6 GT, 6 Vantage	Solenoid 4ST			3995	1969-71	<b>SRB335</b>
DBS, 6 GT, 6 Vantage	Solenoid 4ST			3995	1969-71	<b>SRB341</b>
Lagonda (5.3)	Batt Master Switch		V8	5340	1976-85	<b>SSB103</b>
Lagonda (5.3)	Panel Switch	Rheostat	V8	5340	1976-85	<b>78405</b>
Lagonda (5.3)	Batt Master Switch		V8	5340	1980-85	<b>SSB106</b>
Lagonda (5.3i)	Panel Switch	Rheostat	V8	5340	1985-90	<b>78405</b>
Lagonda (5.3i)	Batt Master Switch		V8	5340	1985-90	<b>SSB103</b>
Lagonda (5.3i)	Batt Master Switch		V8	5340	1985-90	<b>SSB106</b>
V8	Panel Switch	2 position lever	V8	5340	1977-81	<b>31780</b>
V8	Batt Master Switch		V8	5340	1985-87	<b>SSB106</b>
V8 Volante	Panel Switch	2 position lever	V8	5340	1979-81	<b>31780</b>
V8 Volante	Panel Switch	Rheostat	V8	5340	1982-89	<b>78405</b>
V8 Volante	Batt Master Switch		V8	5340	1985-89	<b>SSB106</b>
Vantage (V8)	Panel Switch	2 position lever	V8	5340	1977-81	<b>31780</b>
Vantage (V8)	Batt Master Switch		V8	5340	1985-89	<b>SSB106</b>
Vantage (V8) Volante	Panel Switch	Rheostat	V8	5340	1986-89	<b>78405</b>
Vantage (V8) Volante	Panel Switch	2 position lever	V8	5340	1986-89	<b>31780</b>
Vantage (V8) Volante	Batt Master Switch		V8	5340	1986-89	<b>SSB106</b>

**AUDI**

100 (III) 1.8, Quattro	Fuelling Relay		PH	1781	10/85-07/87	<b>FDB509</b>
100 (III) 1.8, Quattro, Avant	Fuelling Relay		PH	1781	04/85-07/88	<b>FDB508</b>
100 (III) 2.2 Quattro, Turbo	Fuelling Relay		HX, KV, KU, RX	2226	10/84 -12/87	<b>FDB510</b>
100 Avant (II) 2.2 5S	Fuelling Relay		WC, WE	2144	08/81-82	<b>FDB510</b>
100 Avant (III) 2.0	Fuelling Relay		KP	1994	08/84-08/86	<b>FDB509</b>
100 Avant (III) 2.0	Fuelling Relay		KP, RT	1994	08/84-12/87	<b>FDB510</b>
100 Avant (III) 2.2 Cat, Turbo	Fuelling Relay		HX, KV	2226	08/86-12/87	<b>FDB510</b>
100 Avant (III) 2.2 Quattro, Turbo	Fuelling Relay		KU	2226	01/88-11/90	<b>FDB509</b>
100 Avant (III) 2.2, Turbo	Fuelling Relay		WC	2144	1983-07/84	<b>FDB510</b>
100 Avant (III) 2.3	Fuelling Relay		KZ	2309	1985-09/86	<b>FDB510</b>
200 (II) 2.2E	Fuelling Relay		KU	2226	01/85-07/85	<b>FDB510</b>
200 2.2 5E	Fuelling Relay		WC	2144	10/79-09/82	<b>FDB510</b>
200 2.2 5T Turbo	Fuelling Relay		WJ	2144	10/79-09/82	<b>FDB509</b>
80 (II) 1.6	Fuelling Relay	(55 kW, 63 kW)	YH	1588	09/78-09/80	<b>FDB510</b>
80 (II) 1.8 Quattro, GTE	Fuelling Relay		DZ	1781	08/85-08/86	<b>FDB511</b>
80 (II) 1.8, 1.8 E/SE/GTE	Fuelling Relay		JN	1781	05/84-05/86	<b>FDB509</b>
80 (II) 1.8, 1.8E, GTE	Fuelling Relay		JN	1781	1986	<b>FDB508</b>
80 (II) 2.0	Fuelling Relay		JL, JS, SK	1994	09/83-09/86	<b>FDB510</b>
80 (II) 2.2 5E	Fuelling Relay		WE	2144	08/81-08/83	<b>FDB510</b>
80 (III) 1.8, 1.8 E/S/SE 1.8 Quattro, Coupe, Cabriolet	Fuelling Relay		JN, DZ	1781	05/86-09/91	<b>FDB508</b>
80 1.6	Fuelling Relay		YK	1588	09/78-08/79	<b>FDB510</b>
90 (II) 2.0	Fuelling Relay		PS	1994	04/87-07/91	<b>FDB509</b>
90 (II) 2.2 Quattro	Fuelling Relay		KV	2226	04/87-09/91	<b>FDB509</b>
90 2.0	Fuelling Relay		JS, SK	1994	08/85-09/86	<b>FDB510</b>
90 2.0	Fuelling Relay		PS	1994	1987	<b>FDB509</b>
90 2.2 Quattro	Fuelling Relay		JT	2226	08/85-03/87	<b>FDB510</b>
90 2.2 Quattro	Fuelling Relay		KV	2226	1987	<b>FDB509</b>
Coupe (II) 2.2 Quattro	Fuelling Relay		KV	2226	11/88-07/91	<b>FDB509</b>
Coupe (II) 2.2E	Fuelling Relay		KV	2226	11/88-91	<b>FDB509</b>
Coupe 1.8 Quattro	Fuelling Relay		DZ	1781	03/85-07/85	<b>FDB510</b>
Coupe 2.0 GT 5E	Fuelling Relay		JS, SK	1994	10/85-07/86	<b>FDB509</b>
Coupe 2.2 GT	Fuelling Relay		KX	2226	08/87-04/88	<b>FDB510</b>
Coupe 2.2 Quattro	Fuelling Relay		JT, KV	2226	12/84-12/87	<b>FDB510</b>



Description      Function      Engine Info      cc      OE      Part No.

**AUSTIN >> Rover**

**AUSTIN-HEALEY >> Rover**

**AVELING BARFORD**

400 Super Grader	Panel Switch	Push			1977 >>	<b>SPB160</b>
400 Super Grader	Ignition Switch	Heater-Start			1980 >>	<b>35703</b>
500, 600 Super Grader	Panel Switch	Push		11094	1977-79	<b>SPB160</b>
500, 600 Super Grader	Solenoid 2ST			11094	1977-79	<b>SRB321</b>
700 Super Grader	Panel Switch	Push			1977-79	<b>SPB160</b>
700 Super Grader	Ignition Switch	Heater-Start			1980 >>	<b>35703</b>
ASG 013 Grader	Ignition Switch				1977 >>	<b>30608</b>
ASG 013 Grader	Ignition Switch	Heater-Start			1977 >>	<b>35703</b>
ASG 018 Grader	Ignition Switch		GM 6V71		1977 >>	<b>30608</b>
ASG 018 Grader	Ignition Switch	Heater-Start	GM 6V71		1977 >>	<b>35703</b>
Beaver 25 Cwt Dumper	Solenoid 4ST				1970-76	<b>SRB351</b>
Bison Mk I Dumper	Solenoid 4ST				1970-76	<b>SRB351</b>
Centaur 35, 40, 50	Panel Switch	Push (35, 40)	GM 12V71N		1977-79	<b>SPB160</b>
Centaur 35, 40, 50	Panel Switch	Push (50)	GM 16V71N		1977-79	<b>SPB160</b>
Centaur 35, 40, 50	Solenoid 4ST				1977-79	<b>SRB351</b>
FK Range	Solenoid 4ST		Ford 2704E	5948	1973-76	<b>SRB351</b>
FK Range	Solenoid 4ST		Ford 2714E, 2715E	6220	1973-76	<b>SRB351</b>
FK Range	Solenoid 4ST		Leyland 400		1973-76	<b>SRB351</b>
FK Range	Solenoid 4ST		Perkins 6.354	5800	1973-76	<b>SRB351</b>
FL1 Range Loader	Solenoid 4ST		Leyland 680	11094	1973-76	<b>SRB351</b>
FL1 Range Loader	Solenoid 4ST		Rolls-Royce C6NFR		1973-76	<b>SRB351</b>
GA3 Road Roller	Solenoid 2ST				1969-76	<b>SRB319</b>
GAX Road Roller	Ignition Switch	Heater-Start			1977-80	<b>35703</b>
GAX Road Roller	Panel Switch	Pull/Push			1977-80	<b>SPB104</b>
GAX Road Roller	Panel Switch	Push			1977-80	<b>SPB160</b>
GAY Road Roller	Ignition Switch	Heater-Start			1977-80	<b>35703</b>
GAY Road Roller	Panel Switch	Pull/Push			1977-80	<b>SPB104</b>
GAY Road Roller	Panel Switch	Push			1977-80	<b>SPB160</b>
GR Road Roller	Solenoid 2ST			2500	1969-76	<b>SRB319</b>
GRT, GRY Road Roller	Ignition Switch	Heater-Start		2500	1977-80	<b>35703</b>
GRT, GRY Road Roller	Panel Switch	Pull/Push		2500	1977-80	<b>SPB104</b>
GRT, GRY Road Roller	Panel Switch	Push		2500	1977-80	<b>SPB160</b>
MG Grader	Ignition Switch			6540	1977-79	<b>30608</b>
MG Grader	Ignition Switch	Heater-Start		6540	1977-79	<b>35703</b>
MG Grader	Solenoid 2ST			6540	1977-79	<b>SRB321</b>
MG4 Grader	Ignition Switch				1977-79	<b>30608</b>
MG4 Grader	Ignition Switch	Heater-Start			1977-79	<b>35703</b>
PM20 Road Roller	Ignition Switch	Heater-Start			1977-78	<b>35703</b>
PM20 Road Roller	Panel Switch	Push			1977-78	<b>SPB160</b>
PM20 Road Roller	Solenoid 4ST				1977-78	<b>SRB351</b>
PR15 Road Roller	Solenoid 4ST		Ford 2711E	4150	1977-78	<b>SRB351</b>
PR15 Road Roller	Solenoid 4ST		Perkins 4.236	3860	1977-78	<b>SRB351</b>
RD 17 Rigid Dump Truck	Ignition Switch			11094	1977 >>	<b>30608</b>
RD 17 Rigid Dump Truck	Panel Switch	Push		11094	1977 >>	<b>SPB160</b>
RD 25, 30 Rigid Dump Truck	Panel Switch	Push			1980 >>	<b>SPB160</b>
RD 35, 40 Rigid Dump Truck	Panel Switch	Push			1980 >>	<b>SPB160</b>
RD 50 Rigid Dump Truck	Panel Switch	Push			1980 >>	<b>SPB160</b>
SL 2 Dump Truck	Solenoid 2ST			9783	1969	<b>SRB321</b>
SL 3 Dump Truck	Solenoid 4ST			11094	1971-76	<b>SRB351</b>
SL 340 Dump Truck	Ignition Switch			11094	1977 >>	<b>30608</b>
SL 340 Dump Truck	Panel Switch	Push		11094	1977 >>	<b>SPB160</b>
SN Dump Truck	Solenoid 2ST				1969	<b>SRB321</b>
SR1 Dump Truck	Solenoid 2ST		Leyland 400, 401		1969	<b>SRB321</b>
SR1 Dump Truck	Solenoid 2ST		Rolls-Royce C4NFR		1969	<b>SRB321</b>
SR2 Dump Truck	Solenoid 2ST		Leyland 400, 401		1969	<b>SRB321</b>
SR2 Dump Truck	Solenoid 2ST		Rolls-Royce C4NFR		1969	<b>SRB321</b>
SR2 Dump Truck	Solenoid 4ST				1970-76	<b>SRB351</b>
SW3 Dump Truck	Solenoid 4ST				1970-76	<b>SRB351</b>
SY4, SY5, SY6, SY7 Badger Dump Truck	Solenoid 4ST		Ford 2711E, 2712E, 2713E		1970-76	<b>SRB351</b>
SY4, SY5, SY6, SY7 Badger Dump Truck	Solenoid 4ST		Perkins 4.236	3860	1970-76	<b>SRB351</b>
TG 011 Grader	Ignition Switch		Leyland 401, 466		1977 >>	<b>30608</b>
TG 011 Grader	Ignition Switch	Heater-Start	Leyland 401, 466		1977 >>	<b>35703</b>
TR Road Roller	Panel Switch	Pull/Push			1965-79	<b>SPB104</b>
TR Road Roller	Panel Switch	Push			1965-79	<b>SPB160</b>
TS 200 Tractor Loading Shovel	Ignition Switch				1977 >>	<b>30608</b>





Description

Function

Engine Info

cc

OE

Part No.

## → AVELING BARFORD

TS 200 Tractor Loading Shovel	Panel Switch	Pull/Push			1977 >>	<b>SPB104</b>
TS 200 Tractor Loading Shovel	Panel Switch	Push			1977 >>	<b>SPB160</b>
TS 200 Tractor Loading Shovel	Solenoid 4ST		Ford 2715E	6220	1977-78	<b>SRB351</b>
TS 200 Tractor Loading Shovel	Solenoid 4ST		Perkins 6.354	5800	1977-78	<b>SRB351</b>
TS 230 Tractor Loading Shovel	Ignition Switch				1977 >>	<b>30608</b>
TS 230 Tractor Loading Shovel	Panel Switch	Pull/Push			1977 >>	<b>SPB104</b>
TS 230 Tractor Loading Shovel	Panel Switch	Push			1977 >>	<b>SPB160</b>
TS 230 Tractor Loading Shovel	Solenoid 4ST				1977-78	<b>SRB351</b>
TS 350 Tractor Loading Shovel	Ignition Switch			11094	1977 >>	<b>30608</b>
TS 350 Tractor Loading Shovel	Panel Switch	Pull/Push		11094	1977 >>	<b>SPB104</b>
TS 350 Tractor Loading Shovel	Panel Switch	Push		11094	1977 >>	<b>SPB160</b>
TS 350 Tractor Loading Shovel	Solenoid 4ST			11094	1977-78	<b>SRB351</b>
TS 350P, 500P Tractor Loading Shovel	Ignition Switch				1977 >>	<b>30608</b>
TS 350P, 500P Tractor Loading Shovel	Panel Switch	Pull/Push			1977 >>	<b>SPB104</b>
TS 350P, 500P Tractor Loading Shovel	Panel Switch	Push			1977 >>	<b>SPB160</b>
TS 350P, 500P Tractor Loading Shovel	Solenoid 4ST				1977-78	<b>SRB351</b>
VP Vibratory Road Roller	Solenoid 2ST		Ford 2704C, E, 2714E		1969	<b>SRB319</b>
VR3 Vibratory Road Roller	Solenoid 2ST		Ford 2704C, E, 2714E		1969	<b>SRB319</b>
VR3 Vibratory Road Roller	Solenoid 2ST		Lister-Petter, Ruston 2YWA		1969	<b>SRB319</b>
VS Road Roller	Solenoid 2ST		Ford 2704C, E, 2714E		1969	<b>SRB319</b>
VS Road Roller	Solenoid 2ST		Perkins	5800	1969	<b>SRB319</b>
WXL 012, 017 Wheeled Loader	Ignition Switch	Heater-Start			1979 >>	<b>35703</b>
WXL 012, 017 Wheeled Loader	Panel Switch	Pull/Push			1979 >>	<b>SPB104</b>
WXL 012, 017 Wheeled Loader	Panel Switch	Push			1979 >>	<b>SPB160</b>
WXL 024 Wheeled Loader	Ignition Switch	Heater-Start			1979 >>	<b>35703</b>
WXL 024 Wheeled Loader	Panel Switch	Pull/Push			1979 >>	<b>SPB104</b>
WXL 024 Wheeled Loader	Panel Switch	Push			1979 >>	<b>SPB160</b>

**BEDFORD**

CF220	Panel Switch	Hazard Warning			1970-79	<b>30386</b>
CF220	Column Switch	DI, Horn, Lighting			1974-79	<b>SQB218</b>
CF220 Petrol	Solenoid 4ST			1800	1969-81	<b>SRB335</b>
CF230	Panel Switch	Hazard Warning			1979-84	<b>30386</b>
CF230	Column Switch	DI, Horn, Lighting			1979-81	<b>SQB218</b>
CF230 Diesel	Solenoid 4ST			2300	1980-81	<b>SRB325</b>
CF230 Petrol	Solenoid 4ST			1800	1969-81	<b>SRB335</b>
CF250	Panel Switch	Hazard Warning			1970-81	<b>30386</b>
CF250	Column Switch	DI, Horn, Lighting			1974-81	<b>SQB218</b>
CF250 Diesel	Solenoid 4ST			2300	1980-81	<b>SRB325</b>
CF250 Petrol	Solenoid 4ST			2300	1969-81	<b>SRB335</b>
CF280 Diesel	Solenoid 4ST			2300	1980-81	<b>SRB325</b>
CF280 Petrol	Solenoid 4ST			2300	1969-81	<b>SRB335</b>
CF340	Panel Switch	Hazard Warning			1970-79	<b>30386</b>
CF340	Column Switch	DI, Horn, Lighting			1976-79	<b>SQB218</b>
CF340 Petrol	Solenoid 4ST			2300	1969-81	<b>SRB335</b>
CF350	Panel Switch	Hazard Warning			1979-81	<b>30386</b>
CF350	Column Switch	DI, Horn, Lighting			1979-81	<b>SQB218</b>
CF350 Diesel	Solenoid 4ST			2300	1980-81	<b>SRB325</b>
CF350 Petrol	Solenoid 4ST			2300	1969-81	<b>SRB335</b>
Chevanne	Solenoid 4ST			1256	1976-79	<b>SRB335</b>
HA Van 6 Cwt	Solenoid 4ST			1159, 1256	1974-83	<b>SRB325</b>
M1120 Special Appliance 4x4	Panel Switch	Hazard Warning			1975-87	<b>35476</b>
M1120 Special Appliance 4x4	Solenoid 4ST				1971-87	<b>SRB335</b>
M1120 Special Appliance 4x4	Column Switch	Wipe/Wash			1975-87	<b>SQB222</b>
M1120 Special Appliance 4x4	Column Switch	DI, Horn, Lighting			1975-87	<b>SQB223</b>
SB, SP Coach (214), (300)	Panel Switch	2 position lever			1969-84	<b>SPB200</b>
SB, SP Coach (214), (300)	Panel Switch	Hazard Warning			1973-75	<b>30386</b>
SB, SP Coach (214), (300)	Column Switch	Wipe/Wash			1973-84	<b>SQB222</b>
SB, SP Coach (214), (300)	Panel Switch	Hazard Warning			1975-84	<b>35476</b>
SB, SP Coach (214), (300)	Panel Switch	3 position lever			1975-84	<b>35940</b>
SB, SP Coach (214), (300)	Column Switch	DI, Horn, Lighting			1975-84	<b>SQB223</b>
TJ 214, 220, 300, 330	Panel Switch	2 position lever			1969-87	<b>SPB200</b>
TJ 214, 220, 300, 330	Solenoid 4ST				1972-87	<b>SRB325</b>
TJ 214, 220, 300, 330	Solenoid 2ST				1974	<b>SRB319</b>
TJ 214, 220, 300, 330	Panel Switch	Push			1974-87	<b>SPB106</b>
TJ 214, 220, 300, 330	Panel Switch	Hazard Warning			1975-87	<b>35476</b>
TJ 214, 220, 300, 330	Column Switch	Wipe/Wash			1976-87	<b>SQB222</b>
TJ 214, 220, 300, 330	Column Switch	DI, Horn, Lighting			1976-87	<b>SQB223</b>
TJ 214, 220, 300, 330	Panel Switch	Hazard Warning			1977-87	<b>30386</b>

→





Description
Function
Engine Info
cc
OE
Part No.

→ BEDFORD					
Part No.	Description	Function	Engine Info	cc	Part No.
TK 1000 (KE) 330	Panel Switch	2 position lever			1969-86 <b>34775</b>
TK 1000 (KE) 330	Panel Switch	Hazard Warning			1973-86 <b>35476</b>
TK 1000 (KE) 330	Solenoid 4ST				1976-86 <b>SRB325</b>
TK 1000 (KE) 330	Panel Switch	2 position lever			1969-86 <b>SPB200</b>
TK 1000 (KE) 330	Panel Switch	Hazard Warning			1972-86 <b>30386</b>
TK 1000 (KE) 330	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 1000 (KE) 330	Column Switch	Wipe/Wash			1973-86 <b>SQB222</b>
TK 1000 (KE) 330	Column Switch	DI, Horn, Lighting			1973-86 <b>SQB223</b>
TK 1260 (KG) 300, 330	Panel Switch	2 position lever			1969-81 <b>SPB200</b>
TK 1260 (KG) 300, 330	Panel Switch	Hazard Warning			1972-86 <b>30386</b>
TK 1260 (KG) 300, 330	Panel Switch	Hazard Warning			1973-86 <b>35476</b>
TK 1260 (KG) 300, 330	Column Switch	Wipe/Wash			1973-86 <b>SQB222</b>
TK 1260 (KG) 300, 330	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 1260 (KG) 300, 330	Column Switch	DI, Horn, Lighting			1975-86 <b>SQB223</b>
TK 1260 (KG) 300, 330	Solenoid 4ST				1976-86 <b>SRB325</b>
TK 1260 (KG) 330	Panel Switch	2 position lever			1969-86 <b>34775</b>
TK 1260 (KG) 500	Panel Switch	2 position lever			1975-86 <b>34775</b>
TK 1260 (KG) 500	Panel Switch	Hazard Warning			1975-86 <b>35476</b>
TK 1260 (KG) 500	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 1260 (KG) 500	Panel Switch	2 position lever			1975-86 <b>SPB200</b>
TK 1260 (KG) 500	Column Switch	Wipe/Wash			1975-86 <b>SQB222</b>
TK 1260 (KG) 500	Column Switch	DI, Horn, Lighting			1975-86 <b>SQB223</b>
TK 1260 (KG) 500	Solenoid 4ST				1976-86 <b>SRB325</b>
TK 1260 (KG) 500	Panel Switch	Hazard Warning			1975-81 <b>30386</b>
TK 1470 (KH) 500	Panel Switch	2 position lever			1975-86 <b>34775</b>
TK 1470 (KH) 500	Panel Switch	Hazard Warning			1976-86 <b>35476</b>
TK 1470 (KH) 500	Panel Switch	3 position lever			1976-86 <b>35940</b>
TK 1470 (KH) 500	Panel Switch	2 position lever			1976-86 <b>SPB200</b>
TK 1470 (KH) 500	Column Switch	Wipe/Wash			1976-86 <b>SQB222</b>
TK 1470 (KH) 500	Column Switch	DI, Horn, Lighting			1976-86 <b>SQB223</b>
TK 1470 (KH) 500	Panel Switch	Hazard Warning			1976-86 <b>30386</b>
TK 1630 (KFA) 330	Panel Switch	2 position lever			1969-86 <b>34775</b>
TK 1630 (KFA) 330	Panel Switch	2 position lever			1969-86 <b>SPB200</b>
TK 1630 (KFA) 330	Panel Switch	Hazard Warning			1972-86 <b>30386</b>
TK 1630 (KFA) 330	Panel Switch	Hazard Warning			1973-86 <b>35476</b>
TK 1630 (KFA) 330	Column Switch	Wipe/Wash			1973-86 <b>SQB222</b>
TK 1630 (KFA) 330	Column Switch	DI, Horn, Lighting			1973-86 <b>SQB223</b>
TK 1630 (KFA) 330	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 1630 (KFA) 330	Solenoid 4ST				1976-86 <b>SRB325</b>
TK 1630 (KM), 1930 (KGA) 500	Panel Switch	Hazard Warning			1975-86 <b>30386</b>
TK 1630 (KM), 1930 (KGA) 500	Panel Switch	2 position lever			1975-86 <b>34775</b>
TK 1630 (KM), 1930 (KGA) 500	Panel Switch	Hazard Warning			1975-86 <b>35476</b>
TK 1630 (KM), 1930 (KGA) 500	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 1630 (KM), 1930 (KGA) 500	Panel Switch	2 position lever			1975-86 <b>SPB200</b>
TK 1630 (KM), 1930 (KGA) 500	Column Switch	Wipe/Wash			1975-86 <b>SQB222</b>
TK 1630 (KM), 1930 (KGA) 500	Column Switch	DI, Horn, Lighting			1975-86 <b>SQB223</b>
TK 570 (KB) 214, 220	Panel Switch	2 position lever			1969-86 <b>34775</b>
TK 570 (KB) 214, 220	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 570 (KB, KC) 214, 220	Panel Switch	2 position lever			1969-86 <b>SPB200</b>
TK 570 (KB, KC) 214, 220	Panel Switch	Hazard Warning			1972-86 <b>30386</b>
TK 570 (KB, KC) 214, 220	Panel Switch	Hazard Warning			1973-86 <b>35476</b>
TK 570 (KB, KC) 214, 220	Column Switch	Wipe/Wash			1973-86 <b>SQB222</b>
TK 570 (KB, KC) 214, 220	Solenoid 4ST				1976-86 <b>SRB325</b>
TK 570 (KB, KC) 214, 220	Column Switch	DI, Horn, Lighting			1973-86 <b>SQB223</b>
TK 570 (KC) 214, 220	Panel Switch	2 position lever			1969-86 <b>34775</b>
TK 570 (KC) 214, 220	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 750 (KC) 214, 220	Panel Switch	2 position lever			1969-86 <b>34775</b>
TK 750 (KC) 214, 220	Panel Switch	2 position lever			1969-86 <b>SPB200</b>
TK 750 (KC) 214, 220	Panel Switch	Hazard Warning			1972-86 <b>30386</b>
TK 750 (KC) 214, 220	Panel Switch	Hazard Warning			1973-86 <b>35476</b>
TK 750 (KC) 214, 220	Column Switch	Wipe/Wash			1973-86 <b>SQB222</b>
TK 750 (KC) 214, 220	Column Switch	DI, Horn, Lighting			1973-86 <b>SQB223</b>
TK 750 (KC) 214, 220	Panel Switch	3 position lever			1975-86 <b>35940</b>
TK 750 (KC) 214, 220	Solenoid 4ST				1976-86 <b>SRB325</b>
TK 860 (KD) 330	Panel Switch	Hazard Warning			1972-86 <b>30386</b>
TK 860 (KD) 330	Column Switch	DI, Horn, Lighting			1973-86 <b>SQB223</b>
TK 860 (KD) 330	Panel Switch	2 position lever			1969-82 <b>SPB200</b>
TK 860 (KD) 330	Panel Switch	2 position lever			1969-86 <b>34775</b>
TK 860 (KD) 330	Panel Switch	Hazard Warning			1973-86 <b>35476</b>





Description

Function

Engine Info

cc

OE

Part No.

→ BEDFORD

TK 860 (KD) 330	Column Switch	Wipe/Wash	1973-86	<b>SQB222</b>
TK 860 (KD) 330	Solenoid 4ST		1976-86	<b>SRB325</b>
TK 860 (KD) 330	Panel Switch	3 position lever	1975-86	<b>35940</b>
TL 1000, 1020, 1260 330	Panel Switch	Fog	1980-82	<b>30669</b>
TL 1000, 1020, 1260 330	Panel Switch	Hazard Warning	1980-82	<b>35476</b>
TL 1000, 1020, 1260 330	Column Switch	Wipe/Wash	1980-82	<b>SQB222</b>
TL 1000, 1020, 1260 330	Column Switch	DI, Horn, Lighting	1980-82	<b>SQB223</b>
TL 1260, 1470, 1630, 1930 500	Panel Switch	Fog	1980-82	<b>30669</b>
TL 1260, 1470, 1630, 1930 500	Panel Switch	Hazard Warning	1980-82	<b>35476</b>
TL 1260, 1470, 1630, 1930 500	Column Switch	Wipe/Wash	1980-82	<b>SQB222</b>
TL 1260, 1470, 1630, 1930 500	Column Switch	DI, Horn, Lighting	1980-82	<b>SQB223</b>
TL 1630 330	Column Switch	DI, Horn, Lighting	1982-86	<b>SQB223</b>
TL 1630 330 Turbo (107 bhp)	Panel Switch	Fog	1982-86	<b>30669</b>
TL 1630 330 Turbo (107 bhp)	Panel Switch	Hazard Warning	1982-86	<b>35476</b>
TL 1630 330 Turbo (107 bhp)	Column Switch	Wipe/Wash	1982-86	<b>SQB222</b>
TL 570/750 214	Panel Switch	Fog	1980-86	<b>30669</b>
TL 570/750 214	Panel Switch	Hazard Warning	1980-86	<b>35476</b>
TL 570/750 214	Column Switch	Wipe/Wash	1980-86	<b>SQB222</b>
TL 570/750 214	Column Switch	DI, Horn, Lighting	1980-86	<b>SQB223</b>
TL 570/750 220	Panel Switch	Fog	1980-82	<b>30669</b>
TL 570/750 220	Panel Switch	Hazard Warning	1980-82	<b>35476</b>
TL 570/750 220	Column Switch	Wipe/Wash	1980-82	<b>SQB222</b>
TL 570/750 220	Column Switch	DI, Horn, Lighting	1980-82	<b>SQB223</b>
TL 860 330	Panel Switch	Fog	1980-82	<b>30669</b>
TL 860 330	Panel Switch	Hazard Warning	1980-82	<b>35476</b>
TL 860 330	Column Switch	Wipe/Wash	1980-82	<b>SQB222</b>
TL 860 330	Column Switch	DI, Horn, Lighting	1980-82	<b>SQB223</b>
TM 1700 (EMV)	Panel Switch	Fog	1974-87	<b>30669</b>
TM 1700 (EMV)	Panel Switch	Hazard Warning	1974-87	<b>35476</b>
TM 1700 (EMV)	Column Switch	Wipe/Wash	1974-87	<b>SQB222</b>
TM 1700 (EMV)	Column Switch	DI, Horn, Lighting	1974-87	<b>SQB223</b>
TM 2250 (KMX2)	Panel Switch	Fog	1975-81	<b>30669</b>
TM 2250 (KMX2)	Panel Switch	Hazard Warning	1975-81	<b>35476</b>
TM 2250 (KMX2)	Column Switch	Wipe/Wash	1975-81	<b>SQB222</b>
TM 2250 (KMX2)	Column Switch	DI, Horn, Lighting	1975-81	<b>SQB223</b>
TM 2600 (KMX)	Panel Switch	Fog	1975-87	<b>30669</b>
TM 2600 (KMX)	Panel Switch	Hazard Warning	1975-87	<b>35476</b>
TM 2600 (KMX)	Column Switch	Wipe/Wash	1975-87	<b>SQB222</b>
TM 2600 (KMX)	Column Switch	DI, Horn, Lighting	1975-87	<b>SQB223</b>
TM 3250 (ENV8, EWW8)	Panel Switch	Fog	1975-86	<b>30669</b>
TM 3250 (ENV8, EWW8)	Panel Switch	Hazard Warning	1975-86	<b>35476</b>
TM 3250 (ENV8, EWW8)	Column Switch	Wipe/Wash	1975-86	<b>SQB222</b>
TM 3250 (ENV8, EWW8)	Column Switch	DI, Horn, Lighting	1975-86	<b>SQB223</b>
VAL Coach (466)	Panel Switch	2 position lever	1969-75	<b>SPB200</b>
VAL Coach (500)	Panel Switch	Hazard Warning	1977-81	<b>35476</b>
VAL Coach (500)	Column Switch	Wipe/Wash	1977-81	<b>SQB222</b>
VAL Coach (500)	Column Switch	DI, Horn, Lighting	1977-81	<b>SQB223</b>
VAM Coach (300)	Column Switch	DI, Horn, Lighting	1975-87	<b>SQB223</b>
VAM Coach (300, 466, 500)	Panel Switch	Hazard Warning	1975-87	<b>35476</b>
VAM Coach (300, 466, 500)	Column Switch	Wipe/Wash	1975-87	<b>SQB222</b>
VAM Coach (466)	Column Switch	DI, Horn, Lighting	1975	<b>SQB223</b>
VAM Coach (500)	Column Switch	DI, Horn, Lighting	1976-87	<b>SQB223</b>
VAS Coach (214, 300, 330)	Panel Switch	Hazard Warning	1973-76	<b>30386</b>
VAS Coach (214, 300, 330)	Panel Switch	Hazard Warning	1975-87	<b>35476</b>
VAS Coach (214, 300, 330)	Column Switch	Wipe/Wash	1975-87	<b>SQB222</b>
VAS Coach (214, 300, 330)	Column Switch	DI, Horn, Lighting	1975-87	<b>SQB223</b>
YMT, YRQ, YRT	Panel Switch	Hazard Warning	1975 >>	<b>35476</b>
YMT, YRQ, YRT	Panel Switch	2 position lever	1975 >>	<b>SPB200</b>
YMT, YRQ, YRT	Column Switch	Wipe/Wash	1975 >>	<b>SQB222</b>
YMT, YRQ, YRT	Column Switch	DI, Horn, Lighting	1975 >>	<b>SQB223</b>

## BENTLEY >> Rolls-Royce

### BRAY

530 Loader	Panel Switch	Progressive push-pull	1969-73	<b>31120</b>
531 Loader	Panel Switch	Pull/Push	1969-73	<b>SPB104</b>
532 Loader	Panel Switch	Push	1969-73	<b>SPB105</b>
534 Loader	Panel Switch	Progressive push-pull	1969-71	<b>31120</b>
534 Loader	Panel Switch	Pull/Push	1969-71	<b>SPB104</b>

→



Description
Function
Engine Info
cc
OE
Part No.

→ BRAY

534 Loader	Panel Switch	Push		1969-71	<b>SPB105</b>
540 Loader	Panel Switch	Progressive push-pull		1969-77	<b>31120</b>
540 Loader	Panel Switch	Pull/Push		1969-77	<b>SPB104</b>
540 Loader	Panel Switch	Push		1969-77	<b>SPB105</b>
544 Loader	Panel Switch	Progressive push-pull		1972-75	<b>31120</b>
544 Loader	Panel Switch	Pull/Push		1972-75	<b>SPB104</b>
544 Loader	Panel Switch	Push		1972-75	<b>SPB105</b>
560 Loader	Panel Switch	Horn/Dip		1969-71	<b>SPB140</b>
562 Loader	Panel Switch	Horn/Dip		1970-77	<b>SPB140</b>
566 Loader	Panel Switch	Horn/Dip		1969-77	<b>SPB140</b>

## CARRARO >> New Holland

### CASE INTERNATIONAL

1190 Tractor	Panel Switch	Rotary Light Switch		1980-83	<b>33714</b>
1190 Tractor	Ignition Switch	Heater-Start, 4 position lever		1980-83	<b>35670</b>
1194 Tractor	Panel Switch	Rotary Light Switch		1984-85	<b>33714</b>
1194 Tractor	Ignition Switch	Heater-Start, 4 position lever		1984-85	<b>35670</b>
1200 Tractor, (Selectomatic)	Solenoid 4ST			1969-71	<b>SRB341</b>
1210, 1212 Tractor	Ignition Switch	Heater-Start, 3 position lever		1972-81	<b>33940</b>
1210, 1212 Tractor	Panel Switch	Lighting		1972-81	<b>34952</b>
1210, 1212 Tractor	Ignition Switch	Heater-Start, 4 position lever		1972-81	<b>35670</b>
1210, 1212 Tractor	Panel Switch	Push		1972-81	<b>SPB106</b>
1210, 1212 Tractor	Panel Switch	Lighting		1978-81	<b>30875</b>
1210, 1212 Tractor	Panel Switch	Lighting		1978-81	<b>30876</b>
1210, 1212 Tractor	Panel Switch	Fan		1978-81	<b>39745</b>
1290 Tractor 2WD	Ignition Switch	Heater-Start, 4 position lever		1980-83	<b>35670</b>
1290 Tractor 2WD/4WD	Panel Switch	Rotary Light Switch		1980-83	<b>33714</b>
1290 Tractor 4WD	Panel Switch	Rotary Light Switch		1980-83	<b>33714</b>
1290 Tractor 4WD	Ignition Switch	Heater-Start, 4 position lever		1980-83	<b>35670</b>
1294 Tractor 2WD	Panel Switch	Rotary Light Switch	3594	1984-85	<b>33714</b>
1294 Tractor 2WD	Ignition Switch	Heater-Start, 4 position lever	3594	1984-85	<b>35670</b>
1390 Tractor 2WD, 4WD	Panel Switch	Rotary Light Switch		1980-83	<b>33714</b>
1390 Tractor 2WD, 4WD	Ignition Switch	Heater-Start, 4 position lever		1980-83	<b>35670</b>
1394 Tractor 2WD	Panel Switch	Rotary Light Switch	3594	1984-88	<b>33714</b>
1394 Tractor 2WD	Ignition Switch	Heater-Start, 4 position lever	3594	1984-88	<b>35670</b>
1410, 1412 Tractor	Panel Switch	Lighting		1975-81	<b>34952</b>
1410, 1412 Tractor	Ignition Switch	Heater-Start, 4 position lever		1975-81	<b>35670</b>
1410, 1412 Tractor	Panel Switch	Push		1975-81	<b>SPB106</b>
1410, 1412 Tractor	Panel Switch	Lighting	(Pre-wired)	1978-81	<b>30754</b>
1410, 1412 Tractor	Panel Switch	Lighting		1978-81	<b>30875</b>
1410, 1412 Tractor	Panel Switch	Lighting		1978-81	<b>30876</b>
1410, 1412 Tractor	Panel Switch	Fan		1978-81	<b>39745</b>
1490 Tractor 2WD, 4WD	Panel Switch	Rotary Light Switch		1980-83	<b>33714</b>
1490 Tractor 2WD, 4WD	Ignition Switch	Heater-Start, 4 position lever		1980-83	<b>35670</b>
1494 Tractor 2WD	Panel Switch	Rotary Light Switch	3594	1984-87	<b>33714</b>
1494 Tractor 2WD	Ignition Switch	Heater-Start, 4 position lever	3594	1984-87	<b>35670</b>
1594 Tractor 2WD	Panel Switch	Rotary Light Switch	5392	1984-88	<b>33714</b>
1594 Tractor 2WD	Ignition Switch	Heater-Start, 4 position lever	5392	1984-88	<b>35670</b>
1690 Tractor 2WD, 4WD	Panel Switch	Rotary Light Switch		1980-83	<b>33714</b>
1690 Tractor 2WD, 4WD	Ignition Switch	Heater-Start, 4 position lever		1980-83	<b>35670</b>
1694 Tractor	Panel Switch	Rotary Light Switch	5392	1984-87	<b>33714</b>
1694 Tractor	Ignition Switch	Heater-Start, 4 position lever	5392	1984-87	<b>35670</b>
2276 Tractor (Skid-Steer)	Panel Switch	Push	BD144	1969-80	<b>SPB105</b>
2276 Tractor (Skid-Steer)	Solenoid 4ST			1971-80	<b>SRB325</b>
3434 Tractor (Skid-Steer)	Panel Switch	Push		1967-81	<b>SPB105</b>
3434 Tractor (Skid-Steer)	Ignition Switch	Heater-Start		1976-81	<b>33942</b>
354 Tractor	Solenoid 4ST			1973-82	<b>SRB325</b>
384 Tractor	Ignition Switch	Heater-Start		1977-82	<b>33942</b>
384 Tractor	Panel Switch	Push		1977-82	<b>SPB105</b>
384 Tractor	Panel Switch	Rotary Light Switch		1981-82	<b>33714</b>
384 Tractor	Ignition Switch	Heater Start, 3 position lever		1977-82	<b>33940</b>
3B 100 A Excavator	Solenoid 4ST			1975-76	<b>SRB325</b>
444 Tractor	Ignition Switch	Heater-Start		1963-82	<b>33942</b>
444 Tractor	Panel Switch	Push		1963-82	<b>SPB105</b>
444 Tractor	Solenoid 4ST			1973-82	<b>SRB325</b>
484 Tractor	Ignition Switch	Heater Start, 3 position lever		1977-82	<b>33940</b>
484 Tractor	Ignition Switch	Heater-Start		1977-82	<b>33942</b>
484 Tractor	Panel Switch	Push		1977-82	<b>SPB105</b>

→





Description

Function

Engine Info

cc

OE

Part No.

→ CASE INTERNATIONAL

484 Tractor	Panel Switch	Rotary Light Switch			1981 >>	<b>33714</b>
485L Tractor	Panel Switch	Rotary Light Switch		2934	1981 >>	<b>33714</b>
500 Payloader	Panel Switch	Push			1975-78	<b>SPB106</b>
500 Payloader	Solenoid 4ST				1975-78	<b>SRB325</b>
500 Payloader (LPG)	Panel Switch	Push			1975-78	<b>SPB106</b>
500 Payloader (LPG)	Solenoid 4ST				1975-78	<b>SRB325</b>
585L Tractor	Panel Switch	Rotary Light Switch		3382	1981-82	<b>33714</b>
585L Tractor	Ignition Switch	Heater Start, 3 position lever		3382	1981-82	<b>33940</b>
585L Tractor	Ignition Switch	Heater-Start		3382	1981-82	<b>33942</b>
585L Tractor	Panel Switch	Push		3382	1981-82	<b>SPB105</b>
634 Tractor	Solenoid 2ST				1969-70	<b>SRB319</b>
634 Tractor	Solenoid 4ST				1971-72	<b>SRB325</b>
684 Tractor	Ignition Switch	Heater Start, 3 position lever			1977-80	<b>33940</b>
684 Tractor	Ignition Switch	Heater-Start			1977-80	<b>33942</b>
684 Tractor	Panel Switch	Push			1977-80	<b>SPB105</b>
685L Tractor	Panel Switch	Rotary Light Switch		D239 3917	1981 >>	<b>33714</b>
770 Tractor (Selectomatic)	Solenoid 4ST				1969-71	<b>SRB341</b>
784 Tractor	Ignition Switch	Heater Start, 3 position lever			1977-80	<b>33940</b>
784 Tractor	Ignition Switch	Heater-Start			1977-80	<b>33942</b>
784 Tractor	Panel Switch	Push			1977-80	<b>SPB105</b>
785L Tractor	Panel Switch	Rotary Light Switch		D246 4037	1981-85	<b>33714</b>
880 Tractor (Selectomatic)	Solenoid 4ST				1969-71	<b>SRB341</b>
885G Tractor (Diesel)	Ignition Switch	Heater-Start, 3 position lever			1972-83	<b>33940</b>
885G Tractor (Diesel)	Panel Switch	Lighting			1972-83	<b>34952</b>
885G Tractor (Diesel)	Ignition Switch	Heater-Start, 4 position lever			1972-83	<b>35670</b>
885G Tractor (Diesel)	Panel Switch	Push			1972-83	<b>SPB106</b>
885G Tractor (Petrol)	Ignition Switch	Heater-Start, 3 position lever			1972-81	<b>33940</b>
885G Tractor (Petrol)	Panel Switch	Lighting			1972-81	<b>34952</b>
885G Tractor (Petrol)	Ignition Switch	Heater-Start, 4 position lever			1972-81	<b>35670</b>
885G Tractor (Petrol)	Panel Switch	Push			1972-81	<b>SPB106</b>
885L Tractor	Ignition Switch	Heater-Start, 4 position lever			1972-81	<b>35670</b>
885L Tractor	Panel Switch	Fan			1972-81	<b>39745</b>
885L Tractor	Panel Switch	Lighting			1972-83	<b>30875</b>
885L Tractor	Panel Switch	Lighting			1972-83	<b>30876</b>
885L Tractor	Ignition Switch	Heater-Start, 3 position lever			1972-83	<b>33940</b>
885L Tractor	Panel Switch	Push			1972-83	<b>SPB106</b>
885L Tractor	Panel Switch	Rotary Light Switch			1981-83	<b>33714</b>
885N Tractor (Diesel)	Ignition Switch	Heater-Start, 3 position lever			1972-83	<b>33940</b>
885N Tractor (Diesel)	Panel Switch	Lighting			1972-83	<b>34952</b>
885N Tractor (Diesel)	Ignition Switch	Heater-Start, 4 position lever			1972-83	<b>35670</b>
885N Tractor (Diesel)	Panel Switch	Push			1972-83	<b>SPB106</b>
885N Tractor (Petrol)	Ignition Switch	Heater-Start, 3 position lever			1972-81	<b>33940</b>
885N Tractor (Petrol)	Panel Switch	Lighting			1972-81	<b>34952</b>
885N Tractor (Petrol)	Ignition Switch	Heater-Start, 4 position lever			1972-81	<b>35670</b>
885N Tractor (Petrol)	Panel Switch	Push			1972-81	<b>SPB106</b>
990 Highway Tractor	Ignition Switch	Heater-Start, 3 position lever			1976-83	<b>33940</b>
990 Highway Tractor	Ignition Switch	Heater-Start, 4 position lever			1976-83	<b>35670</b>
990 Highway Tractor	Panel Switch	Lighting			1978-81	<b>30875</b>
990 Highway Tractor	Panel Switch	Lighting			1978-81	<b>30876</b>
990 Highway Tractor	Panel Switch	Fan			1978-81	<b>39745</b>
990 Highway Tractor (Selectomatic)	Panel Switch	Lighting			1978-81	<b>30875</b>
990 Highway Tractor (Selectomatic)	Panel Switch	Lighting			1978-81	<b>30876</b>
990 Highway Tractor (Selectomatic)	Panel Switch	Fan			1978-81	<b>39745</b>
990 Highway Tractor (Selectomatic)	Ignition Switch	Heater-Start, 3 position lever			1978-83	<b>33940</b>
990 Highway Tractor (Selectomatic)	Ignition Switch	Heater-Start, 4 position lever			1978-83	<b>35670</b>
990 Tractor	Ignition Switch	Heater-Start, 3 position lever			1964-72	<b>33940</b>
990 Tractor	Ignition Switch	Heater-Start, 4 position lever			1964-72	<b>35670</b>
990 Tractor	Panel Switch	Push			1964-72	<b>SPB106</b>
990 Tractor	Solenoid 4ST				1969-71	<b>SRB341</b>
990/1 Tractor	Ignition Switch	Heater-Start, 3 position lever			1972-81	<b>33940</b>
990/1 Tractor	Ignition Switch	Heater-Start, 4 position lever			1972-81	<b>35670</b>
990/1 Tractor	Panel Switch	Lighting			1978-81	<b>30875</b>
990/1 Tractor	Panel Switch	Lighting			1978-81	<b>30876</b>
990/1 Tractor	Panel Switch	Fan			1978-81	<b>39745</b>
995 Tractor	Ignition Switch	Heater-Start, 3 position lever			1964-81	<b>33940</b>
995 Tractor	Ignition Switch	Heater-Start, 4 position lever			1964-81	<b>35670</b>
995 Tractor	Solenoid 4ST				1969-71	<b>SRB341</b>
995 Tractor	Panel Switch	Lighting			1978-81	<b>30875</b>
995 Tractor	Panel Switch	Lighting			1978-81	<b>30876</b>

→



Description      Function      Engine Info      cc      OE      Part No.

→ CASE INTERNATIONAL

995 Tractor	Panel Switch	Fan			1978-81	<b>39745</b>
996 Tractor	Ignition Switch	Heater-Start, 3 position lever			1964-81	<b>33940</b>
996 Tractor	Ignition Switch	Heater-Start, 4 position lever			1964-81	<b>35670</b>
996 Tractor	Solenoid 4ST				1969-71	<b>SRB341</b>
996 Tractor	Panel Switch	Lighting			1978-81	<b>30875</b>
996 Tractor	Panel Switch	Lighting			1978-81	<b>30876</b>
996 Tractor	Panel Switch	Fan			1978-81	<b>39745</b>
B 125 A Excavator	Solenoid 2ST				1969-70	<b>SRB319</b>
B 125 A Excavator	Solenoid 4ST				1971-76	<b>SRB325</b>
B 125 A Excavator	Panel Switch	3 position lever	BD281		1975-76	<b>31788</b>
B 165 Excavator	Panel Switch	3 position lever			1977-82	<b>31788</b>
B 165 Excavator	Ignition Switch	Heater-Start, 3 position lever			1977-82	<b>33940</b>
BTD 6 Crawler Tractor	Solenoid 2ST			3860	1969-70	<b>SRB319</b>
BTD 6 Crawler Tractor	Solenoid 4ST			3860	1971-74	<b>SRB325</b>
BUD264, 281 Power Unit	Solenoid 2ST				1969-70	<b>SRB319</b>
BUD264, 281 Power Unit	Solenoid 4ST				1971-75	<b>SRB325</b>
H 25 B Payloader	Solenoid 4ST				1969-75	<b>SRB325</b>
H 30 B Payloader	Solenoid 4ST		BD281		1971-75	<b>SRB325</b>
H 50 B Payloader	Solenoid 2ST			5800	1969-70	<b>SRB319</b>
H 65 B Payloader	Solenoid 2ST			5800	1969-70	<b>SRB319</b>
H 65 B Payloader	Solenoid 4ST			5800	1971-73	<b>SRB325</b>
H 85 Tractor	Panel Switch	Rotary Light Switch	D246		1981-85	<b>33714</b>
TD 5 Crawler Tractor	Solenoid 2ST				1969-70	<b>SRB319</b>
TD 5 Crawler Tractor	Solenoid 4ST				1971-75	<b>SRB325</b>
TD 6, A Crawler Tractor	Solenoid 2ST				1969-70	<b>SRB319</b>
TD 6, A Crawler Tractor	Solenoid 4ST				1971-76	<b>SRB325</b>
TD 8 A Crawler Tractor	Solenoid 2ST			3917	1969-70	<b>SRB319</b>
TD 8 A Crawler Tractor	Solenoid 4ST			3917	1971-83	<b>SRB325</b>
TD 8 A Crawler Tractor	Panel Switch	3 position lever	D239	3917	1975-83	<b>31788</b>
TD 8 B Crawler Tractor	Solenoid 2ST			3917	1969-70	<b>SRB319</b>
TD 8 B Crawler Tractor	Solenoid 4ST			3917	1971-83	<b>SRB325</b>

**CITROËN**

CX 25 GTi	Fuelling Relay		M 25/659	2500	1983-89	<b>FDB505</b>
CX 25 GTi (Cat)	Fuelling Relay		M 25/668	2500	1986-89	<b>FDB505</b>
CX 25 GTi Turbo, 2	Fuelling Relay		M 25/662	2500	1984-89	<b>FDB505</b>
CX 25i, Estate/Break	Fuelling Relay		M 25/659	2500	1983-91	<b>FDB505</b>
XM (Facelift) 2.0i 16v	Fuelling Relay		XU10J4	1998	1994 >>	<b>FDB506</b>
XM 2.0i, Turbo	Fuelling Relay		XU10J2, XU10J2TE	1998	1989-94	<b>FDB506</b>

**CLAYSON >> New Holland**

**COLT >> Mitsubishi**

**CONVEYANCER**

E2, E2C, E3, E3C, E4, E5, E6, E7, E8	Ignition Switch				1973-78	<b>31287</b>
E2, E2C, E3, E3C, E4, E5, E6, E7, E8	Panel Switch	Push			1973-78	<b>SPB160</b>
RE2A, RE3A	Ignition Switch				1973-78	<b>31287</b>
RE2A, RE3A	Panel Switch	Push			1973-78	<b>SPB160</b>
TC4 Fork Lift	Panel Switch	3 position lever		3300	1973-83	<b>31788</b>
TC4 Fork Lift	Panel Switch	Push		3300	1973-83	<b>SPB160</b>
TC4 Fork Lift	Solenoid 4ST			3300	1973-83	<b>SRB325</b>
TC5 Fork Lift, TC6 Fork Lift	Panel Switch	3 position lever		3300	1973-83	<b>31788</b>
TC5 Fork Lift, TC6 Fork Lift	Panel Switch	Push		3300	1973-83	<b>SPB160</b>
TC5 Fork Lift, TC6 Fork Lift	Solenoid 4ST				1973-83	<b>SRB325</b>
TC7 Fork Lift	Panel Switch	3 position lever		3860	1973-83	<b>31788</b>
TC7 Fork Lift	Panel Switch	Push		3860	1973-83	<b>SPB160</b>
TC7 Fork Lift	Solenoid 4ST			3860	1973-83	<b>SRB325</b>

**DAIMLER >> Jaguar**

**DENNIS EAGLE**

Alley Cat Municipal	Panel Switch	3 position lever		3860	1976-80	<b>31788</b>
Alley Cat Municipal	Panel Switch	2 position lever		3860	1976-80	<b>SPB200</b>
Alley Cat Municipal	Column Switch	DI		3860	1976-80	<b>SQB994</b>
Bulkmaster 50, 70 Municipal	Panel Switch	3 position lever			1972-83	<b>31788</b>
Bulkmaster 50, 70 Municipal	Panel Switch	Push			1972-83	<b>SPB105</b>
Bulkmaster 50, 70 Municipal	Panel Switch	2 position lever			1972-83	<b>SPB200</b>

→



Description

Function

Engine Info

cc

OE

Part No.

## → DENNIS EAGLE

Bulkmaster 50, 70 Municipal	Panel Switch	2 position rocker		1979-83	<b>30593</b>
Bulkmaster 50, 70 Municipal	Panel Switch	Hazard Warning		1979-83	<b>35476</b>
Bulkmaster 50, 70 Municipal	Column Switch	Wipe/Wash		1979-83	<b>SQB222</b>
Bulkmaster 50, 70 Municipal	Column Switch	DI, Horn, Lighting		1979-83	<b>SQB223</b>
Bulkmaster 50, 70 Municipal	Column Switch	DI (Ford 2714E, Leyland 6.98, Perkins 5800)		1972-83	<b>SQB994</b>
Mini Bulkmaster Municipal	Panel Switch	3 position lever	5800	1972-79	<b>31788</b>
Mini Bulkmaster Municipal	Panel Switch	Push	5800	1972-79	<b>SPB105</b>
Mini Bulkmaster Municipal	Panel Switch	2 position lever	5800	1972-79	<b>SPB200</b>
Municipal Gully Emptier	Panel Switch	3 position lever		1972-79	<b>31788</b>
Municipal Gully Emptier	Panel Switch	Push		1972-79	<b>SPB105</b>
Municipal Gully Emptier	Panel Switch	2 position lever		1972-79	<b>SPB200</b>
Municipal Gully Emptier	Column Switch	DI		1972-79	<b>SQB994</b>
NT, NX, NY	Solenoid 2ST			1973-78	<b>SRB321</b>

**DENNIS SPECIALIST VEHICLES**

Delta 16	Panel Switch	2 position rocker	5800	1979 >>	<b>30593</b>
Delta 16	Panel Switch	Hazard Warning	5800	1979 >>	<b>35476</b>
Delta 16	Column Switch	Wipe/Wash	5800	1979 >>	<b>SQB222</b>
Delta 16	Column Switch	DI, Horn, Lighting	5800	1979 >>	<b>SQB223</b>
Delta II	Panel Switch	3 position lever	8830	1975-85	<b>31788</b>
Delta II	Panel Switch	2 position lever	8830	1975-85	<b>SPB200</b>
Delta II	Column Switch	DI	8830	1975-85	<b>SQB994</b>
Delta III	Panel Switch	3 position lever	8830	1975-85	<b>31788</b>
Delta III	Panel Switch	2 position lever	8830	1975-85	<b>SPB200</b>
Delta III	Column Switch	DI	8830	1975-85	<b>SQB994</b>
Dominant	Panel Switch	3 position lever		1972-79	<b>31788</b>
Dominant	Panel Switch	Push		1972-79	<b>SPB105</b>
Dominant	Panel Switch	2 position lever		1972-79	<b>SPB200</b>
Dominant	Column Switch	DI(Ford 2714E, Leyland 6.98, Perkins 6.354, 8.540)		1972-79	<b>SQB994</b>
Dominator Double Deck Bus	Panel Switch	2 position lever	10450	1978 >>	<b>31780</b>
Dominator Double Deck Bus	Panel Switch	3 position lever	10450	1978 >>	<b>31788</b>
Dominator Double Deck Bus	Panel Switch	Push	10450	1978 >>	<b>SPB105</b>
Dominator Double Deck Bus	Panel Switch	2 position lever	10450	1978 >>	<b>SPB200</b>
Dominator Double Deck Bus	Column Switch	DI	10450	1978 >>	<b>SQB994</b>
Domino PSV Chassis	Panel Switch	3 position lever	5800		<b>31788</b>
Domino PSV Chassis	Panel Switch	Push	5800		<b>SPB105</b>
Domino PSV Chassis	Panel Switch	2 position lever	5800		<b>SPB200</b>
Domino PSV Chassis	Column Switch	DI	5800		<b>SQB994</b>
Fire Engine: D Range	Panel Switch	3 position lever	4235	1972-76	<b>31788</b>
Fire Engine: D Range	Ignition Switch	Heater-Start, 3 position lever	4235	1972-76	<b>33940</b>
Fire Engine: D Range	Panel Switch	Push	4235	1972-76	<b>SPB105</b>
Fire Engine: D Range	Panel Switch	2 position lever	4235	1972-76	<b>SPB200</b>
Fire Engine: D Range	Column Switch	DI	4235	1972-76	<b>SQB994</b>
Fire Engine: D Range	Solenoid 4ST		4235	1972-76	<b>SRB351</b>
Fire Engine: F Range	Ignition Switch	Heater-Start, 3 position lever		1972 >>	<b>33940</b>
Fire Engine: F Range	Column Switch	DI		1972 >>	<b>SQB994</b>
Fire Engine: F Range	Panel Switch	3 position lever		1972-79	<b>31788</b>
Fire Engine: F Range	Panel Switch	Push		1972-79	<b>SPB105</b>
Fire Engine: F Range	Panel Switch	2 position lever		1972-79	<b>SPB200</b>
Fire Engine: F Range	Solenoid 4ST			1972-79	<b>SRB351</b>
Fire Engine: R Range	Panel Switch	3 position lever		1978-79	<b>31788</b>
Fire Engine: R Range	Ignition Switch	Heater-Start, 3 position lever		1978-79	<b>33940</b>
Fire Engine: R Range	Panel Switch	Push		1978-79	<b>SPB105</b>
Fire Engine: R Range	Panel Switch	2 position lever		1978-79	<b>SPB200</b>
Fire Engine: R Range	Column Switch	DI		1978-79	<b>SQB994</b>
Fire Engine: R Range	Solenoid 4ST			1978-79	<b>SRB351</b>
Fire Engine: RS Range	Panel Switch	2 position rocker		1979 >>	<b>30593</b>
Fire Engine: RS Range	Panel Switch	Hazard Warning		1979 >>	<b>35476</b>
Fire Engine: RS Range	Column Switch	Wipe/Wash		1979 >>	<b>SQB222</b>
Fire Engine: RS Range	Column Switch	DI, Horn, Lighting		1979 >>	<b>SQB223</b>
Jubilant PSV Chassis	Panel Switch	2 position lever	10450	1978 >>	<b>31780</b>
Jubilant PSV Chassis	Column Switch	DI	10450	1978 >>	<b>SQB994</b>

**ERF**

84 PF, PFS, PS Fire Appliance	Panel Switch	2 position lever		1969-79	<b>31780</b>
84 PF, PFS, PS Fire Appliance	Panel Switch	3 position lever		1969-79	<b>31788</b>
84 PF, PFS, PS Fire Appliance	Panel Switch	Push		1969-79	<b>SPB160</b>
84 PF, PFS, PS Fire Appliance	Column Switch	Wipe/Wash		1969-79	<b>SQB222</b>
84 PF, PFS, PS Fire Appliance	Panel Switch	Wiper		1972-79	<b>39710</b>

→





Description
Function
Engine Info
cc
OE
Part No.

→ ERF						
	Description	Function	Engine Info	cc	OE	Part No.
	84 PF, PFS, PS Fire Appliance	Ignition Switch	Heater-Start		1973-79	<b>39413</b>
	84 PF, PFS, PS Fire Appliance	Panel Switch	Hazard Warning		1974-79	<b>35476</b>
	84 PF, PFS, PS Fire Appliance	Column Switch	DI, Horn, Lighting		1974-79	<b>SQB223</b>
	84 RFS, RS Fire Appliance	Panel Switch	2 position lever		1969-79	<b>31780</b>
	84 RFS, RS Fire Appliance	Panel Switch	3 position lever		1969-79	<b>31788</b>
	84 RFS, RS Fire Appliance	Panel Switch	Push		1969-79	<b>SPB160</b>
	84 RFS, RS Fire Appliance	Column Switch	Wipe/Wash		1969-79	<b>SQB222</b>
	84 RFS, RS Fire Appliance	Panel Switch	Wiper		1972-79	<b>39710</b>
	84 RFS, RS Fire Appliance	Ignition Switch	Heater-Start		1973-79	<b>39413</b>
	84 RFS, RS Fire Appliance	Panel Switch	Hazard Warning		1974-79	<b>35476</b>
	84 RFS, RS Fire Appliance	Column Switch	DI, Horn, Lighting		1974-79	<b>SQB223</b>
	86 PS, RS Fire Appliance	Panel Switch	2 position lever		1969-79	<b>31780</b>
	86 PS, RS Fire Appliance	Panel Switch	3 position lever		1969-79	<b>31788</b>
	86 PS, RS Fire Appliance	Panel Switch	Push		1969-79	<b>SPB160</b>
	86 PS, RS Fire Appliance	Column Switch	Wipe/Wash		1969-79	<b>SQB222</b>
	86 PS, RS Fire Appliance	Panel Switch	Wiper		1972-79	<b>39710</b>
	86 PS, RS Fire Appliance	Ignition Switch	Heater-Start		1973-79	<b>39413</b>
	86 PS, RS Fire Appliance	Panel Switch	Hazard Warning		1974-79	<b>35476</b>
	86 PS, RS Fire Appliance	Column Switch	DI, Horn, Lighting		1974-79	<b>SQB223</b>
	B34 G2 4x2	Panel Switch	Hazard Warning	10450	1979-80	<b>35476</b>
	B34 G2 4x2	Column Switch	Wipe/Wash	10450	1979-80	<b>SQB222</b>
	B34 G2 4x2	Column Switch	DI, Horn, Lighting	10450	1979-80	<b>SQB223</b>
	B34 G2 4x2	Panel Switch	2 position lever	10450	1979-81	<b>31780</b>
	B34 G2 4x2	Panel Switch	2 position rocker	10450	1979-81	<b>39629</b>
	B34 G2 4x2	Panel Switch	Fan	10450	1979-81	<b>39745</b>
	B34 G2 4x2	Panel Switch	2 position rocker	10450	1979-81	<b>39824</b>
	B34 G2 4x2	Column Switch	DI, Horn, Lighting	10450	1981	<b>SQB989</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Panel Switch	Hazard Warning	12170	1980	<b>35476</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Column Switch	Wipe/Wash	12170	1980	<b>SQB222</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Column Switch	DI, Horn, Lighting	12170	1980	<b>SQB223</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Panel Switch	2 position lever	12170	1980-81	<b>31780</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Panel Switch	2 position rocker	12170	1980-81	<b>39629</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Panel Switch	Fan	12170	1980-81	<b>39745</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Panel Switch	2 position rocker	12170	1980-81	<b>39824</b>
	B35 R2LT 4x2 (R-Royce Eagle 220)	Column Switch	DI, Horn, Lighting	12170	1981	<b>SQB989</b>
	B38 G2 4x2	Panel Switch	2 position lever	13930	1975-81	<b>31780</b>
	B38 G2 4x2	Panel Switch	Hazard Warning	13930	1976-80	<b>35476</b>
	B38 G2 4x2	Panel Switch	2 position rocker	13930	1976-81	<b>39629</b>
	B38 G2 4x2	Panel Switch	Fan	13930	1976-81	<b>39745</b>
	B38 G2 4x2	Panel Switch	2 position rocker	13930	1978-81	<b>39824</b>
	C25 C3 6x4	Panel Switch	2 position lever	10013	1983-86	<b>31780</b>
	C25 C3 6x4	Panel Switch	2 position rocker	10013	1983-86	<b>39629</b>
	C25 C3 6x4	Panel Switch	Fan	10013	1983-86	<b>39745</b>
	C25 C3 6x4	Panel Switch	2 position rocker	10013	1983-86	<b>39824</b>
	C25 C3 6x4	Column Switch	DI, Horn, Lighting	10013	1983-86	<b>SQB989</b>
	C25 G3 6x4	Panel Switch	2 position lever	10450	1981-86	<b>31780</b>
	C25 G3 6x4	Panel Switch	2 position rocker	10450	1981-86	<b>39629</b>
	C25 G3 6x4	Panel Switch	Fan	10450	1981-86	<b>39745</b>
	C25 G3 6x4	Panel Switch	2 position rocker	10450	1981-86	<b>39824</b>
	C25 G3 6x4	Column Switch	DI, Horn, Lighting	10450	1981-86	<b>SQB989</b>
	C31 C4 8x4 (Cummins)	Panel Switch	2 position lever	14000	1983-86	<b>31780</b>
	C31 C4 8x4 (Cummins)	Panel Switch	2 position rocker	14000	1983-86	<b>39629</b>
	C31 C4 8x4 (Cummins)	Panel Switch	Fan	14000	1983-86	<b>39745</b>
	C31 C4 8x4 (Cummins)	Panel Switch	2 position rocker	14000	1983-86	<b>39824</b>
	C31 C4 8x4 (Cummins)	Column Switch	DI, Horn, Lighting	14000	1983-86	<b>SQB989</b>
	C31 R4 8x4 (Rolls-Royce)	Panel Switch	2 position lever	12170	1983-86	<b>31780</b>
	C31 R4 8x4 (Rolls-Royce)	Panel Switch	2 position rocker	12170	1983-86	<b>39629</b>
	C31 R4 8x4 (Rolls-Royce)	Panel Switch	Fan	12170	1983-86	<b>39745</b>
	C31 R4 8x4 (Rolls-Royce)	Panel Switch	2 position rocker	12170	1983-86	<b>39824</b>
	C31 R4 8x4 (Rolls-Royce)	Column Switch	DI, Horn, Lighting	12170	1983-86	<b>SQB989</b>
	C36 C2 4x2 (Cummins)	Panel Switch	2 position lever	14000	1982-84	<b>31780</b>
	C36 C2 4x2 (Cummins)	Panel Switch	2 position rocker	14000	1982-84	<b>39629</b>
	C36 C2 4x2 (Cummins)	Panel Switch	Fan	14000	1982-84	<b>39745</b>
	C36 C2 4x2 (Cummins)	Panel Switch	2 position rocker	14000	1982-84	<b>39824</b>
	C36 C2 4x2 (Cummins)	Column Switch	DI, Horn, Lighting	14000	1982-84	<b>SQB989</b>
	C36 G2 4x2	Panel Switch	2 position lever	10450	1982-85	<b>31780</b>
	C36 G2 4x2	Panel Switch	2 position rocker	10450	1982-85	<b>39629</b>
	C36 G2 4x2	Panel Switch	Fan	10450	1982-85	<b>39745</b>
	C36 G2 4x2	Panel Switch	2 position rocker	10450	1982-85	<b>39824</b>

→



Description

Function

Engine Info

cc

OE

Part No.

→ ERF

C36 G2 4x2	Column Switch	DI, Horn, Lighting	10450	1982-85	<b>SQB989</b>
C36 R2 4x2	Panel Switch	2 position lever	12170	1982-84	<b>31780</b>
C36 R2 4x2	Panel Switch	2 position rocker	12170	1982-84	<b>39629</b>
C36 R2 4x2	Panel Switch	Fan	12170	1982-84	<b>39745</b>
C36 R2 4x2	Panel Switch	2 position rocker	12170	1982-84	<b>39824</b>
C36 R2 4x2	Column Switch	DI, Horn, Lighting	12170	1982-84	<b>SQB989</b>
C38 C2 4x2	Panel Switch	2 position lever	10013	1984-86	<b>31780</b>
C38 C2 4x2	Panel Switch	2 position rocker	10013	1984-86	<b>39629</b>
C38 C2 4x2	Panel Switch	Fan	10013	1984-86	<b>39745</b>
C38 C2 4x2	Panel Switch	2 position rocker	10013	1984-86	<b>39824</b>
C38 C2 4x2	Column Switch	DI, Horn, Lighting	10013	1984-86	<b>SQB989</b>
C38 G2 4x2	Panel Switch	2 position lever	13930	1981-86	<b>31780</b>
C38 G2 4x2	Panel Switch	2 position rocker	13930	1981-86	<b>39629</b>
C38 G2 4x2	Panel Switch	Fan	13930	1981-86	<b>39745</b>
C38 G2 4x2	Panel Switch	2 position rocker	13930	1981-86	<b>39824</b>
C38 G2 4x2	Column Switch	DI, Horn, Lighting	13930	1981-86	<b>SQB989</b>
C40 C2 4x2	Panel Switch	2 position lever	14000	1982-86	<b>31780</b>
C40 C2 4x2	Panel Switch	2 position rocker	14000	1982-86	<b>39629</b>
C40 C2 4x2	Panel Switch	Fan	14000	1982-86	<b>39745</b>
C40 C2 4x2	Panel Switch	2 position rocker	14000	1982-86	<b>39824</b>
C40 C2 4x2	Column Switch	DI, Horn, Lighting	14000	1982-86	<b>SQB989</b>
C40 G2 4x2	Panel Switch	2 position lever	13930	1981-86	<b>31780</b>
C40 G2 4x2	Panel Switch	2 position rocker	13930	1981-86	<b>39629</b>
C40 G2 4x2	Panel Switch	Fan	13930	1981-86	<b>39745</b>
C40 G2 4x2	Panel Switch	2 position rocker	13930	1981-86	<b>39824</b>
C40 G2 4x2	Column Switch	DI, Horn, Lighting	13930	1981-86	<b>SQB989</b>
C40 R2 4x2 (265L)	Panel Switch	2 position lever	12170	1985-86	<b>31780</b>
C40 R2 4x2 (265L)	Panel Switch	2 position rocker	12170	1985-86	<b>39629</b>
C40 R2 4x2 (265L)	Panel Switch	Fan	12170	1985-86	<b>39745</b>
C40 R2 4x2 (265L)	Panel Switch	2 position rocker	12170	1985-86	<b>39824</b>
C40 R2 4x2 (265L)	Column Switch	DI, Horn, Lighting	12170	1985-86	<b>SQB989</b>
C40 R2 4x2 (290Li)	Panel Switch	2 position lever	12170	1982-85	<b>31780</b>
C40 R2 4x2 (290Li)	Panel Switch	2 position rocker	12170	1982-85	<b>39629</b>
C40 R2 4x2 (290Li)	Panel Switch	Fan	12170	1982-85	<b>39745</b>
C40 R2 4x2 (290Li)	Panel Switch	2 position rocker	12170	1982-85	<b>39824</b>
C40 R2 4x2 (290Li)	Column Switch	DI, Horn, Lighting	12170	1982-85	<b>SQB989</b>
E6.18 4x2 Rigid, Tipper	Column Switch	DI, Horn, Lighting	5880	1986-93	<b>SQB989</b>
E6.18 4x2 Rigid, Tipper	Batt Master Switch		5880	1989-93	<b>SSB101</b>
E6.21 4x2 Rigid, Tipper	Column Switch	DI, Horn, Lighting	5880	1990-93	<b>SQB989</b>
E6.21 4x2 Rigid, Tipper	Batt Master Switch		5880	1990-93	<b>SSB101</b>
E8.21 4x2 Drawbar, Rigid, Tipper, Truck	Column Switch	DI, Horn, Lighting	8270	1990-93	<b>SQB989</b>
E8.21 4x2 Drawbar, Rigid, Tipper, Truck	Batt Master Switch		8270	1990-93	<b>SSB101</b>
E8.26 6x4 Rigid, Tipper	Column Switch	DI, Horn, Lighting	8270	1988-90	<b>SQB989</b>
E8.26 6x4 Rigid, Tipper	Batt Master Switch		8270	1989-90	<b>SSB101</b>
E8.27 6x4 Rigid, Tipper	Column Switch	DI, Horn, Lighting	8270	1990-93	<b>SQB989</b>
E8.27 6x4 Rigid, Tipper	Batt Master Switch		8270	1990-93	<b>SSB101</b>
ES6.18 4x2 Rigid	Panel Switch	Lighting	5880	1989-93	<b>34952</b>
ES6.18 4x2 Rigid	Batt Master Switch		5880	1989-93	<b>SSB101</b>
ES6.18 4x2 Skip Loader, Tanker	Column Switch	DI, Horn, Lighting	5880	1993-94	<b>SQB989</b>
ES6.18 4x2 Skip Loader, Tanker	Batt Master Switch		5880	1993-94	<b>SSB101</b>
ES6.18 4x2 Tipper	Column Switch	DI, Horn, Lighting	5880	1989-93	<b>SQB989</b>
ES6.18 4x2 Tipper	Batt Master Switch		5880	1989-93	<b>SSB101</b>
ES6.21 4x2 Rigid, Skip Loader, Tanker, Tipper	Column Switch	DI, Horn, Lighting	6000	1993-94	<b>SQB989</b>
ES6.21 4x2 Rigid, Skip Loader, Tanker, Tipper	Batt Master Switch		6000	1993-94	<b>SSB101</b>
ES8.24, 8.27 6x4 Rigid, Tipper	Column Switch	DI, Horn, Lighting	8270	1993 >>	<b>SQB989</b>
ES8.24, 8.27 6x4 Rigid, Tipper	Batt Master Switch		8270	1993 >>	<b>SSB101</b>
M16 G2 4x2 (FC) Truck	Panel Switch	2 position lever	10450	1983-86	<b>31780</b>
M16 G2 4x2 (FC) Truck	Panel Switch	Fan	10450	1983-86	<b>39745</b>
M16 G2 4x2 (FC) Truck	Panel Switch	2 position rocker	10450	1983-86	<b>39824</b>
M16 G2 4x2 (FC) Truck	Column Switch	DI, Horn, Lighting	10450	1983-86	<b>SQB989</b>
M16 G2 4x2 (FC) Truck	Panel Switch	2 position rocker	10450	1986	<b>39629</b>
M16 P2 4x2 (FC) Truck	Panel Switch	2 position lever	5800	1983-86	<b>31780</b>
M16 P2 4x2 (FC) Truck	Panel Switch	Fan	5800	1983-86	<b>39745</b>
M16 P2 4x2 (FC) Truck	Panel Switch	2 position rocker	5800	1983-86	<b>39824</b>
M16 P2 4x2 (FC) Truck	Column Switch	DI, Horn, Lighting	5800	1983-86	<b>SQB989</b>
M16 P2 4x2 (FC) Truck	Panel Switch	2 position rocker	5800	1986	<b>39629</b>

**FERRARI**

Mondial 3.2 Quattrovalvole	Fuelling Relay	F105 C (V8)	3185	1985-89	<b>FDB505</b>
----------------------------	----------------	-------------	------	---------	---------------





Description      Function      Engine Info      cc      OE      Part No.

## FIAT

Croma 2.0 i.e 16v, 2.0i.e, Turbo ie	Fuelling Relay		DOHC	1995	1986-91	<b>FDB505</b>
Croma (II) 2.0 i.e 16v, 2.0i.e, Turbo ie	Fuelling Relay		DOHC	1995	1991-96	<b>FDB505</b>
Uno (Ilt) Turbo ie	Fuelling Relay			1372	1989-97	<b>FDB505</b>
Uno Turbo ie	Fuelling Relay			1299	1985-90	<b>FDB505</b>

## FODEN

FC17, FC20 4x2 Dump Truck	Solenoid 4ST				1971-78	<b>SRB351</b>
FC27, FC27A 6x4 Dump Truck	Solenoid 4ST				1971-78	<b>SRB351</b>
FC35 4x2, FC35A 6x4 Dump Truck	Solenoid 4ST				1971-78	<b>SRB351</b>
FL17 4x2 Dump Truck	Solenoid 4ST			11094	1971-78	<b>SRB351</b>
S10 G2010 Eight-Wheeler Haulmaster	Column Switch	DI, Horn, Lighting		10450	1978-82	<b>SQB986</b>
S10 G2010 Eight-Wheeler Haulmaster	Column Switch	Lighting, Wipe/Wash		10450	1978-82	<b>SQB991</b>
S10 G2010 Eight-Wheeler Haulmaster	Solenoid 4ST			10450	1978-82	<b>SRB351</b>
S10 G2010 Tractor Unit Fleetmaster	Column Switch	DI, Horn, Lighting		10450	1978-82	<b>SQB986</b>
S10 G2010 Tractor Unit Fleetmaster	Column Switch	Lighting, Wipe/Wash		10450	1978-82	<b>SQB991</b>
S10 G2010 Tractor Unit Fleetmaster	Solenoid 4ST			10450	1978-82	<b>SRB351</b>
S21 FC	Panel Switch	2 position lever			1969-79	<b>31780</b>
S21 FC	Panel Switch	Rotary			1969-79	<b>SPB121</b>
S21 FC	Panel Switch	Horn/Dip			1969-79	<b>SPB140</b>
S21 FC	Panel Switch	2 position lever			1969-79	<b>SPB204</b>
S21 FC	Ignition Switch				1973-79	<b>30608</b>
S21 FC	Column Switch	DI, Horn, Lighting			1973-79	<b>SQB986</b>
S21 FC	Column Switch	Lighting, Wipe/Wash			1977-79	<b>SQB991</b>
S21 FG	Ignition Switch				1969-78	<b>30608</b>
S21 FG	Panel Switch	2 position lever			1969-78	<b>31780</b>
S21 FG	Panel Switch	Rotary			1969-78	<b>SPB121</b>
S21 FG	Panel Switch	Horn/Dip			1969-78	<b>SPB140</b>
S21 FG	Panel Switch	2 position lever			1973-78	<b>SPB204</b>
S21 FG	Column Switch	DI, Horn, Lighting			1973-78	<b>SQB986</b>
S21 FG	Column Switch	Lighting, Wipe/Wash			1977-78	<b>SQB991</b>
S39	Ignition Switch				1969-79	<b>30608</b>
S39	Panel Switch	2 position lever			1969-79	<b>31780</b>
S39	Panel Switch	Rotary			1969-79	<b>SPB121</b>
S39	Panel Switch	Horn/Dip			1969-79	<b>SPB140</b>
S39	Panel Switch	2 position lever			1969-79	<b>SPB204</b>
S50 (Steel Cab)	Ignition Switch				1969-72	<b>30608</b>
S50 (Steel Cab)	Panel Switch	2 position lever			1969-72	<b>31780</b>
S50 (Steel Cab)	Panel Switch	Rotary			1969-72	<b>SPB121</b>
S50 (Steel Cab)	Panel Switch	Horn/Dip			1969-72	<b>SPB140</b>
S50 (Steel Cab)	Panel Switch	2 position lever			1969-72	<b>SPB204</b>
S80 C2208 Tractor Unit	Panel Switch	Rotary			1973-75	<b>SPB121</b>
S80 C2208 Tractor Unit	Column Switch	DI, Horn, Lighting			1973-75	<b>SQB986</b>
S80 R2208 Tractor Unit	Panel Switch	Rotary	12170		1973-75	<b>SPB121</b>
S80 R2208 Tractor Unit	Column Switch	DI, Horn, Lighting	12170		1973-75	<b>SQB986</b>
S83 C2583 Tractor Unit	Panel Switch	Rotary	14000		1975-78	<b>SPB121</b>
S83 C2583 Tractor Unit	Column Switch	DI, Horn, Lighting	14000		1975-78	<b>SQB986</b>
S83 C2583 Tractor Unit	Column Switch	Lighting, Wipe/Wash	14000		1975-78	<b>SQB991</b>
S83 G1883 Eight-Wheeler, Tractor Unit	Panel Switch	Rotary	10450		1977-78	<b>SPB121</b>
S83 G1883 Eight-Wheeler, Tractor Unit	Column Switch	DI, Horn, Lighting	10450		1977-78	<b>SQB986</b>
S83 G1883 Eight-Wheeler, Tractor Unit	Column Switch	Lighting, Wipe/Wash	10450		1977-78	<b>SQB991</b>
S83 G2583 Tractor Unit	Panel Switch	Rotary	13930		1977-78	<b>SPB121</b>
S83 G2583 Tractor Unit	Column Switch	DI, Horn, Lighting	13930		1977-78	<b>SQB986</b>
S83 G2583 Tractor Unit	Column Switch	Lighting, Wipe/Wash	13930		1977-78	<b>SQB991</b>
S83 R2783 Tractor Unit	Panel Switch	Rotary	12170		1976-78	<b>SPB121</b>
S83 R2783 Tractor Unit	Column Switch	DI, Horn, Lighting	12170		1976-78	<b>SQB986</b>
S83 R2783 Tractor Unit	Column Switch	Lighting, Wipe/Wash	12170		1976-78	<b>SQB991</b>
S90 C2509 Tractor Unit Haulmaster	Column Switch	DI, Horn, Lighting	14000		1977-78	<b>SQB986</b>
S90 C2509 Tractor Unit Haulmaster	Column Switch	Lighting, Wipe/Wash	14000		1977-78	<b>SQB991</b>
S90 C2509 Tractor Unit Haulmaster	Solenoid 4ST		14000		1977-78	<b>SRB351</b>
S90 R2709 Tractor Unit Haulmaster	Column Switch	DI, Horn, Lighting	12170		1977-78	<b>SQB986</b>
S90 R2709 Tractor Unit Haulmaster	Column Switch	Lighting, Wipe/Wash	12170		1977-78	<b>SQB991</b>
S90 R2709 Tractor Unit Haulmaster	Solenoid 4ST		12170		1977-78	<b>SRB351</b>
S95 C2995 Tractor Unit Fleetmaster	Column Switch	DI, Horn, Lighting	14000		1977-79	<b>SQB986</b>
S95 C2995 Tractor Unit Fleetmaster	Column Switch	Lighting, Wipe/Wash	14000		1977-79	<b>SQB991</b>
S95 C2995 Tractor Unit Fleetmaster	Solenoid 4ST		14000		1977-79	<b>SRB351</b>
S95 R2995 Tractor Unit Fleetmaster	Column Switch	DI, Horn, Lighting	12170		1977-79	<b>SQB986</b>
S95 R2995 Tractor Unit Fleetmaster	Column Switch	Lighting, Wipe/Wash	12170		1977-79	<b>SQB991</b>
S95 R2995 Tractor Unit Fleetmaster	Solenoid 4ST		12170		1977-79	<b>SRB351</b>
Universal	Column Switch	DI, Horn, Lighting			1977-78	<b>SQB986</b>







Description

Function

Engine Info

cc

OE

Part No.

→ FODEN

Universal	Column Switch	Lighting, Wipe/Wash	1977-78	<b>SQB991</b>
Universal	Solenoid 4ST		1977-78	<b>SRB351</b>

**FORD**

Capri II All models OHV	Solenoid 4ST	Inertia Starter motor	1975-78	<b>SRB333</b>
Capri III 2.8i, Turbo V6	Fuelling relay	K Jetronic injection	1981-87	<b>FDB503</b>
Cortina II All models	Solenoid 4ST	Inertia Starter motor	1967-70	<b>SRB335</b>
Cortina III 1.3, 1.6 OHV	Solenoid 4ST	Inertia Starter motor	1970-76	<b>SRB333</b>
Cortina IV 1.3 OHV	Solenoid 4ST	Inertia Starter motor	1976-81	<b>SRB333</b>
Escort 1.1 1.3 1.6 OHV	Solenoid 4ST	Inertia Starter motor	1969-72	<b>SRB335</b>
Escort 1.1 1.3 1.6 OHV	Solenoid 4ST	Inertia Starter motor	1973-75	<b>SRB333</b>
Escort II 1.1 1.3 1.6 OHV	Solenoid 4ST	Inertia Starter motor	1975-80	<b>SRB333</b>
Escort III 1.6i, Turbo CVH	Fuelling relay	K Jetronic injection	1982-86	<b>FDB502</b>
Granada II 2.8i V6	Fuelling relay		1977-82	<b>FDB503</b>
Granada III 1.8i, 2.0i, 2.4i, 2.8i V6, 2.9i V6	Fuelling relay		1985-92	<b>FDB503</b>
Orion 1.6i CVH	Fuelling relay	K Jetronic injection	1983-90	<b>FDB502</b>
Serria 2.0i, 2.0i 4x4	Fuelling relay		1987-93	<b>FDB503</b>
Serria 2.0i, 2.8i V6, 2.9i V6	Fuelling relay		1985-93	<b>FDB503</b>

**FORD LCV**

Transit 1.6 1.7 V4 2.0 V4 2.4D	Solenoid 4ST	Inertia Starter motor	1972-73	<b>SRB325</b>
Transit 1.6 1.7 V4 2.0 V4 2.4D	Solenoid 4ST	Inertia Starter motor	1974-78	<b>SRB333</b>

**FORD TRACTORS**

231 Tractor	Solenoid 4ST	Inertia Starter motor	1971-73	<b>SRB325</b>
231 Tractor	Solenoid 4ST	Inertia Starter motor	1974-78	<b>SRB333</b>
231 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1975-78	<b>39589</b>
233, 333, 355, 420, 515, 531 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1975-78	<b>39589</b>
233, 333, 355, 420, 515, 531 Tractor	Lighting Panel Switch	Rotary switch 16SA	1977-80	<b>34952</b>
2600, 3600 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1969-78	<b>39589</b>
2600, 3600 Tractor	Lighting Panel Switch	Rotary switch 16SA	1977-80	<b>34952</b>
4100, 4600 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1975-78	<b>39589</b>
4100, 4600 Tractor	Lighting Panel Switch	Rotary switch 16SA	1977-80	<b>34952</b>
5600 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1975-78	<b>39589</b>
5600 Tractor	Lighting Panel Switch	Rotary switch 16SA	1977-80	<b>34952</b>
6600, 6700, 7600 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1975-78	<b>39589</b>
6600, 6700, 7600 Tractor	Lighting Panel Switch	Rotary switch 16SA	1977-80	<b>34952</b>
7700 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1969-78	<b>39589</b>
7700 Tractor	Lighting Panel Switch	Rotary switch 16SA	1977-80	<b>34952</b>
8600, 8700,9700 Tractor	Ignition Switch 128SA	Heater-Start, 5 position Lever	1975-78	<b>39589</b>
8600, 8700,9700 Tractor	Lighting Panel Switch	Rotary switch 16SA	1977-80	<b>34952</b>

**HONDA**

Concerto	Column Switch	DI, Lighting	1990-93	<b>SQB140</b>
Concerto	Column Switch	Wiper intermittent, Washer	1990-93	<b>SQB141</b>
Concerto	Column Switch	Wiper variable intermittent, Washer	1990-93	<b>SQB143</b>
Concerto II	Column Switch	DI, Lighting	1993 >>	<b>SQB140</b>
Concerto II	Column Switch	Wiper intermittent, Washer	1993 >>	<b>SQB141</b>
Concerto II	Column Switch	Wiper variable intermittent, Washer	1993 >>	<b>SQB143</b>

**INTERNATIONAL**

International Harvester TX19	Panel Switch	Rotary Panel Switch		<b>SPB107</b>
------------------------------	--------------	---------------------	--	---------------

**IVECO FORD**

A Series A407 (35 cwt) 2.0	Solenoid 4ST		1996	1973-78	<b>SRB333</b>
A Series A409 (35 cwt) 3.5 Diesel	Solenoid 4ST		3540	1973-83	<b>SRB333</b>
A Series A410 (35 cwt) 3.0	Solenoid 4ST		2994	1973-83	<b>SRB333</b>
A Series A506 (2 Ton.) 2.4 Diesel	Solenoid 4ST		2360	1973-83	<b>SRB333</b>
A Series A507 (2 Ton.) 2.0	Solenoid 4ST		1996	1973-78	<b>SRB333</b>
A Series A509 (2 Ton.) 3.5 Diesel	Solenoid 4ST		3540	1973-83	<b>SRB333</b>
A Series A510 (2 Ton.) 3.0	Solenoid 4ST		2994	1973-83	<b>SRB333</b>
A Series A606 (3 Ton.) 2.4 Diesel	Solenoid 4ST		2360	1973-83	<b>SRB333</b>
A Series A609 (3 Ton.) 3.5 Diesel	Solenoid 4ST		3540	1973-83	<b>SRB333</b>
A Series A610 (3 Ton.) 3.0	Solenoid 4ST		2994	1973-83	<b>SRB333</b>
Cargo 4.2, 6.0, 6.2, 8.3, 8.9, 9.6	Column Switch	Di, Horn, Lighting		1981 >>	<b>SQB960</b>
D Series D0507, 0510, 0513, 0607, 0610	Solenoid 4ST			1971-80	<b>SRB351</b>
D Series D0707, 0710, 0807, 0810	Solenoid 4ST			1971-80	<b>SRB351</b>
D Series D0907, 0910, 0911	Solenoid 4ST			1971-80	<b>SRB351</b>

→





Description
Function
Engine Info
cc
OE
Part No.

→ IVECO FORD

D Series D1000	Solenoid 4ST			1969-72	<b>SRB351</b>
D Series D1010, 1110	Solenoid 4ST		5948	1971-80	<b>SRB351</b>
D Series D1111, 1114	Solenoid 4ST			1975-80	<b>SRB351</b>
D Series D1210, 1211, 1311, 1314	Solenoid 4ST			1971-80	<b>SRB351</b>
D Series D1411, 1414	Solenoid 4ST			1971-80	<b>SRB351</b>
D Series D1610	Solenoid 4ST		5948	1978-80	<b>SRB351</b>
D Series D1614	Solenoid 4ST		5945	1971-80	<b>SRB351</b>
D Series D1617, 1618	Solenoid 4ST			1974-80	<b>SRB351</b>
D Series D1710, 1711, 1911	Solenoid 4ST			1978-80	<b>SRB351</b>
D Series D200, D300 (240, 255, 330)	Solenoid 4ST			1969-71	<b>SRB351</b>
D Series D2014, 2114, 2414, 2417, 2418	Solenoid 4ST			1978-80	<b>SRB351</b>
D Series D400 (240, 255, 330)	Solenoid 4ST			1969-71	<b>SRB351</b>
D Series D500 (240, 255, 330)	Solenoid 4ST			1969-71	<b>SRB351</b>
D Series D550 (255)	Solenoid 4ST		4162	1969-71	<b>SRB351</b>
D Series D600, 700, 750, 800 (300), (330)	Solenoid 4ST			1969-71	<b>SRB351</b>
D Series D800, D900 (360)	Solenoid 4ST		5945	1969-71	<b>SRB351</b>
D Series DA1007 (Artic)	Solenoid 4ST		4162	1971-78	<b>SRB351</b>
D Series DA1610, 1710, 1911 (Artic)	Solenoid 4ST			1971-80	<b>SRB351</b>
D Series DA2014, 2114 (Artic)	Solenoid 4ST		5945	1971-80	<b>SRB351</b>
D Series DA2417 (Artic)	Solenoid 4ST		8849	1973-80	<b>SRB351</b>
D Series DA2418 (Artic)	Solenoid 4ST		8263	1970-80	<b>SRB351</b>
D Series DA2817 (Artic)	Solenoid 4ST		8849	1973-80	<b>SRB351</b>
D Series DA2818 (Artic)	Solenoid 4ST		8263	1970-80	<b>SRB351</b>
D Series DT1400, 1500, 1700 (Six Wheeler)	Solenoid 4ST			1969-71	<b>SRB351</b>
D Series DT1711, 2014 (Six Wheeler)	Solenoid 4ST			1971-78	<b>SRB351</b>
D Series DT2214 (Six Wheeler)	Solenoid 4ST		5945	1971-75	<b>SRB351</b>
D Series DT2414 (Six Wheeler)	Solenoid 4ST		5945	1975-78	<b>SRB351</b>
D Series DT2417, 2418 (Six Wheeler)	Solenoid 4ST		8849	1973-78	<b>SRB351</b>
D Series DT550, 800 (Six Wheeler)	Solenoid 4ST			1965-72	<b>SRB351</b>
K150 (N/C) 1.5 Ton (3.3), (3.9 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
K200, 220 (N/C) 2 Ton (3.3), (3.9 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
K300 (N/C) 3 Ton (3.3), (4.0 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
K400 (N/C) 4 Ton (3.3), (4.0 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
K500 (N/C) 5 Ton (3.3), (4.0 Diesel), (4.9), (5.4 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
K600 (N/C) 6 Ton (4.9), (5.4 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
K700 (N/C) 7 Ton (4.9), (5.4 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
K750 (N/C) 7.5 Ton (4.9), (5.4 Diesel)	Solenoid 4ST			1969-75	<b>SRB325</b>
R1010, 1011 (PSV) Coach Chassis	Solenoid 4ST			1970-85	<b>SRB325</b>
R1014, 1015, 1111 (PSV) Coach Chassis	Solenoid 4ST			1970-85	<b>SRB325</b>
R1114, 1115 (PSV) Coach Chassis	Solenoid 4ST		5945	1970-85	<b>SRB325</b>

## JAGUAR (Daimler)

Daimler (XJ40) 4.0 Auto	Actuator	Gearbox solenoid		3980	1992-94	<b>78715</b>
Daimler Double Six 5.3	Panel Switch	Overdrive	V12	5343	1972-79	<b>39166</b>
Daimler Double Six 5.3	Panel Switch	Door Lock Actuator	V12	5343	1974-79	<b>33727</b>
Daimler Double Six 5.3	Panel Switch	Window lift master	V12	5343	1974-79	<b>39980</b>
Daimler Double Six 5.3	Ignition Switch	Column Lock Switch	V12	5343	1974-79	<b>39998</b>
Daimler Double Six 5.3	Ignition Switch	Column Lock Switch	V12	5343	1981-86	<b>35315</b>
Daimler Double Six 5.3	Ignition Switch	Column Lock Switch	V12	5343	1981-90	<b>35315</b>
Daimler Double Six 5.3 HE	Rotary Panel Sw	Lighting	(Pre-wired)	5300	1976-79	<b>30754</b>
Daimler Double Six 5.3 HE	Column Switch	DI, Lighting, Fog	V12	5343	1982-90	<b>SQB999</b>
Daimler Double Six 5.3 HE	Column Switch	DI, Lighting, Fog	V12	5345	1986-90	<b>SQB999</b>
Daimler Limousine	Body Switch	Foot dip	6 Cyl	4235	1969-73	<b>34790</b>
Daimler Limousine	Panel Switch	Pull/Push	6 Cyl	4235	1969-92	<b>SPB104</b>
Daimler Limousine	Panel Switch	Window lift master	6 Cyl	4235	1975-92	<b>39980</b>
Daimler Limousine	Panel Switch	Hazard Warning	6 Cyl	4235	1979-89	<b>39976</b>
Daimler Sovereign 3.4	Panel Switch	Door Lock Actuator	6 Cyl	3442	1975-77	<b>33727</b>
Daimler Sovereign 3.4	Panel Switch	Overdrive	6 Cyl	3442	1975-77	<b>39166</b>
Daimler Sovereign 3.4	Panel Switch	Window lift master	6 Cyl	3442	1975-77	<b>39980</b>
Daimler Sovereign 3.4	Ignition Switch	Column Lock Switch	6 Cyl	3442	1975-77	<b>39998</b>
Daimler Sovereign 3.4	Ignition Switch	Column Lock Switch	6 Cyl	3442	1981-86	<b>35315</b>
Daimler Sovereign 4.2	Panel Switch	Overdrive	6 Cyl	4235	1970-79	<b>39166</b>
Daimler Sovereign 4.2	Panel Switch	Door Lock Actuator	6 Cyl	4235	1974-79	<b>33727</b>
Daimler Sovereign 4.2	Panel Switch	Window lift master	6 Cyl	4235	1974-79	<b>39980</b>
Daimler Sovereign 4.2	Ignition Switch	Column Lock Switch	6 Cyl	4235	1974-79	<b>39998</b>
Daimler Sovereign 4.2	Ignition Switch	Column Lock Switch	6 Cyl	4235	1979-86	<b>39998</b>
Daimler Sovereign 4.2	Ignition Switch	Column Lock Switch	6 Cyl	4235	1981-86	<b>35315</b>
Daimler Sovereign 4.2	Ignition Switch	Column Lock Switch	6 Cyl	4235	1981-86	<b>35315</b>

→



Description

Function

Engine Info

cc

OE

Part No.

→ JAGUAR (Daimler)

Daimler Sovereign 4.2	Column Switch	DI, Lighting, Fog	6 Cyl	4235	1982-86	<b>SQB999</b>
Daimler Sovereign 3.4	Rotary Panel Sw	Lighting	(Pre-wired)	5300	1975-77	<b>30754</b>
Daimler Sovereign 4.2	Rotary Panel Sw	Lighting	(Pre-wired)	5300	1976-79	<b>30754</b>
Jaguar 3.6 to 1987	Column Switch	Wiper Switch		3600	>> 1987	<b>SQB702</b>
Jaguar all models 1987on	Column Switch	Wiper Switch			1987 >>	<b>SQB702</b>
Sovereign 4.2	Panel Switch	Window lift master	6 Cyl	4235	1983-86	<b>39980</b>
Sovereign 4.2	Column Switch	DI, Lighting, Fog	6 Cyl	4235	1983-86	<b>SQB999</b>
Sovereign 5.3 HE	Panel Switch	Window lift master	V12	5343	1983-89	<b>39980</b>
Sovereign 5.3 HE	Column Switch	Wipe/Wash	V12	5343	1983-89	<b>SQB800</b>
Sovereign 5.3 HE	Column Switch	DI, Lighting, Fog	V12	5343	1983-89	<b>SQB999</b>
XJ12/XJ 5.3	Panel Switch	Window lift master	V12	5343	1975	<b>39980</b>
XJ12/XJ 5.3	Panel Switch	Door Lock Actuator	V12	5343	1975-79	<b>33727</b>
XJ12/XJ 5.3	Panel Switch	Overdrive	V12	5343	1975-79	<b>39166</b>
XJ12/XJ 5.3 HE	Panel Switch	Window lift master	V12	5343	1981-83	<b>39980</b>
XJ12/XJ 5.3 HE	Column Switch	Wipe/Wash	V12	5343	1982-83	<b>SQB995</b>
XJ12/XJ 5.3 HE	Column Switch	Wipe/Wash	V12	5343	1983-84	<b>SQB800</b>
XJ6 (XJ40) 3.2 Auto	Actuator	Gearbox solenoid	AJ6	3239	1992-94	<b>78715</b>
XJ6 (XJ40) 4.0 Auto	Actuator	Gearbox solenoid	AJ6	3980	1992-94	<b>78715</b>
XJ6 2.8	Solenoid 4ST			2792	1969-73	<b>SRB325</b>
XJ6, XJ 3.4, 4.2	Rotary Panel Sw	Lighting	(Pre-wired)	5300	1976-79	<b>30754</b>
XJ6/XJ 3.4	Panel Switch	Door Lock Actuator	6 Cyl	3442	1975-79	<b>33727</b>
XJ6/XJ 3.4	Panel Switch	Overdrive	6 Cyl	3442	1975-79	<b>39166</b>
XJ6/XJ 3.4	Ignition Switch	Column Lock Switch	(US) 6 Cyl	3442	1975-79	<b>39998</b>
XJ6/XJ 3.4	Panel Switch	Window lift master	6 Cyl	3442	1975-86	<b>39980</b>
XJ6/XJ 3.4	Ignition Switch	Column Lock Switch	(US) 6 Cyl	3442	1981-86	<b>35315</b>
XJ6/XJ 3.4	Column Switch	DI, Lighting, Fog	6 Cyl	3442	1983-86	<b>SQB999</b>
XJ6/XJ 4.2	Panel Switch	Door Lock Actuator	6 Cyl	4235	1975-79	<b>33727</b>
XJ6/XJ 4.2	Panel Switch	Overdrive	6 Cyl	4235	1975-79	<b>39166</b>
XJ6/XJ 4.2	Panel Switch	Window lift master	6 Cyl	4235	1975-79	<b>39980</b>
XJ6/XJ 4.2	Ignition Switch	Column Lock Switch	(US) 6 Cyl	4235	1975-79	<b>39998</b>
XJ6/XJ 4.2	Ignition Switch	Column Lock Switch	(US) 6 Cyl	4235	1981-86	<b>35315</b>
XJ6/XJ 4.2	Column Switch	DI, Lighting, Fog	6 Cyl	4235	1983-86	<b>SQB999</b>
XJ-S Convertible 4.0 (223 bhp)	Panel Switch	Door Lock Actuator	AJ6	3980	1992-94	<b>33727</b>
XJ-S Convertible 4.0 (223 bhp)	Panel Switch	Window lift master	AJ6	3980	1992-94	<b>39980</b>
XJ-S Convertible 4.0 (223 bhp)	Actuator	Gearbox solenoid (Auto)	AJ6	3980	1992-94	<b>78715</b>
XJ-S Convertible 4.0 (223 bhp)	Column Switch	Wipe/Wash	(LHD) AJ6	3980	1992-94	<b>SQB995</b>
XJ-S Convertible 4.0 (237 bhp)	Panel Switch	Door Lock Actuator	AJ6	3980	1983-94	<b>33727</b>
XJ-S Convertible 4.0 (237 bhp)	Panel Switch	Window lift master	AJ6	3980	1983-94	<b>39980</b>
XJ-S Convertible 4.0 (237 bhp)	Column Switch	Wipe/Wash	(LHD) AJ6	3980	1991-94	<b>SQB995</b>
XJ-S Convertible 4.0 (237 bhp)	Actuator	Gearbox solenoid (Auto)	AJ6	3980	1994	<b>78715</b>
XJ-S Convertible 5.3 V12	Panel Switch	Door Lock Actuator	AJ6		1992-93	<b>33727</b>
XJ-S Convertible 5.3 V12	Panel Switch	Window lift master	AJ6		1992-93	<b>39980</b>
XJ-S Convertible 5.3 V12	Actuator	Gearbox solenoid (Auto)	AJ6		1992-93	<b>78715</b>
XJ-S Convertible 5.3 V12	Column Switch	Wipe/Wash	(LHD) AJ6		1992-93	<b>SQB995</b>
XJ-S Convertible 6.0 V12	Panel Switch	Door Lock Actuator	AJ6		1993-94	<b>33727</b>
XJ-S Convertible 6.0 V12	Panel Switch	Window lift master	AJ6		1993-94	<b>39980</b>
XJ-S Convertible 6.0 V12	Actuator	Gearbox solenoid (Auto)	AJ6		1993-94	<b>78715</b>
XJ-S Convertible 6.0 V12	Column Switch	Wipe/Wash	(LHD) AJ6		1993-97	<b>SQB995</b>
XJ-S Coupe 3.6	Panel Switch	Door Lock Actuator	AJ6	3590	1983-91	<b>33727</b>
XJ-S Coupe 3.6	Panel Switch	Window lift master	AJ6	3590	1983-91	<b>39980</b>
XJ-S Coupe 3.6	Column Switch	Wipe/Wash	(LHD) AJ6	3590	1983-91	<b>SQB995</b>
XJ-S Coupe 4.0 (223 bhp)	Panel Switch	Door Lock Actuator	AJ6	3980	1991-94	<b>33727</b>
XJ-S Coupe 4.0 (223 bhp)	Panel Switch	Window lift master	AJ6	3980	1991-94	<b>39980</b>
XJ-S Coupe 4.0 (223 bhp)	Actuator	Gearbox solenoid	(Auto) AJ6	3980	1991-94	<b>78715</b>
XJ-S Coupe 4.0 (223 bhp)	Column Switch	Wipe/Wash	(LHD) AJ6	3980	1991-94	<b>SQB995</b>
XJ-S Coupe 4.0 (237 bhp)	Panel Switch	Door Lock Actuator	AJ6	3980	1994-97	<b>33727</b>
XJ-S Coupe 4.0 (237 bhp)	Panel Switch	Window lift master	AJ6	3980	1994-97	<b>39980</b>
XJ-S Coupe 4.0 (237 bhp)	Actuator	Gearbox solenoid	(Auto) AJ6	3980	1994-97	<b>78715</b>
XJ-S Coupe 4.0 (237 bhp)	Column Switch	Wipe/Wash	(LHD) AJ6	3980	1994-97	<b>SQB995</b>
XJ-S Coupe 5.3	Ignition Switch	Column Lock Switch	V12	5343	1975-78	<b>39998</b>
XJ-S Coupe 5.3	Ignition Switch	Column Lock Switch	V12	5343	1981-86	<b>35315</b>
XJ-S Coupe 5.3 HE	Ignition Switch	Column Lock Switch	V12	5343	1981-82	<b>39998</b>
XJ-S Coupe 5.3 HE	Ignition Switch	Column Lock Switch	V12	5343	1981-86	<b>35315</b>
XJ-S Coupe 5.3 HE	Panel Switch	Window lift master	V12	5343	1981-90	<b>39980</b>
XJ-S Coupe 5.3 HE	Column Switch	Wipe/Wash	(LHD) V12	5343	1981-90	<b>SQB995</b>
XJ-S Coupe 5.3 HE	Panel Switch	Door Lock Actuator	V12	5343	1983-90	<b>33727</b>
XJ-S Coupe 5.3 HE	Panel Switch	Door Lock Actuator	V12	5345	1990-91	<b>33727</b>
XJ-S Coupe 5.3 HE	Panel Switch	Window lift master	V12	5345	1990-91	<b>39980</b>
XJ-S Coupe 5.3 HE	Column Switch	Wipe/Wash	(LHD) V12	5345	1990-91	<b>SQB995</b>

→





Description      Function      Engine Info      cc      OE      Part No.

→ JAGUAR (Daimler)

XJ-SC Cabriolet 3.6	Panel Switch	Door Lock Actuator	6 Cyl	3590	1983-87	<b>33727</b>
XJ-SC Cabriolet 3.6	Panel Switch	Window lift master	6 Cyl	3590	1983-87	<b>39980</b>
XJ-SC Cabriolet 3.6	Column Switch	Wipe/Wash	(LHD) 6 Cyl	3590	1983-87	<b>SQB995</b>
XJ-SC Cabriolet 5.3 V12	Panel Switch	Door Lock Actuator	V12	5343	1985-89	<b>33727</b>
XJ-SC Cabriolet 5.3 V12	Panel Switch	Window lift master	V12	5343	1985-89	<b>39980</b>
XJ-SC Cabriolet 5.3 V12	Column Switch	Wipe/Wash	(LHD) V12	5343	1985-89	<b>SQB995</b>
XJ-SC Cabriolet 5.3 V12	Panel Switch	Door Lock Actuator	V12	5343	1986-89	<b>33727</b>
XJ-SC Cabriolet 5.3 V12	Panel Switch	Window lift master	V12	5343	1986-89	<b>39980</b>
XJ-SC Cabriolet 5.3 V12	Column Switch	Wipe/Wash	(LHD) V12	5343	1986-89	<b>SQB995</b>
XJ-SC Convertible 5.3 V12	Panel Switch	Door Lock Actuator	V12	5343	1988-90	<b>33727</b>
XJ-SC Convertible 5.3 V12	Panel Switch	Window lift master	V12	5343	1988-90	<b>39980</b>
XJ-SC Convertible 5.3 V12	Column Switch	Wipe/Wash	(LHD) V12	5343	1988-90	<b>SQB995</b>
XJ-SC Convertible 5.3 V12	Panel Switch	Door Lock Actuator	V12	5345	1988-91	<b>33727</b>
XJ-SC Convertible 5.3 V12	Panel Switch	Window Lift Master	V12	5345	1988-91	<b>39980</b>
XJ-SC Convertible 5.3 V12	Column Switch	Wipe/Wash	(LHD) V12	5345	1988-91	<b>SQB995</b>

## JCB

2D Loader (Leyland 384/4)	Panel Switch	3 position lever			>> 1980	<b>31743</b>
2D Loader (Leyland 384/4)	Ignition Switch	Heater-Start, 3 position lever			>> 1980	<b>33940</b>
2D Loader (Leyland 4/65)	Panel Switch	3 position lever			1971-80	<b>31743</b>
2D Loader (Leyland 4/65)	Ignition Switch	Heater-Start, 3 position lever			1971-80	<b>33940</b>
3 Loader (Leyland 384/4)	Panel Switch	3 position lever			1972 >>	<b>31743</b>
3 Loader (Leyland 384/4)	Ignition Switch	Heater-Start, 3 position lever			1972 >>	<b>33940</b>
3 Loader (Leyland 4/65)	Panel Switch	3 position lever			1971 >>	<b>31743</b>
3 Loader (Leyland 4/65)	Ignition Switch	Heater-Start, 3 position lever			1971 >>	<b>33940</b>
3C Loader (Leyland 384/4)	Panel Switch	3 position lever			1972-80	<b>31743</b>
3C Loader (Leyland 384/4)	Ignition Switch	Heater-Start, 3 position lever			1972-80	<b>33940</b>
3C Loader (Leyland 4/65)	Ignition Switch	Heater-Start, 3 position lever			1971 >>	<b>33940</b>
3C Loader (Leyland 4/65)	Panel Switch	3 position lever			1971-80	<b>31743</b>
3CX Backhoe-Loader (Leyland)	Panel Switch	Lighting		3770	1980-81	<b>33742</b>
3CX Backhoe-Loader (Leyland)	Ignition Switch			3770	1980-81	<b>33820</b>
3CX Backhoe-Loader (Leyland)	Panel Switch	Fan		3770	1980-81	<b>33988</b>
3CX Backhoe-Loader (Leyland)	Column Switch	DI, Horn, Lighting		3770	1980-81	<b>SQB992</b>
3CX Backhoe-Loader (Leyland)	Column Switch	Wipe/Wash	Front	3770	1980-81	<b>SQB993</b>
3CX Backhoe-Loader (Perkins 4.236)	Panel Switch	Lighting		3860	1981-90	<b>33742</b>
3CX Backhoe-Loader (Perkins 4.236)	Ignition Switch			3860	1981-90	<b>33820</b>
3CX Backhoe-Loader (Perkins 4.236)	Panel Switch	Fan		3860	1981-90	<b>33988</b>
3CX Backhoe-Loader (Perkins 4.236)	Column Switch	DI, Horn, Lighting		3860	1981-90	<b>SQB992</b>
3CX Backhoe-Loader (Perkins 4.236)	Column Switch	Wipe/Wash		3860	1981-90	<b>SQB993</b>
3D Loader (Leyland 384/4)	Panel Switch	3 position lever			1972-80	<b>31743</b>
3D Loader (Leyland 384/4)	Ignition Switch	Heater-Start, 3 position lever			1972-80	<b>33940</b>
3D Loader (Leyland 4/65)	Panel Switch	3 position lever			1971 >>	<b>31743</b>
3D Loader (Leyland 4/65)	Ignition Switch	Heater-Start, 3 position lever			1971 >>	<b>33940</b>
3D Loader (Leyland 4:98T)	Panel Switch	Lighting		3770	1972 >>	<b>33742</b>
3D Loader (Leyland 4:98T)	Ignition Switch			3770	1972 >>	<b>33820</b>
3D Loader (Leyland 4:98T)	Panel Switch	Fan		3770	1972 >>	<b>33988</b>
3D Loader (Leyland 4:98T)	Column Switch	DI, Horn, Lighting		3770	1972 >>	<b>SQB992</b>
3D Loader (Leyland 4:98T)	Column Switch	Wipe/Wash		3770	1972 >>	<b>SQB993</b>
3D, 3DS Loader (Perkins)	Panel Switch	Lighting		3860	1981 >>	<b>33742</b>
3D, 3DS Loader (Perkins)	Ignition Switch			3860	1981 >>	<b>33820</b>
3D, 3DS Loader (Perkins)	Panel Switch	Fan		3860	1981 >>	<b>33988</b>
3D, 3DS Loader (Perkins)	Column Switch	DI, Horn, Lighting		3860	1981 >>	<b>SQB992</b>
3D, 3DS Loader (Perkins)	Column Switch	Wipe/Wash		3860	1981 >>	<b>SQB993</b>
3DS Loader (Leyland)	Panel Switch	Lighting		3770	1980-81	<b>33742</b>
3DS Loader (Leyland)	Ignition Switch			3770	1980-81	<b>33820</b>
3DS Loader (Leyland)	Panel Switch	Fan		3770	1980-81	<b>33988</b>
3DS Loader (Leyland)	Column Switch	DI, Horn, Lighting		3770	1980-81	<b>SQB992</b>
3DS Loader (Leyland)	Column Switch	Wipe/Wash		3770	1980-81	<b>SQB993</b>
410 Loader	Panel Switch	Lighting, 2 position		3860	1982-94	<b>30829</b>
410 Loader	Ignition Switch			3860	1982-94	<b>33820</b>
410 Loader	Panel Switch	Push		3860	1982-94	<b>SPB106</b>
413 Loader	Ignition Switch	4 position lever		5800	1973-83	<b>35628</b>
413 Loader	Panel Switch	Push		5800	1973-83	<b>SPB106</b>
413 Loader	Panel Switch	Hazard Warning		5800	1980-83	<b>39976</b>
418 Loader (Articulated)	Ignition Switch	4 position lever		5800	1973-83	<b>35628</b>
418 Loader (Articulated)	Panel Switch	Push		5800	1973-83	<b>SPB106</b>
418 Loader (Articulated)	Panel Switch	Hazard Warning		5800	1980-83	<b>39976</b>
420 Loader	Ignition Switch			5800	1982-91	<b>33820</b>
423 Loader, 428, 428C Loader	Ignition Switch	Heater-Start, 4 position lever		11094	1976-87	<b>35670</b>

→



Description

Function

Engine Info

cc

OE

Part No.

→ JCB

430 Loader	Ignition Switch		5800	1983-89	<b>33820</b>
4D Loader (Leyland 384/4)	Panel Switch	3 position lever		1972-80	<b>31743</b>
4D Loader (Leyland 384/4)	Ignition Switch	Heater-Start, 3 position lever		1972-80	<b>33940</b>
4D Loader (Leyland 4/65)	Panel Switch	3 position lever		1969-80	<b>31743</b>
4D Loader (Leyland 4/65)	Ignition Switch	Heater-Start, 3 position lever		1969-80	<b>33940</b>
520 Loadall	Panel Switch	Lighting, 2 position	3770	1975-81	<b>30829</b>
520 Loadall	Ignition Switch	Heater-Start, 4 position lever	3770	1975-81	<b>35670</b>
520-2, 520-4 Loadall	Panel Switch	Lighting, 2 position	3860	1982-87	<b>30829</b>
520-2, 520-4 Loadall	Ignition Switch	Heater-Start, 4 position lever	3860	1982-87	<b>35670</b>
525-2, 525-4 Loadall	Panel Switch	Lighting, 2 position	3860	1982-83	<b>30829</b>
525-2, 525-4 Loadall	Ignition Switch	Heater-Start, 4 position lever	3860	1982-83	<b>35670</b>
525B Loadall	Panel Switch	Lighting, 2 position	3860	1983-87	<b>30829</b>
525B Loadall	Ignition Switch	Heater-Start, 4 position lever	3860	1983-87	<b>35670</b>
530-2, 530-4 Loadall	Panel Switch	Lighting, 2 position	3860	1983-87	<b>30829</b>
530-2, 530-4 Loadall	Ignition Switch	Heater-Start, 4 position lever	3860	1983-87	<b>35670</b>
6C, D Excavator	Solenoid 2ST		5800	1969-73	<b>SRB319</b>
7B, 7C, 8C, 8D Excavator	Solenoid 2ST		5800	1969-73	<b>SRB319</b>
805 Excavator	Ignition Switch	4 position lever		1976-78	<b>35628</b>
805B Excavator	Panel Switch	Lighting, 2 position	5800	1978-82	<b>30829</b>
805B Excavator	Ignition Switch		5800	1978-82	<b>33820</b>
805B Excavator	Panel Switch	Push	5800	1978-82	<b>SPB106</b>
805BT Excavator	Panel Switch	Lighting, 2 position	3860	1982 >>	<b>30829</b>
805BT Excavator	Ignition Switch		3860	1982 >>	<b>33820</b>
805BT Excavator	Panel Switch	Push	3860	1982 >>	<b>SPB106</b>
806, 806B Excavator	Ignition Switch	4 position lever		1973-82	<b>35628</b>
806C Excavator	Ignition Switch	4 position lever	5800	1982 >>	<b>35628</b>
807, 807B Excavator	Ignition Switch	4 position lever		1973-82	<b>35628</b>
807C Excavator	Ignition Switch	4 position lever	5800	1982 >>	<b>35628</b>
808 Excavator	Ignition Switch	4 position lever	5800	1975-82	<b>35628</b>
Chaseside SL1500 F, L Shovel Loader	Solenoid 2ST			1969-70	<b>SRB319</b>
Chaseside SL1750 L Shovel Loader	Solenoid 2ST			1969-70	<b>SRB321</b>
Chaseside SL1750 P Shovel Loader	Solenoid 2ST		5800	1970-73	<b>SRB321</b>

## JENSEN

Interceptor Mk II, FF	Solenoid 4ST		6276	1970-71	<b>SRB335</b>
Interceptor Mk III, SP	Solenoid 4ST		7212	1972-76	<b>SRB335</b>

## JONES CRANES

Iron Fairy Garnet, Opal Mobile Crane	Panel Switch	Lighting		1971-78	<b>31270</b>
Iron Fairy Garnet, Opal Mobile Crane	Body Switch	Foot dip		1971-78	<b>34790</b>
Iron Fairy Garnet, Opal Mobile Crane	Panel Switch	Push		1971-78	<b>SPB160</b>
Iron Fairy Sapphire 6, 7, 8 Ton Mobile Crane	Panel Switch	Lighting		1971-78	<b>31270</b>
Iron Fairy Sapphire 6, 7, 8 Ton Mobile Crane	Body Switch	Foot dip		1971-78	<b>34790</b>
Iron Fairy Sapphire 6, 7, 8 Ton Mobile Crane	Panel Switch	Push		1971-78	<b>SPB160</b>
Iron Fairy Six 6, 8, 10 Ton Mobile Crane	Panel Switch	Lighting		1971-80	<b>31270</b>
Iron Fairy Six 6, 8, 10 Ton Mobile Crane	Body Switch	Foot dip		1971-80	<b>34790</b>
Iron Fairy Six 6, 8, 10 Ton Mobile Crane	Panel Switch	Push		1971-80	<b>SPB160</b>
Iron Fairy Tourmaline	Panel Switch	Lighting		1973-78	<b>31270</b>
Iron Fairy Tourmaline	Body Switch	Foot dip		1973-78	<b>34790</b>
Iron Fairy Tourmaline	Panel Switch	Push		1973-78	<b>SPB160</b>
Zircon Crane	Solenoid 2ST	(Bedford, Perkins)		1971-74	<b>SRB319</b>

## LANCER BOSS

BD20, 23, 26 Fork Lift (LPG)	Ignition Switch	Heater-Start, 4 position lever	6220		<b>35670</b>
BD20, 23, 26 Fork Lift (LPG)	Panel Switch	Pull/Push	6220		<b>SPB104</b>
BD20, 23, 26 Fork Lift (LPG)	Panel Switch	Rotary	6220		<b>SPB120</b>
CD15, 18, 20 Fork Lift (LPG)	Ignition Switch	Heater-Start, 4 position lever	6220		<b>35670</b>
CD15, 18, 20 Fork Lift (LPG)	Panel Switch	Pull/Push	6220		<b>SPB104</b>
CD15, 18, 20 Fork Lift (LPG)	Panel Switch	Rotary	6220		<b>SPB120</b>

## LAND ROVER

Land Rover (109) 2.25	Panel Switch	3 position lever	4 Cyl	2286	1969-84	<b>31788</b>
Land Rover (109) 2.25	Panel Switch	2 position lever	4 Cyl	2286	1969-84	<b>34775</b>
Land Rover (109) 2.25	Ignition Switch	Column Lock Switch	4 Cyl	2286	1972-84	<b>39415</b>
Land Rover (109) 2.25	Column Switch	Wipe/Wash	4 Cyl	2286	1972-84	<b>SQB967</b>
Land Rover (109) 2.25	Panel Switch	2 position lever	4 Cyl	2286	1975-84	<b>SPB200</b>
Land Rover (109) 2.25	Panel Switch	Hazard Warning	4 Cyl	2286	1976-84	<b>39364</b>
Land Rover (109) 2.25	Panel Switch	Hazard Warning	4 Cyl	2286	1984-85	<b>35367</b>
Land Rover (109) 2.25	Column Switch	Lighting	4 Cyl	2286	1984-85	<b>SQB129</b>

→



Description      Function      Engine Info      cc      OE      Part No.

→ LAND ROVER						
Description	Function	Engine Info	cc	OE	Part No.	
Land Rover (109) 2.25	Column Switch	Wipe/Wash	4 Cyl	2286	1984-85	<b>SQB130</b>
Land Rover (109) 2.25	Column Switch	Di, Horn, Lighting	4 Cyl	2286	1984-85	<b>SQB965</b>
Land Rover (109) 2.25	Column Switch	Di, Horn, Lighting (Issue 3)	4 Cyl	2286	1984-85	<b>SQB968</b>
Land Rover (109) 2.25 Diesel	Ignition Switch	Ignition switch Diesel Only		2286	1969-77	<b>39630</b>
Land Rover (109) 2.25 Diesel	Panel Switch	3 position lever	4 Cyl 10J	2286	1969-84	<b>31788</b>
Land Rover (109) 2.25 Diesel	Panel Switch	2 position lever	4 Cyl 10J	2286	1969-84	<b>34775</b>
Land Rover (109) 2.25 Diesel	Ignition Switch	Heater-Start	4 Cyl 10J	2286	1972-84	<b>39413</b>
Land Rover (109) 2.25 Diesel	Column Switch	Wipe/Wash	4 Cyl 10J	2286	1972-84	<b>SQB967</b>
Land Rover (109) 2.25 Diesel	Column Switch	Di, Horn, Lighting (issue 3)	4 Cyl 10J	2286	1972-84	<b>SQB968</b>
Land Rover (109) 2.25 Diesel	Panel Switch	2 position lever	4 Cyl 10J	2286	1975-84	<b>SPB200</b>
Land Rover (109) 2.25 Diesel	Panel Switch	Hazard Warning	4 Cyl 10J	2286	1976-84	<b>39364</b>
Land Rover (109) 2.25 Diesel	Panel Switch	Hazard Warning	4 Cyl 10J	2286	1984-85	<b>35367</b>
Land Rover (109) 2.25 Diesel	Column Switch	Lighting	4 Cyl 10J	2286	1984-85	<b>SQB129</b>
Land Rover (109) 2.25 Diesel	Column Switch	Wipe/Wash	4 Cyl 10J	2286	1984-85	<b>SQB130</b>
Land Rover (109) 2.6, Diesel	Panel Switch	3 position lever	6 Cyl	2625	1969-78	<b>31788</b>
Land Rover (109) 2.6, Diesel	Panel Switch	2 position lever	6 Cyl	2625	1969-78	<b>34775</b>
Land Rover (109) 2.6, Diesel	Ignition Switch	Column Lock Switch	6 Cyl	2625	1972-78	<b>39415</b>
Land Rover (109) 2.6, Diesel	Column Switch	Wipe/Wash	6 Cyl	2625	1972-78	<b>SQB967</b>
Land Rover (109) 2.6, Diesel	Column Switch	Di, Horn, Lighting (issue 3)	6 Cyl	2625	1972-78	<b>SQB968</b>
Land Rover (109) 2.6, Diesel	Panel Switch	2 position lever	6 Cyl	2625	1975-78	<b>SPB200</b>
Land Rover (109) 2.6, Diesel	Panel Switch	Hazard Warning	6 Cyl	2625	1976-78	<b>39364</b>
Land Rover (109) V8	Panel Switch	3 position lever		3528	1980-85	<b>31788</b>
Land Rover (109) V8	Panel Switch	2 position lever		3528	1980-85	<b>34775</b>
Land Rover (109) V8	Ignition Switch	Column Lock Switch		3528	1980-85	<b>39415</b>
Land Rover (109) V8	Panel Switch	2 position lever		3528	1980-85	<b>SPB200</b>
Land Rover (109) V8	Column Switch	Wipe/Wash		3528	1980-85	<b>SQB967</b>
Land Rover (109) V8	Column Switch	Di, Horn, Lighting (issue 3)		3528	1980-85	<b>SQB968</b>
Land Rover (110) 2.25	Panel Switch	3 position level (Forward Control)	4 Cyl	2286	1969-72	<b>31788</b>
Land Rover (110) 2.25	Panel Switch	2 position lever (Forward Control) Front	4 Cyl	2286	1969-72	<b>34775</b>
Land Rover (110) 2.25	Panel Switch	3 position lever	4 Cyl	2286	1983-84	<b>31788</b>
Land Rover (110) 2.25	Panel Switch	2 position lever	4 Cyl	2286	1983-84	<b>34775</b>
Land Rover (110) 2.25	Panel Switch	Hazard Warning	4 Cyl	2286	1983-84	<b>39364</b>
Land Rover (110) 2.25	Ignition Switch	Column Lock Switch	4 Cyl	2286	1983-84	<b>39415</b>
Land Rover (110) 2.25	Panel Switch	2 position lever	4 Cyl	2286	1983-84	<b>SPB200</b>
Land Rover (110) 2.25	Column Switch	Wipe/Wash	4 Cyl	2286	1983-84	<b>SQB967</b>
Land Rover (110) 2.25	Panel Switch	Hazard Warning	4 Cyl	2286	1984-09/85	<b>35367</b>
Land Rover (110) 2.25	Column Switch	Lighting	4 Cyl	2286	1984-09/85	<b>SQB129</b>
Land Rover (110) 2.25	Column Switch	Wipe/Wash	4 Cyl	2286	1984-09/85	<b>SQB130</b>
Land Rover (110) 2.25	Column Switch	Di, Horn, Lighting	4 Cyl	2286	1984-09/85	<b>SQB965</b>
Land Rover (110) 2.25	Column Switch	Di, Horn, Lighting (issue 3)	4 Cyl	2286	1984-09/85	<b>SQB968</b>
Land Rover (110) 2.25 Diesel	Column Switch	Wipe/Wash	4 Cyl 10J	2286	1983-01/84	<b>SQB967</b>
Land Rover (110) 2.25 Diesel	Column Switch	Di, Horn, Lighting (issue 3)	4 Cyl 10J	2286	1983-01/84	<b>SQB968</b>
Land Rover (110) 2.25 Diesel	Panel Switch	3 position lever	4 Cyl 10J	2286	1983-84	<b>31788</b>
Land Rover (110) 2.25 Diesel	Panel Switch	2 position lever	4 Cyl 10J	2286	1983-84	<b>34775</b>
Land Rover (110) 2.25 Diesel	Panel Switch	Hazard Warning	4 Cyl 10J	2286	1983-84	<b>39364</b>
Land Rover (110) 2.25 Diesel	Ignition Switch	Heater-Start	4 Cyl 10J	2286	1983-84	<b>39413</b>
Land Rover (110) 2.25 Diesel	Panel Switch	2 position lever	4 Cyl 10J	2286	1983-84	<b>SPB200</b>
Land Rover (110) 2.25 Diesel	Panel Switch	Hazard Warning	4 Cyl 10J	2286	1984-09/85	<b>35367</b>
Land Rover (110) 2.25 Diesel	Column Switch	Di, Horn, Lighting	4 Cyl 10J	2286	1984-09/85	<b>SQB965</b>
Land Rover (110) 2.25 Diesel	Column Switch	Lighting	4 Cyl 10J	2286	1984-90	<b>SQB129</b>
Land Rover (110) 2.25 Diesel	Column Switch	Wipe/Wash	4 Cyl 10J	2286	1984-90	<b>SQB130</b>
Land Rover (110) 2.5	Panel Switch	Hazard Warning	4 Cyl	2495	09/85-90	<b>35367</b>
Land Rover (110) 2.5	Column Switch	Lighting	4 Cyl	2495	09/85-90	<b>SQB129</b>
Land Rover (110) 2.5	Column Switch	Wipe/Wash	4 Cyl	2495	09/85-90	<b>SQB130</b>
Land Rover (110) 2.5	Column Switch	Di, Horn, Lighting	4 Cyl	2495	09/85-90	<b>SQB965</b>
Land Rover (110) 2.5 Diesel	Ignition Switch	Heater-Start	4 Cyl 12J	2495	1984-90	<b>35288</b>
Land Rover (110) 2.5 Diesel	Ignition Switch	Column Lock Switch	4 Cyl 12J	2495	1984-90	<b>35289</b>
Land Rover (110) 2.5 Diesel	Panel Switch	Hazard Warning	4 Cyl 12J	2495	1984-90	<b>35367</b>
Land Rover (110) 2.5 Diesel	Column Switch	Lighting	4 Cyl 12J	2495	1985-90	<b>SQB129</b>
Land Rover (110) 2.5 Diesel	Column Switch	Wipe/Wash	4 Cyl 12J	2495	1985-90	<b>SQB130</b>
Land Rover (110) 2.5 Diesel	Column Switch	Di, Horn, Lighting	4 Cyl 12J	2495	1985-90	<b>SQB965</b>
Land Rover (110) 2.5 Turbo Diesel	Ignition Switch	Heater-Start	4 Cyl	2495	1986-90	<b>35288</b>
Land Rover (110) 2.5 Turbo Diesel	Ignition Switch	Column Lock Switch	4 Cyl	2495	1986-90	<b>35289</b>
Land Rover (110) 2.5 Turbo Diesel	Panel Switch	Hazard Warning	4 Cyl	2495	1986-90	<b>35367</b>
Land Rover (110) 2.5 Turbo Diesel	Column Switch	Lighting	4 Cyl	2495	1986-90	<b>SQB129</b>
Land Rover (110) 2.5 Turbo Diesel	Column Switch	Wipe/Wash	4 Cyl	2495	1986-90	<b>SQB130</b>
Land Rover (110) 2.5 Turbo Diesel	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1986-90	<b>SQB965</b>
Land Rover (110) V8	Panel Switch	2 position lever		3528	1983-85	<b>34775</b>
Land Rover (110) V8	Panel Switch	Hazard Warning		3528	1983-85	<b>39364</b>







Description

Function

Engine Info

cc

OE

Part No.

→ LAND ROVER

Land Rover (110) V8	Ignition Switch	Column Lock Switch		3528	1983-85	<b>39415</b>
Land Rover (110) V8	Panel Switch	2 position lever		3528	1983-85	<b>SPB200</b>
Land Rover (110) V8	Column Switch	Wipe/Wash		3528	1983-85	<b>SQB967</b>
Land Rover (110) V8	Column Switch	Di, Horn, Lighting	(issue 3)	3528	1983-85	<b>SQB968</b>
Land Rover (110) V8	Panel Switch	Hazard Warning		3528	1985-90	<b>35367</b>
Land Rover (110) V8	Column Switch	Lighting		3528	1985-90	<b>SQB129</b>
Land Rover (110) V8	Column Switch	Wipe/Wash		3528	1985-90	<b>SQB130</b>
Land Rover (110) V8	Column Switch	Di, Horn, Lighting		3528	1985-90	<b>SQB965</b>
Land Rover (88) 2.25, Diesel	Panel Switch	3 position lever	4 Cyl	2286	1969-84	<b>31788</b>
Land Rover (88) 2.25, Diesel	Panel Switch	2 position lever	4 Cyl	2286	1969-84	<b>34775</b>
Land Rover (88) 2.25, Diesel	Ignition Switch	Heater-Start	(Diesel) 4 Cyl 10J	2286	1972-84	<b>39413</b>
Land Rover (88) 2.25, Diesel	Ignition Switch	Column Lock Switch	(Not Diesel) 4 Cyl	2286	1972-84	<b>39415</b>
Land Rover (88) 2.25, Diesel	Column Switch	Wipe/Wash	4 Cyl	2286	1972-84	<b>SQB967</b>
Land Rover (88) 2.25, Diesel	Panel Switch	2 position lever	4 Cyl	2286	1975-84	<b>SPB200</b>
Land Rover (88) 2.25, Diesel	Panel Switch	Hazard Warning	4 Cyl	2286	1976-84	<b>39364</b>
Land Rover (88) 2.25, Diesel	Panel Switch	Hazard Warning	4 Cyl	2286	1984-85	<b>35367</b>
Land Rover (88) 2.25, Diesel	Column Switch	Lighting	4 Cyl	2286	1984-85	<b>SQB129</b>
Land Rover (88) 2.25, Diesel	Column Switch	Wipe/Wash	4 Cyl	2286	1984-85	<b>SQB130</b>
Land Rover (88) 2.25, Diesel	Column Switch	Di, Horn, Lighting	4 Cyl	2286	1984-85	<b>SQB965</b>
Land Rover (88) 2.25, Diesel	Column Switch	Di, Horn, Lighting	(issue 3) 4 Cyl	2286	1984-85	<b>SQB968</b>
Land Rover (90)	Panel Switch	Interior Light Switch			1985-90	<b>36642</b>
Land Rover (90) 2.5	Panel Switch	Hazard Warning	4 Cyl	2495	1985-90	<b>35367</b>
Land Rover (90) 2.5	Column Switch	Lighting	4 Cyl	2495	1985-90	<b>SQB129</b>
Land Rover (90) 2.5	Column Switch	Wipe/Wash	4 Cyl	2495	1985-90	<b>SQB130</b>
Land Rover (90) 2.5	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1985-90	<b>SQB965</b>
Land Rover (90) 2.5 Diesel	Ignition Switch	Heater-Start	4 Cyl 12J	2495	1985-90	<b>35288</b>
Land Rover (90) 2.5 Diesel	Ignition Switch	Column Lock Switch	4 Cyl 12J	2495	1985-90	<b>35289</b>
Land Rover (90) 2.5 Diesel	Panel Switch	Hazard Warning	4 Cyl 12J	2495	1985-90	<b>35367</b>
Land Rover (90) 2.5 Diesel	Column Switch	Lighting	4 Cyl 12J	2495	1985-90	<b>SQB129</b>
Land Rover (90) 2.5 Diesel	Column Switch	Wipe/Wash	4 Cyl 12J	2495	1985-90	<b>SQB130</b>
Land Rover (90) 2.5 Diesel	Column Switch	Di, Horn, Lighting	4 Cyl 12J	2495	1985-90	<b>SQB965</b>
Land Rover (90) 2.5 Turbo Diesel	Ignition Switch	Heater-Start	4 Cyl	2495	1986-90	<b>35288</b>
Land Rover (90) 2.5 Turbo Diesel	Ignition Switch	Column Lock Switch	4 Cyl	2495	1986-90	<b>35289</b>
Land Rover (90) 2.5 Turbo Diesel	Panel Switch	Hazard Warning	4 Cyl	2495	1986-90	<b>35367</b>
Land Rover (90) 2.5 Turbo Diesel	Column Switch	Lighting	4 Cyl	2495	1986-90	<b>SQB129</b>
Land Rover (90) 2.5 Turbo Diesel	Column Switch	Wipe/Wash	4 Cyl	2495	1986-90	<b>SQB130</b>
Land Rover (90) 2.5 Turbo Diesel	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1986-90	<b>SQB965</b>
Land Rover (90) V8	Panel Switch	Hazard Warning	V8	3528	1985-90	<b>35367</b>
Land Rover (90) V8	Column Switch	Lighting	V8	3528	1985-90	<b>SQB129</b>
Land Rover (90) V8	Column Switch	Wipe/Wash	V8	3528	1985-90	<b>SQB130</b>
Land Rover (90) V8	Column Switch	Di, Horn, Lighting	V8	3528	1985-90	<b>SQB965</b>
Land Rover Defender 110 2.5	Ignition Switch	Heater-Start	4 Cyl	2495	1990-92	<b>35288</b>
Land Rover Defender 110 2.5	Panel Switch	Hazard Warning	4 Cyl	2495	1990-92	<b>35367</b>
Land Rover Defender 110 2.5	Column Switch	Wiper, Washer	4 Cyl	2495	1990-92	<b>36641</b>
Land Rover Defender 110 2.5	Panel Switch	Window lift master	4 Cyl	2495	1990-92	<b>39980</b>
Land Rover Defender 110 2.5	Column Switch	Lighting	4 Cyl	2495	1990-92	<b>SQB129</b>
Land Rover Defender 110 2.5	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1990-92	<b>SQB965</b>
Land Rover Defender 110 2.5	Battery Master Switch		4 Cyl	2495	1990-92	<b>SSB110</b>
Land Rover Defender 110 2.5 D	Ignition Switch	Heater-Start	4 Cyl	2495	1990-93	<b>35288</b>
Land Rover Defender 110 2.5 D	Panel Switch	Hazard Warning	4 Cyl	2495	1990-93	<b>35367</b>
Land Rover Defender 110 2.5 D	Column Switch	Wiper, Washer	4 Cyl	2495	1990-93	<b>36641</b>
Land Rover Defender 110 2.5 D	Panel Switch	Window lift master	4 Cyl	2495	1990-93	<b>39980</b>
Land Rover Defender 110 2.5 D	Column Switch	Lighting	4 Cyl	2495	1990-93	<b>SQB129</b>
Land Rover Defender 110 2.5 D	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1990-93	<b>SQB965</b>
Land Rover Defender 110 2.5 D	Battery Master Switch		4 Cyl	2495	1990-93	<b>SSB110</b>
Land Rover Defender 110 2.5 Tdi (300)	Ignition Switch	Heater-Start	4 Cyl	2495	1994-98	<b>35288</b>
Land Rover Defender 110 2.5 Tdi (300)	Panel Switch	Hazard Warning	4 Cyl	2495	1994-98	<b>35367</b>
Land Rover Defender 110 2.5 Tdi (300)	Column Switch	Wiper, Washer	4 Cyl	2495	1994-98	<b>36641</b>
Land Rover Defender 110 2.5 Tdi (300)	Panel Switch	Window lift master	4 Cyl	2495	1994-98	<b>39980</b>
Land Rover Defender 110 2.5 Tdi (300)	Column Switch	Lighting	4 Cyl	2495	1994-98	<b>SQB129</b>
Land Rover Defender 110 2.5 Tdi (300)	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1994-98	<b>SQB965</b>
Land Rover Defender 110 2.5 Tdi (300)	Battery Master Switch		4 Cyl	2495	1994-98	<b>SSB110</b>
Land Rover Defender 110 V8	Ignition Switch	Heater-Start		3528	1990-95	<b>35288</b>
Land Rover Defender 110 V8	Panel Switch	Hazard Warning		3528	1990-95	<b>35367</b>
Land Rover Defender 110 V8	Column Switch	Wiper, Washer		3528	1990-95	<b>36641</b>
Land Rover Defender 110 V8	Panel Switch	Window lift master		3528	1990-95	<b>39980</b>
Land Rover Defender 110 V8	Column Switch	Lighting		3528	1990-95	<b>SQB129</b>
Land Rover Defender 110 V8	Column Switch	Di, Horn, Lighting		3528	1990-95	<b>SQB965</b>
Land Rover Defender 110 V8	Battery Master Switch			3528	1990-95	<b>SSB110</b>

→



Description
Function
Engine Info
cc
OE
Part No.

→ LAND ROVER						
Description	Function	Engine Info	cc	OE	Part No.	
Land Rover Defender 130 2.5 Tdi	Ignition Switch	Heater-Start	4 Cyl	2495	1990-94	<b>35288</b>
Land Rover Defender 130 2.5 Tdi	Panel Switch	Hazard Warning	4 Cyl	2495	1990-94	<b>35367</b>
Land Rover Defender 130 2.5 Tdi	Column Switch	Wiper, Washer	4 Cyl	2495	1990-94	<b>36641</b>
Land Rover Defender 130 2.5 Tdi	Panel Switch	Window lift master	4 Cyl	2495	1990-94	<b>39980</b>
Land Rover Defender 130 2.5 Tdi	Column Switch	Lighting	4 Cyl	2495	1990-94	<b>SQB129</b>
Land Rover Defender 130 2.5 Tdi	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1990-94	<b>SQB965</b>
Land Rover Defender 130 2.5 Tdi	Battery Master Switch		4 Cyl	2495	1990-94	<b>SSB110</b>
Land Rover Defender 130 V8	Ignition Switch	Heater-Start		3528	1990-95	<b>35288</b>
Land Rover Defender 130 V8	Panel Switch	Hazard Warning		3528	1990-95	<b>35367</b>
Land Rover Defender 130 V8	Column Switch	Wiper, Washer		3528	1990-95	<b>36641</b>
Land Rover Defender 130 V8	Panel Switch	Window lift master		3528	1990-95	<b>39980</b>
Land Rover Defender 130 V8	Column Switch	Lighting		3528	1990-95	<b>SQB129</b>
Land Rover Defender 130 V8	Column Switch	Di, Horn, Lighting		3528	1990-95	<b>SQB965</b>
Land Rover Defender 130 V8	Battery Master Switch			3528	1990-95	<b>SSB110</b>
Land Rover Defender 90 2.5, 90 2.5 D, Tdi	Ignition Switch	Heater-Start	4 Cyl	2495	1990-94	<b>35288</b>
Land Rover Defender 90 2.5, 90 2.5 D, Tdi	Panel Switch	Hazard Warning	4 Cyl	2495	1990-94	<b>35367</b>
Land Rover Defender 90 2.5, 90 2.5 D, Tdi	Column Switch	Wiper, Washer	4 Cyl	2495	1990-94	<b>36641</b>
Land Rover Defender 90 2.5, 90 2.5 D, Tdi	Panel Switch	Window lift master	4 Cyl	2495	1990-94	<b>39980</b>
Land Rover Defender 90 2.5, 90 2.5 D, Tdi	Column Switch	Lighting	4 Cyl	2495	1990-94	<b>SQB129</b>
Land Rover Defender 90 2.5, 90 2.5 D, Tdi	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1990-94	<b>SQB965</b>
Land Rover Defender 90 2.5, 90 2.5 D, Tdi	Battery Master Switch		4 Cyl	2495	1990-94	<b>SSB110</b>
Land Rover Defender 90 V8	Ignition Switch	Heater-Start	V8	3528	1990-95	<b>35288</b>
Land Rover Defender 90 V8	Panel Switch	Hazard Warning	V8	3528	1990-95	<b>35367</b>
Land Rover Defender 90 V8	Column Switch	Wiper, Washer	V8	3528	1990-95	<b>36641</b>
Land Rover Defender 90 V8	Panel Switch	Window lift master	V8	3528	1990-95	<b>39980</b>
Land Rover Defender 90 V8	Column Switch	Lighting	V8	3528	1990-95	<b>SQB129</b>
Land Rover Defender 90 V8	Column Switch	Di, Horn, Lighting	V8	3528	1990-95	<b>SQB965</b>
Land Rover Defender 90 V8	Battery Master Switch		V8	3528	1990-95	<b>SSB110</b>
Land Rover Defender 90, 110 Diesel	Ignition Switch	Steering Lock				<b>SSB301</b>
Land Rover Defender 90, 110 Petrol	Ignition Switch	Steering Lock				<b>SSB300</b>
Land Rover Defender all models	Column Switch	Washer Wipers from Vin No VA104806 >>			1990	<b>SQB134</b>
Land Rover Discovery Mpi	Column Switch	Di, Hazard, Horn, Lighting	T16	1995	1994-98	<b>SQB160</b>
Land Rover Discovery Tdi (200)	Column Switch	Di, Hazard, Horn, Lighting		2495	1989-92	<b>SQB106</b>
Land Rover Discovery Tdi (200)	Column Switch	Wipe variable delay, Washer		2495	1989-92	<b>SQB109</b>
Land Rover Discovery Tdi (300)	Column Switch	Wipe/Wash		2495	1994-98	<b>SQB161</b>
Land Rover Discovery V8	Column Switch	Di, Hazard, Horn, Lighting		3528	1989-90	<b>SQB106</b>
Land Rover Discovery V8	Column Switch	Wipe variable delay, Washer		3528	1989-90	<b>SQB109</b>
Land Rover Discovery V8i (3.5)	Column Switch	Di, Hazard, Horn, Lighting		3528	1990-92	<b>SQB106</b>
Land Rover Discovery V8i (3.5)	Column Switch	Wipe variable delay, Washer		3528	1990-92	<b>SQB109</b>
Land Rover Discovery V8i (3.9)	Column Switch	Wipe/Wash		3947	1994-98	<b>SQB161</b>
Land Rover Freelander 1.8i, 2.0XEdi	Column Switch	Di, Hazard, Horn, Lighting			10/97 >>	<b>SQB160</b>
Land Rover Freelander 1.8i, 2.0XEdi	Column Switch	Wipe/Wash			10/97 >>	<b>SQB161</b>
Land Rover Freelander 1.8XEi	Column Switch	Di, Hazard, Horn, Lighting			10/97 >>	<b>SQB160</b>
Land Rover Freelander 1.8XEi	Column Switch	Wipe/Wash			10/97 >>	<b>SQB161</b>
Land Rover Freelander 1.8Xi	Column Switch	Di, Hazard, Horn, Lighting			03/98 >>	<b>SQB160</b>
Land Rover Freelander 1.8Xi	Column Switch	Wipe/Wash			03/98 >>	<b>SQB161</b>
Land Rover Freelander 2.0di	Column Switch	Di, Hazard, Horn, Lighting			10/97 >>	<b>SQB160</b>
Land Rover Freelander 2.0di	Column Switch	Wipe/Wash			10/97 >>	<b>SQB161</b>
Land Rover Freelander 2.0Xdi	Column Switch	Di, Hazard, Horn, Lighting			03/98 >>	<b>SQB160</b>
Land Rover Freelander 2.0Xdi	Column Switch	Wipe/Wash			03/98 >>	<b>SQB161</b>
Range Rover (II) 2.5 D	Column Switch	Wipe/Wash		2497	1994 >>	<b>SQB161</b>
Range Rover (II) 4.0 V8	Column Switch	Wipe/Wash		3947	1994 >>	<b>SQB161</b>
Range Rover (II) 4.6	Column Switch	Wipe/Wash		4552	1994 >>	<b>SQB161</b>
Range Rover 2.4 TD	Panel Switch	Lighting		2393	04/86-90	<b>30713</b>
Range Rover 2.4 TD	Column Switch	Di, Hazard, Lighting		2393	04/86-90	<b>SQB940</b>
Range Rover 2.4 TD	Panel Switch	Lighting		2393	1989-90	<b>54034069</b>
Range Rover 2.4 TD (Phase II)	Column Switch	Di, Horn, Lighting		2393	04/86-90	<b>SQB114</b>
Range Rover 2.5 TD	Panel Switch	Lighting	4 Cyl	2495	1989-92	<b>54034069</b>
Range Rover 2.5 TD	Column Switch	Di, Hazard, Lighting	4 Cyl	2495	1989-92	<b>SQB940</b>
Range Rover 2.5 TD (Phase II)	Column Switch	Di, Horn, Lighting	4 Cyl	2495	1989-92	<b>SQB114</b>
Range Rover 2.5 Tdi	Panel Switch	Lighting	4 Cyl	2495	1992-94	<b>54034069</b>
Range Rover 2.5 Tdi	Column Switch	Di, Hazard, Lighting	4 Cyl	2495	1992-94	<b>SQB940</b>
Range Rover 2.5 Tdi (Phase II)	Column Switch	Di, Horn, Lighting	(LHD) 4 Cyl	2495	1992-94	<b>SQB114</b>
Range Rover 3.5	Column Switch	Lighting		3528	1971-82	<b>SQB117</b>
Range Rover 3.5	Panel Switch	Hazard Warning		3528	1971-84	<b>39364</b>
Range Rover 3.5	Column Switch	Di, Horn, Lighting	Front	3528	1972-85	<b>SQB128</b>
Range Rover 3.5	Column Switch	Di, Hazard, Lighting	Rear	3528	1972-85	<b>SQB940</b>
Range Rover 3.5	Column Switch	Wipe/Wash		3528	1972-85	<b>SQB967</b>
Range Rover 3.5	Column Switch	Di, Horn, Lighting	(LHD)	3528	1974-82	<b>SQB188</b>

→



Description

Function

Engine Info

cc

OE

Part No.

→ LAND ROVER

Range Rover 3.5	Column Switch	Lighting		3528	1983-84	<b>SQB132</b>
Range Rover 3.5	Panel Switch	Lighting	V8	3528	1986-89	<b>30713</b>
Range Rover 3.5	Panel Switch	Lighting		3528	1989	<b>54034069</b>
Range Rover 3.5 (Phase II)	Column Switch	DI, Horn, Lighting	(RHD) V8	3528	1974-82	<b>SQB187</b>
Range Rover 3.5 (Phase II)	Column Switch	DI, Horn, Lighting	(LHD) V8	3528	1984-89	<b>SQB114</b>
Range Rover 3.5 EFI	Panel Switch	Lighting	V8	3528	1986-89	<b>30713</b>
Range Rover 3.5 EFI	Column Switch	DI, Hazard, Lighting	V8	3528	1986-89	<b>SQB940</b>
Range Rover 3.5 EFI	Panel Switch	Lighting	V8	3528	1989	<b>54034069</b>
Range Rover 3.5 EFI (Phase II)	Column Switch	DI, Horn, Lighting	(LHD) V8	3528	1985-89	<b>SQB114</b>
Range Rover 3.9 V8i	Panel Switch	Lighting	V8	3947	1989-94	<b>30713</b>
Range Rover 3.9 V8i	Column Switch	DI, Hazard, Lighting	V8	3947	1989-94	<b>SQB940</b>
Range Rover 3.9 V8i (Phase II)	Column Switch	DI, Horn, Lighting	(LHD)	3947	1989-94	<b>SQB114</b>
Range Rover 4.2 V8i	Panel Switch	Lighting	V8	4278	1992-94	<b>30713</b>
Range Rover 4.2 V8i	Column Switch	DI, Hazard, Lighting	V8	4278	1992-94	<b>SQB940</b>
Range Rover 4.2 V8i (Phase II)	Column Switch	DI, Horn, Lighting		4278	1992-94	<b>SQB114</b>
Range Rover Classic 2.5 Tdi	Column Switch	DI, Hazard, Horn, Lighting		2495	1994-96	<b>SQB160</b>
Range Rover Classic 3.9 V8i	Column Switch	Wipe/Wash		3947	1994-96	<b>SQB161</b>
	Ignition Switch	Steering Lock				<b>SSB302</b>
	Ignition Switch	Steering Lock				<b>SSB303</b>
	Ignition Switch	Steering Lock				<b>SSB304</b>
	Ignition Switch	Steering Lock				<b>SSB305</b>
Land Rover 90, 110, Defender	Column Switch	DI, Horn, Dip, Flash (white Plug)	VIN VA104806 >>		1983>>	<b>SQB500</b>
Land Rover 90, 110, Defender	Column Switch	Fog Light Switch	>> VIN MA949743		1983-1990	<b>SQB701</b>
Land Rover 90, 110, Defender	Panel Switch	Heated Rear Window Switch			1983-1990	<b>SQB705</b>
Land Rover 90, 110, Defender	Column Switch	Side Lights, Main Lights	VIN VA104806 >>			<b>SQB709</b>
Land Rover Defender	Body Switch	Handbrake Warning Switch	Dutch Army			<b>SPB309</b>
Land Rover Defender	Panel Switch	Hazard Warning Light Switch				<b>SQB710</b>
Land Rover Defender	Panel Switch	Heated Rear Window Switch				<b>SQB711</b>
Land Rover Defender	Panel Switch	Fog Light Switch				<b>SQB712</b>
Land Rover Defender	Column Switch	DI, Horn, Dip, Flash (white Plug)				<b>SQB718</b>
Land Rover Discovery	Column Switch	Wiper Switch			1989-94	<b>SQB707</b>
Land Rover series II IIa	Panel Switch	Rotary Light Switch side light head light			1966-1970	<b>SQB700</b>
Range Rover Phase II	Column Switch	Head Light			> 1986	<b>SQB703</b>
Range Rover Phase II	Panel Switch	Hazard Warning Light Switch			> 1986	<b>SQB704</b>
Range Rover Phase II	Panel Switch	Heater Blower Switch 4 position			1989-94	<b>SQB706</b>
Range Rover Phase II	Column Switch	Wiper Switch			1989-94	<b>SQB707</b>
Range Rover Phase II	Panel Switch	H Gate Cover Autotransmission (LHD)			1989-94	<b>SQB714</b>

**LDV**

Sherpa (II) 200/City	Panel Switch	Hazard Warning			1982-89	<b>35367</b>
Sherpa (II) 200/City	Panel Switch	Overdrive			1982-89	<b>39166</b>
Sherpa (II) 230	Panel Switch	Overdrive			1982-89	<b>39166</b>
Sherpa (II) 230	Panel Switch	Hazard Warning			1982-89	<b>35367</b>
Sherpa (II) 250	Panel Switch	Hazard Warning			1982-89	<b>35367</b>
Sherpa (II) 250	Panel Switch	Overdrive			1982-89	<b>39166</b>
Sherpa (II) 255	Panel Switch	Hazard Warning			1982-89	<b>35367</b>
Sherpa (II) 255	Panel Switch	Overdrive			1982-89	<b>39166</b>
Sherpa (II) 280	Panel Switch	Hazard Warning			1982-86	<b>35367</b>
Sherpa (II) 280	Panel Switch	Overdrive			1982-86	<b>39166</b>
Sherpa (II) 285	Panel Switch	Hazard Warning			1983-89	<b>35367</b>
Sherpa (II) 285	Panel Switch	Overdrive			1983-89	<b>39166</b>
Sherpa (II) 310	Panel Switch	Hazard Warning			1983-89	<b>35367</b>
Sherpa (II) 310	Panel Switch	Overdrive			1983-89	<b>39166</b>
Sherpa (II) 350	Panel Switch	Hazard Warning			1985-89	<b>35367</b>
Sherpa (II) 350	Panel Switch	Overdrive			1983-89	<b>39166</b>
Sherpa 185	Solenoid 4ST				1974-78	<b>SRB325</b>
Sherpa 215	Solenoid 4ST				1974-78	<b>SRB325</b>
Sherpa 230	Panel Switch	Overdrive			1982	<b>39166</b>
Sherpa 230	Panel Switch	Hazard Warning			1982	<b>35367</b>
Sherpa 240	Solenoid 4ST				1974-78	<b>SRB325</b>
Sherpa 250	Panel Switch	Hazard Warning			1982	<b>35367</b>
Sherpa 250	Panel Switch	Overdrive			1982	<b>39166</b>
Sherpa 250	Panel Switch	Overdrive			1982	<b>39166</b>
Sherpa 255	Panel Switch	Hazard Warning			1982	<b>35367</b>
Sherpa 255	Panel Switch	Overdrive			1982	<b>39166</b>

**LEYLAND DAF**

Big J4 4-Wheel (6.6L, 8.8L, 10.5L, 12.2L)	Solenoid 4ST			10450	1970-77	<b>SRB351</b>
Big J4T 4-Wheel Tractor Unit	Solenoid 4ST				1970-77	<b>SRB351</b>

→







Description
Function
Engine Info
cc
OE
Part No.

→ LEYLAND DAF						
Description	Function	Engine Info	cc	OE	Part No.	
Big J6 6-Wheel, J8 8-Wheel (8.2L, 9.6L)	Solenoid 4ST			1970-77	<b>SRB351</b>	
Boxer BX0984 Truck	Panel Switch	Fog	5655	03/78-11/82	<b>33816</b>	
Boxer BX0984 Truck	Column Switch	DI, Horn, Lighting	5655	03/78-11/82	<b>SQB992</b>	
Boxer BX0984 Truck	Column Switch	Wipe/Wash	5655	03/78-11/82	<b>SQB993</b>	
Boxer BX0984 Truck	Panel Switch	Lighting	5655	1979-11/82	<b>33742</b>	
Boxer BX1000 Truck	Panel Switch	Hazard Warning	5655	1972-77	<b>30386</b>	
Boxer BX1000 Truck	Ignition Switch		5655	1972-77	<b>31973</b>	
Boxer BX1000 Truck	Solenoid 4ST		(24 V) 5655	1974-77	<b>SRB346</b>	
Boxer BX1043 Truck	Panel Switch	Lighting	5655	03/78-02/84	<b>33742</b>	
Boxer BX1043 Truck	Panel Switch	Fog	5655	03/78-02/84	<b>33816</b>	
Boxer BX1043 Truck	Column Switch	DI, Horn, Lighting	5655	03/78-02/84	<b>SQB992</b>	
Boxer BX1043 Truck	Column Switch	Wipe/Wash	5655	03/78-02/84	<b>SQB993</b>	
Boxer BX1200 Truck	Panel Switch	Hazard Warning	5655	1972-77	<b>30386</b>	
Boxer BX1200 Truck	Ignition Switch		5655	1972-77	<b>31973</b>	
Boxer BX1200 Truck	Solenoid 4ST		(24 V) 5655	1974-77	<b>SRB346</b>	
Boxer BX1235 Truck, Turbo	Panel Switch	Lighting	5655	03/78-03/84	<b>33742</b>	
Boxer BX1235 Truck, Turbo	Panel Switch	Fog	5655	03/78-03/84	<b>33816</b>	
Boxer BX1235 Truck, Turbo	Column Switch	DI, Horn, Lighting	5655	03/78-03/84	<b>SQB992</b>	
Boxer BX1235 Truck, Turbo	Column Switch	Wipe/Wash	5655	03/78-03/84	<b>SQB993</b>	
Boxer BX1300 Truck	Panel Switch	Hazard Warning	5655	1972-77	<b>30386</b>	
Boxer BX1300 Truck	Ignition Switch		5655	1972-77	<b>31973</b>	
Boxer BX1300 Truck	Solenoid 4ST		(24 V) 5655	1974-77	<b>SRB346</b>	
Boxer BX1325 Truck, Turbo	Panel Switch	Lighting	5655	03/78-06/83	<b>33742</b>	
Boxer BX1325 Truck, Turbo	Panel Switch	Fog	5655	03/78-06/83	<b>33816</b>	
Boxer BX1325 Truck, Turbo	Column Switch	DI, Horn, Lighting	5655	03/78-06/83	<b>SQB992</b>	
Boxer BX1325 Truck, Turbo	Column Switch	Wipe/Wash	5655	03/78-06/83	<b>SQB993</b>	
Boxer BX1425	Panel Switch	Hazard Warning		1972-77	<b>30386</b>	
Boxer BX1425	Ignition Switch			1972-77	<b>31973</b>	
Boxer BX1425	Solenoid 4ST		(24 V) 5655	1974-77	<b>SRB346</b>	
Boxer BX1425	Panel Switch	Fog		1978-82	<b>33816</b>	
Boxer BX1425	Column Switch	DI, Horn, Lighting		1978-82	<b>SQB992</b>	
Boxer BX1425	Column Switch	Wipe/Wash		1978-82	<b>SQB993</b>	
Boxer BX1425	Panel Switch	Lighting		1979-82	<b>33742</b>	
Boxer BX1425	Column Switch	Wipe/Wash		1979-82	<b>SQB993</b>	
Boxer BX1450	Panel Switch	Hazard Warning		1975-77	<b>30386</b>	
Boxer BX1450	Ignition Switch			1975-77	<b>31973</b>	
Boxer BX1450	Solenoid 4ST		(24 V) 5655	1975-77	<b>SRB346</b>	
Boxer BX1450	Panel Switch	Fog		1978-82	<b>33816</b>	
Boxer BX1450	Column Switch	DI, Horn, Lighting		1978-82	<b>SQB992</b>	
Boxer BX1450	Column Switch	Wipe/Wash	5655	1978-82	<b>SQB993</b>	
Boxer BX1450	Panel Switch	Lighting		1979-82	<b>33742</b>	
Boxer BX1600 Truck	Panel Switch	Hazard Warning		1972-77	<b>30386</b>	
Boxer BX1600 Truck	Ignition Switch			1972-77	<b>31973</b>	
Boxer BX1600 Truck	Panel Switch	Fog		1978-06/83	<b>33816</b>	
Boxer BX1600 Truck	Column Switch	DI, Horn, Lighting		1978-06/83	<b>SQB992</b>	
Boxer BX1600 Truck	Column Switch	Wipe/Wash		1978-06/83	<b>SQB993</b>	
Boxer BX1600 Truck	Panel Switch	Lighting		1979-06/83	<b>33742</b>	
Boxer BX1600 Truck (Perkins)	Solenoid 4ST		(24 V) 5800	1974-77	<b>SRB346</b>	
Boxer BX16TA Tractor Unit	Panel Switch	Hazard Warning	5655	1971-77	<b>30386</b>	
Boxer BX16TA Tractor Unit	Ignition Switch		5655	1971-77	<b>31973</b>	
Boxer BX16TA Tractor Unit	Solenoid 4ST		(24 V) 5655	1974-77	<b>SRB346</b>	
Boxer BX16TF Tractor Unit	Solenoid 4ST		(24 V) 5655	1974-77	<b>SRB346</b>	
Boxer BX18TF Tractor Unit	Solenoid 4ST		(24 V) 5800	1974-77	<b>SRB346</b>	
Boxer BX19TA, TF Tractor Unit	Solenoid 4ST		(24 V) 5800	1974-77	<b>SRB346</b>	
Boxer BX20TF Tractor Unit	Panel Switch	Hazard Warning	5655	1971-77	<b>30386</b>	
Boxer BX20TF Tractor Unit	Ignition Switch		5655	1971-77	<b>31973</b>	
Boxer BX20TF Tractor Unit	Solenoid 4ST		(24 V) 5655	1974-77	<b>SRB346</b>	
Boxer BX20TF Tractor Unit	Panel Switch	Fog	5655	1978-82	<b>33816</b>	
Boxer BX20TF Tractor Unit	Column Switch	DI, Horn, Lighting	5655	1978-82	<b>SQB992</b>	
Boxer BX20TF Tractor Unit	Column Switch	Wipe/Wash	5655	1978-82	<b>SQB993</b>	
Boxer BX20TF Tractor Unit	Panel Switch	Lighting	5655	1979-82	<b>33742</b>	
Chieftain CH40.13A, 13B, 13C, 13D	Panel Switch	Lighting	6540	06/79-81	<b>33742</b>	
Chieftain CH40.13A, 13B, 13C, 13D	Column Switch	DI, Horn, Lighting	6540	1978-79	<b>SQB992</b>	
Chieftain CH40.13A, 13B, 13C, 13D	Column Switch	Wipe/Wash	6540	1978-79	<b>SQB993</b>	
Chieftain CH40.13A, 13B, 13C, 13D	Solenoid 4ST		6540	1978-81	<b>SRB346</b>	
Chieftain CH40.13L, 13N, 13T, 13XL	Ignition Switch		6540	1974	<b>31973</b>	
Chieftain CH40.19A, 19B	Ignition Switch		6540	1974-77	<b>31973</b>	
Chieftain CH40.19ATR	Ignition Switch		6540	1974-75	<b>31973</b>	
Chieftain CH40.19C	Solenoid 4ST		6540	1978	<b>SRB346</b>	



Refer to Section 2 for full product listing

**Lucas**



Description

Function

Engine Info

cc

OE

Part No.

→ LEYLAND DAF

Chieftain CH40.20A, CH40.20B	Ignition Switch		6540	1974-77	<b>31973</b>	
Chieftain CH40.20A, CH40.20B	Column Switch	DI, Horn, Lighting	6540	1978-01/79	<b>SQB992</b>	
Chieftain CH40.20A, CH40.20B	Column Switch	Wipe/Wash	6540	1978-01/79	<b>SQB993</b>	
Chieftain CH40.20A, CH40.20B	Solenoid 4ST		6540	1978-01/79	<b>SRB346</b>	
Chieftain CH40.20ATR	Ignition Switch		6540	1974-75	<b>31973</b>	
Chieftain CH40.20C, 20D	Column Switch	DI, Horn, Lighting	6540	1978-81	<b>SQB992</b>	
Chieftain CH40.20C, 20D	Column Switch	Wipe/Wash	6540	1978-81	<b>SQB993</b>	
Chieftain CH40.20C, 20D	Solenoid 4ST		6540	1978-81	<b>SRB346</b>	
Chieftain CH41.13A, B	Ignition Switch		6540	1975-77	<b>31973</b>	
Chieftain CH41.13A, B	Column Switch	DI, Horn, Lighting	6540	1978-01/79	<b>SQB992</b>	
Chieftain CH41.13A, B	Column Switch	Wipe/Wash	6540	1978-01/79	<b>SQB993</b>	
Chieftain CH41.13A, B	Solenoid 4ST		6540	1978-10/79	<b>SRB346</b>	
Chieftain CH41.13C	Column Switch	DI, Horn, Lighting	6540	05/78-10/79	<b>SQB992</b>	
Chieftain CH41.13C	Column Switch	Wipe/Wash	6540	05/78-10/79	<b>SQB993</b>	
Chieftain CH41.13C	Solenoid 4ST		6540	1978-10/79	<b>SRB346</b>	
Chieftain CH41.13C	Panel Switch	Lighting	6540	1979	<b>33742</b>	
Chieftain CH41.19A	Ignition Switch		6540	1974-77	<b>31973</b>	
Chieftain CH41.19ATR	Ignition Switch		6540	1975-77	<b>31973</b>	
Chieftain CH41.19ATR	Solenoid 4ST		6540	1978-81	<b>SRB346</b>	
Chieftain CH41.19B	Ignition Switch		6540	1974-77	<b>31973</b>	
Chieftain CH41.20A, CH41.20B	Ignition Switch		6540	1975-77	<b>31973</b>	
Chieftain CH41.20A, CH41.20B	Column Switch	DI, Horn, Lighting	6540	1978-80	<b>SQB992</b>	
Chieftain CH41.20A, CH41.20B	Column Switch	Wipe/Wash	6540	1978-80	<b>SQB993</b>	
Chieftain CH41.20ATR	Ignition Switch		6540	1975-77	<b>31973</b>	
Chieftain CH41.20C, D	Column Switch	DI, Horn, Lighting	6540	1978-81	<b>SQB992</b>	
Chieftain CH41.20C, D	Column Switch	Wipe/Wash	6540	1978-81	<b>SQB993</b>	
Chieftain CH41.20C, D	Panel Switch	Lighting	6540	1978-81	<b>33742</b>	
Clydesdale 2CD40.16A	Ignition Switch		6540	01/77-10/77	<b>31973</b>	
Clydesdale 2CD40.16C	Column Switch	DI, Horn, Lighting	6540	01/79-06/79	<b>SQB992</b>	
Clydesdale 2CD40.16C	Column Switch	Wipe/Wash	6540	01/79-06/79	<b>SQB993</b>	
Clydesdale 2CD40.16D	Panel Switch	Lighting	6540	06/79-81	<b>33742</b>	
Clydesdale 2CD40.16D	Column Switch	DI, Horn, Lighting	6540	06/79-81	<b>SQB992</b>	
Clydesdale 2CD40.16D	Column Switch	Wipe/Wash	6540	06/79-81	<b>SQB993</b>	
Clydesdale 2CD40.16D	Solenoid 4ST		6540	06/79-81	<b>SRB346</b>	
Clydesdale 2CD41.16A	Ignition Switch		6540	01/77-10/77	<b>31973</b>	
Clydesdale 2CD41.16D	Solenoid 4ST		6540	06/79-81	<b>SRB346</b>	
Clydesdale 2CD41.16D	Panel Switch	Lighting	6540	11/79-81	<b>33742</b>	
Clydesdale 2CD41.16D	Column Switch	DI, Horn, Lighting	6540	11/79-81	<b>SQB992</b>	
Clydesdale 2CD41.16D	Column Switch	Wipe/Wash	6540	11/79-81	<b>SQB993</b>	
Clydesdale 2CD41.24A	Ignition Switch		6540	01/77-10/77	<b>31973</b>	
Clydesdale 2CD41.24D	Solenoid 4ST		6540	06/79-81	<b>SRB346</b>	
Clydesdale 2CD41.24D	Panel Switch	Lighting	Leyland 411	6540	11/79-81	<b>33742</b>
Clydesdale 2CD41.24D	Column Switch	DI, Horn, Lighting	6540	11/79-81	<b>SQB992</b>	
Clydesdale 2CD41.24D	Column Switch	Wipe/Wash	6540	11/79-81	<b>SQB993</b>	
Clydesdale E2CD40.16, 41.24	Solenoid 4ST			1978-81	<b>SRB346</b>	
Clydesdale ECD40.14, ECD41.14	Solenoid 4ST			1978-81	<b>SRB346</b>	
Constructor 24.15 6x4 Tipper	Panel Switch	Lighting	6540	11/81-04/86	<b>33742</b>	
Constructor 24.15 6x4 Tipper	Column Switch	DI, Horn, Lighting	6540	11/81-04/86	<b>SQB992</b>	
Constructor 24.15 6x4 Tipper	Column Switch	Wipe/Wash	6540	11/81-04/86	<b>SQB993</b>	
Constructor 24.15 6x4 Tipper	Solenoid 4ST		6540	11/81-04/86	<b>SRB351</b>	
Constructor 24.15 6x4 Tipper	Battery Master Switch		6540	11/81-04/86	<b>SSB101</b>	
Constructor 24.17 6x4 Tipper	Panel Switch	Lighting	6540	09/84-02/89	<b>33742</b>	
Constructor 24.17 6x4 Tipper	Column Switch	DI, Horn, Lighting	6540	09/84-02/89	<b>SQB992</b>	
Constructor 24.17 6x4 Tipper	Column Switch	Wipe/Wash	6540	09/84-02/89	<b>SQB993</b>	
Constructor 24.17 6x4 Tipper	Solenoid 4ST		6540	09/84-02/89	<b>SRB351</b>	
Constructor 24.17 6x4 Tipper	Battery Master Switch		6540	09/84-02/89	<b>SSB101</b>	
Constructor 24.20 6x4 Tipper	Panel Switch	Lighting	8250	1985-10/90	<b>33742</b>	
Constructor 24.20 6x4 Tipper	Column Switch	DI, Horn, Lighting	8250	1985-10/90	<b>SQB992</b>	
Constructor 24.20 6x4 Tipper	Column Switch	Wipe/Wash	8250	1985-10/90	<b>SQB993</b>	
Constructor 24.20 6x4 Tipper	Solenoid 4ST		8250	1985-10/90	<b>SRB351</b>	
Constructor 24.20 6x4 Tipper	Battery Master Switch		8250	1985-10/90	<b>SSB101</b>	
Constructor 24.21 6x4 Tipper	Panel Switch	Lighting	11100	04/81-05/89	<b>33742</b>	
Constructor 24.21 6x4 Tipper	Column Switch	DI, Horn, Lighting	11100	04/81-05/89	<b>SQB992</b>	
Constructor 24.21 6x4 Tipper	Column Switch	Wipe/Wash	11100	04/81-05/89	<b>SQB993</b>	
Constructor 24.21 6x4 Tipper	Solenoid 4ST		11100	04/81-05/89	<b>SRB351</b>	
Constructor 24.21 6x4 Tipper	Battery Master Switch		11100	04/81-05/89	<b>SSB101</b>	
Constructor 24.23 6x4 Tipper	Panel Switch	Lighting	11100	02/85-05/89	<b>33742</b>	
Constructor 24.23 6x4 Tipper	Column Switch	DI, Horn, Lighting	11100	02/85-05/89	<b>33803</b>	
Constructor 24.23 6x4 Tipper	Column Switch	DI, Horn, Lighting	11100	02/85-05/89	<b>SQB992</b>	

→



Description
Function
Engine Info
cc
OE
Part No.

→ LEYLAND DAF						
Description	Function	Engine Info	cc	OE	Part No.	
Constructor 24.23 6x4 Tipper	Column Switch	Wipe/Wash	11100	02/85-05/89	<b>SQB993</b>	
Constructor 24.23 6x4 Tipper	Solenoid 4ST		11100	02/85-05/89	<b>SRB351</b>	
Constructor 24.23 6x4 Tipper	Battery Master Switch		11100	02/85-05/89	<b>SSB101</b>	
Constructor 30.21 8x4 Tipper	Solenoid 4ST		11100	01/80-05/84	<b>SRB351</b>	
Constructor 30.21 8x4 Tipper	Panel Switch	Lighting	11100	1980-05/84	<b>33742</b>	
Constructor 30.21 8x4 Tipper	Column Switch	DI, Horn, Lighting	11100	1980-05/84	<b>SQB992</b>	
Constructor 30.21 8x4 Tipper	Column Switch	Wipe/Wash	11100	1980-05/84	<b>SQB993</b>	
Constructor 30.21 8x4 Tipper	Battery Master Switch		11100	1980-05/84	<b>SSB101</b>	
Constructor 30.23 8x4 Tipper	Panel Switch	Lighting	10450	10/82-11/86	<b>33742</b>	
Constructor 30.23 8x4 Tipper	Column Switch	DI, Horn, Lighting	10450	10/82-11/86	<b>SQB992</b>	
Constructor 30.23 8x4 Tipper	Column Switch	Wipe/Wash	10450	10/82-11/86	<b>SQB993</b>	
Constructor 30.23 8x4 Tipper	Solenoid 4ST		10450	10/82-11/86	<b>SRB351</b>	
Constructor 30.23 8x4 Tipper	Battery Master Switch		10450	10/82-11/86	<b>SSB101</b>	
Constructor 30.25 8x4 Tipper	Panel Switch	Lighting	10013	10/80-09/90	<b>33742</b>	
Constructor 30.25 8x4 Tipper	Column Switch	DI, Horn, Lighting	10013	10/80-09/90	<b>SQB992</b>	
Constructor 30.25 8x4 Tipper	Column Switch	Wipe/Wash	10013	10/80-09/90	<b>SQB993</b>	
Constructor 30.25 8x4 Tipper	Solenoid 4ST		10013	10/80-09/90	<b>SRB351</b>	
Constructor 30.25 8x4 Tipper	Battery Master Switch		10013	10/80-09/90	<b>SSB101</b>	
Constructor 30.26 8x4 Tipper	Panel Switch	Lighting		12/84-10/90	<b>33742</b>	
Constructor 30.26 8x4 Tipper	Column Switch	DI, Horn, Lighting		12/84-10/90	<b>SQB992</b>	
Constructor 30.26 8x4 Tipper	Column Switch	Wipe/Wash		12/84-10/90	<b>SQB993</b>	
Constructor 30.26 8x4 Tipper	Solenoid 4ST			12/84-10/90	<b>SRB351</b>	
Constructor 30.26 8x4 Tipper	Battery Master Switch			12/84-10/90	<b>SSB101</b>	
Constructor 30.26 8x4 Truck	Panel Switch	Lighting	11600	03/89-10/90	<b>33742</b>	
Constructor 30.26 8x4 Truck	Column Switch	DI, Horn, Lighting	11600	03/89-10/90	<b>SQB992</b>	
Constructor 30.26 8x4 Truck	Column Switch	Wipe/Wash	11600	03/89-10/90	<b>SQB993</b>	
Constructor 30.26 8x4 Truck	Battery Master Switch		11600	03/89-10/90	<b>SSB101</b>	
Constructor 30.26 8x4 Truck (Leyland)	Panel Switch	Lighting	11100	12/84-03/89	<b>33742</b>	
Constructor 30.26 8x4 Truck (Leyland)	Column Switch	DI, Horn, Lighting	11100	12/84-03/89	<b>SQB992</b>	
Constructor 30.26 8x4 Truck (Leyland)	Column Switch	Wipe/Wash	11100	12/84-03/89	<b>SQB993</b>	
Constructor 30.26 8x4 Truck (Leyland)	Solenoid 4ST		11100	12/84-03/89	<b>SRB351</b>	
Constructor 30.26 8x4 Truck (Leyland)	Battery Master Switch		11100	12/84-03/89	<b>SSB101</b>	
Constructor 30.27 8x4 Tipper / Truck (Perkins Eagle)	Panel Switch	Lighting	12170	11/86-11/90	<b>33742</b>	
Constructor 30.27 8x4 Tipper / Truck (Perkins Eagle)	Column Switch	DI, Horn, Lighting	12170	11/86-11/90	<b>SQB992</b>	
Constructor 30.27 8x4 Tipper / Truck (Perkins Eagle)	Column Switch	Wipe/Wash	12170	11/86-11/90	<b>SQB993</b>	
Constructor 30.27 8x4 Tipper / Truck (Perkins Eagle)	Solenoid 4ST		12170	11/86-11/90	<b>SRB351</b>	
Constructor 30.27 8x4 Tipper / Truck (Perkins Eagle)	Battery Master Switch		12170	11/86-11/90	<b>SSB101</b>	
Constructor 30.30 8x4 Tipper	Panel Switch	Lighting	12170	03/87-10/90	<b>33742</b>	
Constructor 30.30 8x4 Tipper	Column Switch	DI, Horn, Lighting	12170	03/87-10/90	<b>SQB992</b>	
Constructor 30.30 8x4 Tipper	Column Switch	Wipe/Wash	12170	03/87-10/90	<b>SQB993</b>	
Constructor 30.30 8x4 Tipper	Solenoid 4ST		12170	03/87-10/90	<b>SRB351</b>	
Constructor 30.30 8x4 Tipper	Battery Master Switch		12170	03/87-10/90	<b>SSB101</b>	
Constructor 30.30 8x4 Truck	Panel Switch	Lighting	12170	03/87-10/90	<b>33742</b>	
Constructor 30.30 8x4 Truck	Column Switch	DI, Horn, Lighting	12170	03/87-10/90	<b>SQB992</b>	
Constructor 30.30 8x4 Truck	Column Switch	Wipe/Wash	12170	03/87-10/90	<b>SQB993</b>	
Constructor 30.30 8x4 Truck	Solenoid 4ST		12170	03/87-10/90	<b>SRB351</b>	
Constructor 30.30 8x4 Truck	Battery Master Switch		12170	03/87-10/90	<b>SSB101</b>	
Constructor FAD 80.250 8x4 Rigid (Cummins)	Panel Switch	Lighting	10013	10/90 >>	<b>33742</b>	
Constructor FAD 80.250 8x4 Rigid (Cummins)	Column Switch	DI, Horn, Lighting	10013	10/90 >>	<b>SQB992</b>	
Constructor FAD 80.250 8x4 Rigid (Cummins)	Column Switch	Wipe/Wash	10013	10/90 >>	<b>SQB993</b>	
Constructor FAD 80.250 8x4 Rigid (Cummins)	Battery Master Switch		10013	10/90 >>	<b>SSB101</b>	
Constructor FAD 80.260 8x4 Rigid	Panel Switch	Lighting	11600	10/90 >>	<b>33742</b>	
Constructor FAD 80.260 8x4 Rigid	Column Switch	DI, Horn, Lighting	11600	10/90 >>	<b>SQB992</b>	
Constructor FAD 80.260 8x4 Rigid	Column Switch	Wipe/Wash	11600	10/90 >>	<b>SQB993</b>	
Constructor FAD 80.260 8x4 Rigid	Battery Master Switch		11600	10/90 >>	<b>SSB101</b>	
Constructor FAD 80.270 8x4 Rigid	Panel Switch	Lighting	12170	12/90 >>	<b>33742</b>	
Constructor FAD 80.270 8x4 Rigid	Column Switch	DI, Horn, Lighting	12170	12/90 >>	<b>SQB992</b>	
Constructor FAD 80.270 8x4 Rigid	Column Switch	Wipe/Wash	12170	12/90 >>	<b>SQB993</b>	
Constructor FAD 80.270 8x4 Rigid	Battery Master Switch		12170	12/90 >>	<b>SSB101</b>	
Constructor FAD 80.300 8x4 Rigid	Panel Switch	Lighting	11600	06/91 >>	<b>33742</b>	
Constructor FAD 80.300 8x4 Rigid	Column Switch	DI, Horn, Lighting	11600	06/91 >>	<b>SQB992</b>	
Constructor FAD 80.300 8x4 Rigid	Column Switch	Wipe/Wash	11600	06/91 >>	<b>SQB993</b>	
Constructor FAD 80.300 8x4 Rigid	Battery Master Switch		11600	06/91 >>	<b>SSB101</b>	
Constructor FAD 80.330 8x4 Rigid	Panel Switch	Lighting	11600	12/90 >>	<b>33742</b>	



Refer to Section 2 for full product listing

**Lucas**





Description	Function	Engine Info	cc	OE	Part No.
-------------	----------	-------------	----	----	----------

→ <i>LEYLAND DAF</i>					
Constructor FAD 80.330 8x4 Rigid	Column Switch	DI, Horn, Lighting	11600	12/90 >>	<b>SQB992</b>
Constructor FAD 80.330 8x4 Rigid	Column Switch	Wipe/Wash	11600	12/90 >>	<b>SQB993</b>
Constructor FAD 80.330 8x4 Rigid	Battery Master Switch		11600	12/90 >>	<b>SSB101</b>
Constructor FAT 70.230 6x4 Rigid	Panel Switch	Lighting	8250	10/90 >>	<b>33742</b>
Constructor FAT 70.230 6x4 Rigid	Column Switch	DI, Horn, Lighting	8250	10/90 >>	<b>SQB992</b>
Constructor FAT 70.230 6x4 Rigid	Column Switch	Wipe/Wash	8250	10/90 >>	<b>SQB993</b>
Constructor FAT 70.230 6x4 Rigid	Battery Master Switch		8250	10/90 >>	<b>SSB101</b>
Constructor FAT 80.260 6x4 Rigid	Panel Switch	Lighting	11600	10/90 >>	<b>33742</b>
Constructor FAT 80.260 6x4 Rigid	Column Switch	DI, Horn, Lighting	11600	10/90 >>	<b>SQB992</b>
Constructor FAT 80.260 6x4 Rigid	Column Switch	Wipe/Wash	11600	10/90 >>	<b>SQB993</b>
Constructor FAT 80.260 6x4 Rigid	Battery Master Switch		11600	10/90 >>	<b>SSB101</b>
Cruiser 16.15 Tractor Unit	Column Switch	DI, Horn, Lighting	6540	10/82-07/86	<b>SQB992</b>
Cruiser 16.15 Tractor Unit	Column Switch	Wipe/Wash	6540	10/82-07/86	<b>SQB993</b>
Cruiser 16.17 Tractor Unit	Column Switch	DI, Horn, Lighting	6540	11/84-01/89	<b>SQB992</b>
Cruiser 16.18 Tractor Unit	Column Switch	DI, Horn, Lighting	11100	01/81-09/81	<b>SQB992</b>
Cruiser 16.18 Tractor Unit	Column Switch	Wipe/Wash	11100	01/81-09/81	<b>SQB993</b>
Cruiser 16.21 Tractor Unit	Column Switch	DI, Horn, Lighting	11100	01/81-01/85	<b>SQB992</b>
Cruiser 16.21 Tractor Unit	Column Switch	Wipe/Wash	11100	01/81-01/85	<b>SQB993</b>
Cruiser 16.23 Tractor Unit	Column Switch	DI, Horn, Lighting	11100	01/83-01/89	<b>SQB992</b>
Cruiser 16.26 Tractor Unit	Column Switch	DI, Horn, Lighting	11100	04/85-01/89	<b>SQB992</b>
EA 345 Van (2.5), Diesel	Solenoid 4ST		2520	1973-79	<b>SRB325</b>
EA 345 Van (2.5), Diesel	Ignition Switch	Heater-Start	2520	1975-77	<b>35703</b>
EA 345 Van (2.5), Diesel	Panel Switch	Hazard Warning	2520	1976-77	<b>39279</b>
EA 350 Van (2.5), Diesel	Ignition Switch	Heater-Start	2520	1973-75	<b>35703</b>
EA 350 Van (2.5), Diesel	Solenoid 4ST		2520	1973-79	<b>SRB325</b>
EA 420 Van (2.5)	Ignition Switch	Heater-Start	2520	1973-76	<b>35703</b>
EA 420 Van (2.5)	Solenoid 4ST		2520	1973-79	<b>SRB325</b>
EA 420 Van (2.5)	Panel Switch	Hazard Warning	2520	1976	<b>39279</b>
EA 420 Van (2.5) Diesel	Ignition Switch	Heater-Start	2520	1973-79	<b>35703</b>
EA 420 Van (2.5) Diesel	Solenoid 4ST		2520	1973-79	<b>SRB325</b>
EA 420 Van (2.5) Diesel	Panel Switch	Hazard Warning	2520	1976-79	<b>39279</b>
EA 440 Van (2.5), Diesel	Solenoid 4ST		2520	1973-79	<b>SRB325</b>
EA 440 Van (2.5), Diesel	Ignition Switch	Heater-Start	2520	1973-81	<b>35703</b>
EA 440 Van (2.5), Diesel	Panel Switch	Hazard Warning	2520	1976-81	<b>39279</b>
FG 345 Truck (2.5), Diesel	Panel Switch	Hazard Warning	2520	1975-79	<b>30386</b>
FG 345 Truck (2.5), Diesel	Panel Switch	2 position lever	2520	1975-79	<b>31780</b>
FG 345 Truck (2.5), Diesel	Panel Switch	3 position lever	2520	1975-79	<b>31788</b>
FG 345 Truck (2.5), Diesel	Ignition Switch		2520	1975-79	<b>31973</b>
FG 345 Truck (2.5), Diesel	Panel Switch	3 position lever (Diesel)	2520	1975-79	<b>35940</b>
FG 350 (2.2)	Solenoid 4ST		2199	1973-74	<b>SRB325</b>
FG 350 (2.8) Diesel	Solenoid 4ST		2788	1973-74	<b>SRB325</b>
FG 350 Truck (2.5)	Panel Switch	Hazard Warning	2520	1974-75	<b>30386</b>
FG 350 Truck (2.5)	Panel Switch	2 position lever	2520	1974-75	<b>31780</b>
FG 350 Truck (2.5)	Ignition Switch			1974-75	<b>31973</b>
FG 350 Truck (2.5)	Panel Switch	3 position lever	2520	1974-75	<b>35940</b>
FG 350 Truck (2.5)	Solenoid 4ST		2520	1974-79	<b>SRB325</b>
FG 350 Truck (2.5) Diesel	Panel Switch	2 position lever	2520	1973-75	<b>31780</b>
FG 350 Truck (2.5) Diesel	Panel Switch	3 position lever	2520	1973-75	<b>31788</b>
FG 350 Truck (2.5) Diesel	Ignition Switch		2520	1973-75	<b>31973</b>
FG 350 Truck (2.5) Diesel	Solenoid 4ST		2520	1973-79	<b>SRB325</b>
FG 350 Truck (2.5) Diesel	Panel Switch	Hazard Warning	2520	1974-75	<b>30386</b>
FG 350 Truck (2.5) Diesel	Panel Switch	3 position lever	2520	1974-75	<b>35940</b>
FG 350 Truck (4.0)	Solenoid 4ST			1973-79	<b>SRB325</b>
FG 420 Truck (2.2)	Solenoid 4ST		2199	1973-74	<b>SRB325</b>
FG 420 Truck (2.5)	Panel Switch	Hazard Warning	2520	1974-79	<b>30386</b>
FG 420 Truck (2.5)	Panel Switch	2 position lever	2520	1974-79	<b>31780</b>
FG 420 Truck (2.5)	Panel Switch	3 position lever	2520	1974-79	<b>31788</b>
FG 420 Truck (2.5)	Ignition Switch		2520	1974-79	<b>31973</b>
FG 420 Truck (2.5)	Solenoid 4ST		2520	1974-79	<b>SRB325</b>
FG 420 Truck (2.5) Diesel	Panel Switch	Hazard Warning	2520	1972-79	<b>30386</b>
FG 420 Truck (2.5) Diesel	Panel Switch	2 position lever	2520	1972-79	<b>31780</b>
FG 420 Truck (2.5) Diesel	Ignition Switch		2520	1972-79	<b>31973</b>
FG 420 Truck (2.5) Diesel	Panel Switch	3 position lever	2520	1972-79	<b>35940</b>
FG 420 Truck (2.5) Diesel	Solenoid 4ST		2520	1973-79	<b>SRB325</b>
FG 420 Truck (2.8) Diesel	Solenoid 4ST			1973-74	<b>SRB325</b>
FG 420 Truck (3.8) Diesel	Panel Switch	Hazard Warning	3770	1964-74	<b>30386</b>
FG 420 Truck (3.8) Diesel	Panel Switch	2 position lever	3770	1964-74	<b>31780</b>
FG 420 Truck (3.8) Diesel	Ignition Switch		3770	1964-74	<b>31973</b>
FG 420 Truck (3.8) Diesel	Panel Switch	3 position lever	3770	1964-74	<b>35940</b>

→





Description      Function      Engine Info      cc      OE      Part No.

→ LEYLAND DAF					
Description	Function	Engine Info	cc	OE	Part No.
FG 420 Truck (4.0)	Solenoid 4ST			1973-79	<b>SRB325</b>
FG 550 Truck (3.8) Diesel	Panel Switch	Hazard Warning	3770	1972-79	<b>30386</b>
FG 550 Truck (3.8) Diesel	Panel Switch	2 position lever	3770	1972-79	<b>31780</b>
FG 550 Truck (3.8) Diesel	Ignition Switch		3770	1972-79	<b>31973</b>
FG 550 Truck (3.8) Diesel	Panel Switch	3 position lever	3770	1972-79	<b>35940</b>
FG 550 Truck (3.8) Diesel	Solenoid 4ST		3770	1973-79	<b>SRB325</b>
FG 550 Truck (4.0)	Solenoid 4ST		3993	1973-74	<b>SRB325</b>
FG 700 Truck (3.8) Diesel	Solenoid 4ST		3770	1973-79	<b>SRB325</b>
FG 700 Truck (4.0)	Solenoid 4ST		3993	1973-74	<b>SRB325</b>
FG 900 Truck (4.0), (5.7) Diesel	Solenoid 4ST			1973-74	<b>SRB325</b>
Freighter 11.11, 11.14 Truck	Column Switch	DI, Horn, Lighting	5655	08/83-02/87	<b>SQB992</b>
Freighter 11.13 Truck	Column Switch	DI, Horn, Lighting	5880	04/87-01/88	<b>SQB992</b>
Freighter 11.15 Truck	Column Switch	DI, Horn, Lighting	5880	05/87-10/90	<b>SQB992</b>
Freighter 13.11 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	10/82-03/87	<b>SQB992</b>
Freighter 13.13 Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	01/87-10/90	<b>SQB992</b>
Freighter 13.14 Truck	Column Switch	DI, Horn, Lighting	5655	10/82-01/87	<b>SQB992</b>
Freighter 13.16 Tipper	Column Switch	DI, Horn, Lighting	5880	01/87-11/90	<b>SQB992</b>
Freighter 14.11 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	02/83-07/87	<b>SQB992</b>
Freighter 14.13 Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	04/87-10/90	<b>SQB992</b>
Freighter 14.14 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	10/82-01/87	<b>SQB992</b>
Freighter 14.16 Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	02/87-10/90	<b>SQB992</b>
Freighter 15.11, 15.14 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	08/83-10/86	<b>SQB992</b>
Freighter 16.13, 16.15 Tipper, Truck	Column Switch	DI, Horn, Lighting	6540	11/81-02/88	<b>SQB992</b>
Freighter 16.14 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	06/83-12/86	<b>SQB992</b>
Freighter 16.16 Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	04/87-02/88	<b>SQB992</b>
Freighter 16.17 Tipper, Truck	Column Switch	DI, Horn, Lighting	6540	05/84-02/88	<b>SQB992</b>
Freighter 17.14 Tipper, Truck	Column Switch	DI, Horn, Lighting	6540	02/88-04/89	<b>SQB992</b>
Freighter 17.16 Tipper, Truck	Column Switch	DI, Horn, Lighting	6540	02/88-03/89	<b>SQB992</b>
Freighter 17.16L Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	02/88-10/90	<b>SQB992</b>
Freighter 17.18 Tipper, Tractor Unit, Truck	Column Switch	DI, Horn, Lighting	6200	02/88-10/90	<b>SQB992</b>
Freighter FA50.130 4x2 Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	03/92 >>	<b>SQB992</b>
Freighter FA50.150 4x2 Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	10/90 >>	<b>SQB992</b>
Freighter FA50.160 4x2 Tipper, Truck	Column Switch	DI, Horn, Lighting	5880	03/92 >>	<b>SQB992</b>
Freighter FA60.180 4x2 Tipper, Truck	Column Switch	DI, Horn, Lighting	6200	09/90 >>	<b>SQB992</b>
Freighter FA60.210 4x2 Tipper	Column Switch	DI, Horn, Lighting	6200	06/90 >>	<b>SQB992</b>
Freighter FT60.180 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	6200	02/92 >>	<b>SQB992</b>
J4 180 1500 Diesel, 1600	Solenoid 4ST		1489	1969-71	<b>SRB325</b>
J4 180 1500 Diesel, 1600	Ignition Switch	Heater-Start, 3 position lever		1969-74	<b>33940</b>
J4 180 1500 Diesel, 1600	Body Switch	Foot dip		1969-74	<b>34790</b>
J4 180 1500 Diesel, 1600	Panel Switch	Pull/Push		1969-74	<b>SPB104</b>
J4 180 1500 Diesel, 1600	Panel Switch	Rotary		1969-74	<b>SPB121</b>
J4 180 1500 Diesel, 1600	Panel Switch	Push		1969-74	<b>SPB160</b>
J4 180 1500 Diesel, 1600	Solenoid 4ST		1489	1972-74	<b>SRB335</b>
J4 190 1500 Diesel, 1600	Solenoid 4ST		1489	1969-71	<b>SRB325</b>
J4 190 1500 Diesel, 1600	Ignition Switch	Heater-Start, 3 position lever		1969-74	<b>33940</b>
J4 190 1500 Diesel, 1600	Body Switch	Foot dip	4 Cyl OHV	1969-74	<b>34790</b>
J4 190 1500 Diesel, 1600	Panel Switch	Pull/Push		1969-74	<b>SPB104</b>
J4 190 1500 Diesel, 1600	Panel Switch	Rotary		1969-74	<b>SPB121</b>
J4 190 1500 Diesel, 1600	Panel Switch	Push		1969-74	<b>SPB160</b>
J4 190 1500 Diesel, 1600	Solenoid 4ST		1489	1972-74	<b>SRB335</b>
J4 200 1500 Diesel	Solenoid 4ST		1489	1969-71	<b>SRB325</b>
J4 200 1500 Diesel	Ignition Switch	Heater-Start, 3 position lever	1489	1969-74	<b>33940</b>
J4 200 1500 Diesel	Body Switch	Foot dip	1489	1969-74	<b>34790</b>
J4 200 1500 Diesel	Panel Switch	Pull/Push	1489	1969-74	<b>SPB104</b>
J4 200 1500 Diesel	Panel Switch	Rotary	1489	1969-74	<b>SPB121</b>
J4 200 1500 Diesel	Panel Switch	Push	1489	1969-74	<b>SPB160</b>
J4 200 1500 Diesel	Solenoid 4ST		1489	1972-74	<b>SRB335</b>
J4 200 1600	Ignition Switch	Heater-Start, 3 position lever	1622	1969-74	<b>33940</b>
J4 200 1600	Body Switch	Foot dip	1622	1969-74	<b>34790</b>
J4 200 1600	Panel Switch	Pull/Push	1622	1969-74	<b>SPB104</b>
J4 200 1600	Panel Switch	Rotary	1622	1969-74	<b>SPB121</b>
J4 200 1600	Panel Switch	Push	1622	1969-74	<b>SPB160</b>
JU 250, JU 250 Diesel	Solenoid 4ST		1622	1969-71	<b>SRB325</b>
JU 250, JU 250 Diesel	Solenoid 4ST		1622	1972-74	<b>SRB335</b>
Landmaster 12.12 Truck, 12.15 Truck	Column Switch	DI, Horn, Lighting	5655	1981-90	<b>SQB992</b>
Landmaster 12.12 Truck, 12.15 Truck	Column Switch	Wipe/Wash	5655	1981-90	<b>SQB993</b>
Landtrain 19.21, 19.28	Panel Switch	Lighting	12470	1980-90	<b>33742</b>
Landtrain 19.21, 19.28	Column Switch	DI, Horn, Lighting	12470	1980-90	<b>SQB992</b>
Landtrain 19.21, 19.28	Solenoid 4ST		12470	1980-90	<b>SRB351</b>

→



Description

Function

Engine Info

cc

OE

Part No.

→ LEYLAND DAF

Landtrain 19.21, 19.28	Battery Master Switch		12470	1980-90	<b>SSB101</b>
Landtrain 19.24, 30.21	Solenoid 4ST		12470	1980-90	<b>SRB351</b>
Landtrain 30.24, 30.29	Panel Switch	Lighting	14000	1980-90	<b>33742</b>
Landtrain 30.24, 30.29	Column Switch	DI, Horn, Lighting	14000	1980-90	<b>SQB992</b>
Landtrain 30.24, 30.29	Solenoid 4ST		14000	1980-90	<b>SRB351</b>
Landtrain 30.24, 30.29	Battery Master Switch		14000	1980-90	<b>SSB101</b>
Marathon 2MTC34.25F Tractor Unit	Panel Switch	Lighting	14000	1973-76	<b>30377</b>
Marathon 2MTC34.25F Tractor Unit	Panel Switch	2 position rocker	14000	1973-80	<b>30593</b>
Marathon 2MTC34.25F Tractor Unit	Solenoid 4ST		14000	1973-80	<b>SRB346</b>
Marathon 2MTC38.29F Tractor Unit	Panel Switch	2 position rocker	14000	10/78-01/79	<b>30593</b>
Marathon 2MTC38.29F Tractor Unit	Solenoid 4ST		14000	10/78-01/79	<b>SRB346</b>
Marathon 2MTL38.25F Tractor Unit	Panel Switch	2 position rocker	12473	07/78-04/79	<b>30593</b>
Marathon 2MTL38.25F Tractor Unit	Solenoid 4ST		12473	07/78-04/79	<b>SRB346</b>
Marathon 2MTL38.28F Tractor Unit	Panel Switch	2 position rocker	12473	01/79-04/79	<b>30593</b>
Marathon 2MTL38.28F Tractor Unit	Solenoid 4ST		12473	01/79-04/79	<b>SRB346</b>
Marathon 2MTL38.28FS Tractor Unit	Solenoid 4ST		12473	05/76-10/77	<b>SRB351</b>
Marathon 2MTL38.28FS Tractor Unit	Panel Switch	Lighting	12473	1973-76	<b>30377</b>
Marathon 2MTL38.28FS Tractor Unit	Panel Switch	2 position rocker	12473	05/76-10/77	<b>30593</b>
Marathon 2MTR38.26F Tractor Unit	Solenoid 4ST		12170	05/78-12/80	<b>SRB351</b>
Marathon 2MTR38.26F Tractor Unit	Panel Switch	2 position rocker	12170	05/78-12/80	<b>30593</b>
Marathon MTC34.23F Tractor Unit	Panel Switch	2 position rocker	14000	07/73-09/80	<b>30593</b>
Marathon MTC34.23F Tractor Unit	Solenoid 4ST		14000	07/73-09/80	<b>SRB351</b>
Marathon MTC34.23F Tractor Unit	Panel Switch	Lighting	14000	07/73-76	<b>30377</b>
Marathon MTC34.25F Tractor Unit	Panel Switch	2 position rocker	14000	07/77-09/80	<b>30593</b>
Marathon MTC34.25F Tractor Unit	Solenoid 4ST		14000	07/77-09/80	<b>SRB351</b>
Marathon MTL38.28F Tractor Unit	Panel Switch	2 position rocker	12473	01/75-10/77	<b>30593</b>
Marathon MTL38.28F Tractor Unit	Solenoid 4ST		12473	01/75-10/77	<b>SRB351</b>
Marathon MTL38.28F Tractor Unit	Panel Switch	Lighting	12473	01/75-76	<b>30377</b>
Marathon MTR34.22F Tractor Unit	Panel Switch	2 position rocker	12170	05/76-10/77	<b>30593</b>
Marathon MTR34.22F Tractor Unit	Solenoid 4ST		12170	05/76-10/77	<b>SRB351</b>
Marathon MTR34.22F Tractor Unit	Panel Switch	Lighting	12170	1976	<b>30377</b>
Mastiff MS1600 Truck, MS2600, MS2800 Tractor Unit	Ignition Switch		8830	03/69-81	<b>31973</b>
Mastiff MS1600 Truck, MS2600, MS2800 Tractor Unit	Column Switch	DI, Horn, Lighting	8830	1978-81	<b>SQB992</b>
Mastiff MS1600 Truck, MS2600, MS2800 Tractor Unit	Column Switch	Wipe/Wash	8830	1978-81	<b>SQB993</b>
Mastiff MS1600 Truck, MS2600, MS2800 Tractor Unit	Panel Switch	Lighting	8830	1979-81	<b>33742</b>
National Single Deck Bus (Mk1)	Column Switch	Di, Horn, Lighting		1973-78	<b>35497</b>
Reiver 2RE41.22A Six Wheeler	Ignition Switch		6540	01/77-10/77	<b>31973</b>
Reiver 2RE41.22C Six Wheeler	Column Switch	DI, Horn, Lighting	6540	05/78-10/78	<b>SQB992</b>
Reiver 2RE41.22C Six Wheeler	Column Switch	Wipe/Wash	6540	05/78-10/78	<b>SQB993</b>
Reiver 2RE41.22C Six Wheeler	Solenoid 4ST		6540	05/78-10/78	<b>SRB346</b>
Reiver 2RE41.24A Six Wheeler	Ignition Switch		6540	01/77-10/77	<b>31973</b>
Reiver 2RE41.24B Six Wheeler	Column Switch	DI, Horn, Lighting	6540	10/77-05/78	<b>SQB992</b>
Reiver 2RE41.24B Six Wheeler	Column Switch	Wipe/Wash	6540	10/77-05/78	<b>SQB993</b>
Reiver 2RE41.24B Six Wheeler	Ignition Switch		6540	1969-81	<b>31973</b>
Reiver 2RE41.24C, 2RE41.24D Six Wheeler	Column Switch	DI, Horn, Lighting	6540	05/78-01/79	<b>SQB992</b>
Reiver 2RE41.24C, 2RE41.24D Six Wheeler	Column Switch	Wipe/Wash	6540	05/78-01/79	<b>SQB993</b>
Reiver 2RE41.24C, 2RE41.24D Six Wheeler	Solenoid 4ST		6540	05/78-01/79	<b>SRB346</b>
Reiver 2RE41.24C, 2RE41.24D Six Wheeler	Panel Switch	Lighting	6540	1978-08/82	<b>33742</b>
Roadrunner 10.12 Truck	Column Switch	DI, Horn, Lighting	5655	09/85-06/86	<b>SQB801</b>
Roadrunner 6.10 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	04/84-86	<b>SQB801</b>
Roadrunner 6.12 Tipper, Truck (Leyland 6:98NV)	Column Switch	DI, Horn, Lighting	5655	08/84-86	<b>SQB801</b>
Roadrunner 8.10, 8.12 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	08/84-03/86	<b>SQB801</b>
Roadrunner 8.12 Tipper, Truck (Leyland 301)	Column Switch	DI, Horn, Lighting	5880	02/86-91	<b>SQB801</b>
Roadrunner FA45.120, 130, 150, 160 4x2 Drawbar, Tipper, Truck	Column Switch	Di, Horn, Lighting	5880	04/91 >>	<b>SQB964</b>
Roadtrain 16.25 Tractor Unit (Cummins, Leyland, R-Royce)	Panel Switch	Lighting	14000	08/80-84	<b>33742</b>
Roadtrain 16.25 Tractor Unit (Cummins, Leyland, R-Royce)	Column Switch	DI, Horn, Lighting	14000	08/80-84	<b>SQB992</b>
Roadtrain 16.25 Tractor Unit (Cummins, Leyland, R-Royce)	Column Switch	Wipe/Wash	14000	08/80-84	<b>SQB993</b>
Roadtrain 16.25 Tractor Unit (Cummins, Leyland, R-Royce)	Solenoid 4ST		14000	08/80-84	<b>SRB351</b>
Roadtrain 16.25 Tractor Unit (Cummins, Leyland, R-Royce)	Battery Master Switch		14000	08/80-84	<b>SSB101</b>







Description
Function
Engine Info
cc
OE
Part No.

→ LEYLAND DAF					
Description	Function	Engine Info	cc	OE	Part No.
Roadtrain 16.28 Tractor Unit	Solenoid 4ST		14000	01/80-84	<b>SRB351</b>
Roadtrain 16.28 Tractor Unit	Panel Switch	Lighting	14000	1980-84	<b>33742</b>
Roadtrain 16.28 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	1980-84	<b>SQB992</b>
Roadtrain 16.28 Tractor Unit	Column Switch	Wipe/Wash	14000	1980-84	<b>SQB993</b>
Roadtrain 16.28 Tractor Unit	Battery Master Switch		14000	1980-84	<b>SSB101</b>
Roadtrain 17.25 Tractor Unit	Panel Switch	Lighting	14000	05/83-01/84	<b>33742</b>
Roadtrain 17.25 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	05/83-01/84	<b>SQB992</b>
Roadtrain 17.25 Tractor Unit	Column Switch	Wipe/Wash	14000	05/83-01/84	<b>SQB993</b>
Roadtrain 17.25 Tractor Unit	Solenoid 4ST		14000	05/83-01/84	<b>SRB351</b>
Roadtrain 17.25 Tractor Unit	Battery Master Switch		14000	05/83-01/84	<b>SSB101</b>
Roadtrain 17.27 Tractor Unit	Panel Switch	Lighting	12170	11/86-05/90	<b>33742</b>
Roadtrain 17.27 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	11/86-05/90	<b>SQB992</b>
Roadtrain 17.27 Tractor Unit	Column Switch	Wipe/Wash	12170	11/86-05/90	<b>SQB993</b>
Roadtrain 17.27 Tractor Unit	Solenoid 4ST		12170	11/86-05/90	<b>SRB351</b>
Roadtrain 17.27 Tractor Unit	Battery Master Switch		12170	11/86-05/90	<b>SSB101</b>
Roadtrain 17.28 Tractor Unit (Cummins L10-250)	Panel Switch	Lighting	10013	01/87-09/90	<b>33742</b>
Roadtrain 17.28 Tractor Unit (Cummins L10-250)	Column Switch	DI, Horn, Lighting	10013	01/87-09/90	<b>SQB992</b>
Roadtrain 17.28 Tractor Unit (Cummins L10-250)	Column Switch	Wipe/Wash	10013	01/87-09/90	<b>SQB993</b>
Roadtrain 17.28 Tractor Unit (Cummins L10-250)	Solenoid 4ST		10013	01/87-09/90	<b>SRB351</b>
Roadtrain 17.28 Tractor Unit (Cummins L10-250)	Battery Master Switch		10013	01/87-09/90	<b>SSB101</b>
Roadtrain 17.28 Tractor Unit (Cummins NTE290)	Panel Switch	Lighting	14000	03/83-01/87	<b>33742</b>
Roadtrain 17.28 Tractor Unit (Cummins NTE290)	Column Switch	DI, Horn, Lighting	14000	03/83-01/87	<b>SQB992</b>
Roadtrain 17.28 Tractor Unit (Cummins NTE290)	Column Switch	Wipe/Wash	14000	03/83-01/87	<b>SQB993</b>
Roadtrain 17.28 Tractor Unit (Cummins NTE290)	Solenoid 4ST		14000	03/83-01/87	<b>SRB351</b>
Roadtrain 17.28 Tractor Unit (Cummins NTE290)	Battery Master Switch		14000	03/83-01/87	<b>SSB101</b>
Roadtrain 17.28 Tractor Unit (R-Royce)	Panel Switch	Lighting	12170	03/83-01/84	<b>33742</b>
Roadtrain 17.28 Tractor Unit (R-Royce)	Column Switch	DI, Horn, Lighting	12170	03/83-01/84	<b>SQB992</b>
Roadtrain 17.28 Tractor Unit (R-Royce)	Column Switch	Wipe/Wash	12170	03/83-01/84	<b>SQB993</b>
Roadtrain 17.28 Tractor Unit (R-Royce)	Solenoid 4ST		12170	03/83-01/84	<b>SRB351</b>
Roadtrain 17.28 Tractor Unit (R-Royce)	Battery Master Switch		12170	03/83-01/84	<b>SSB101</b>
Roadtrain 17.29 Tractor Unit	Panel Switch	Lighting	12170	02/84-10/86	<b>33742</b>
Roadtrain 17.29 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	02/84-10/86	<b>SQB992</b>
Roadtrain 17.29 Tractor Unit	Column Switch	Wipe/Wash	12170	02/84-10/86	<b>SQB993</b>
Roadtrain 17.29 Tractor Unit	Solenoid 4ST		12170	02/84-10/86	<b>SRB351</b>
Roadtrain 17.29 Tractor Unit	Battery Master Switch		12170	02/84-10/86	<b>SSB101</b>
Roadtrain 17.30 Tractor Unit	Panel Switch	Lighting	12170	08/86-10/90	<b>33742</b>
Roadtrain 17.30 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	08/86-10/90	<b>SQB992</b>
Roadtrain 17.30 Tractor Unit	Column Switch	Wipe/Wash	12170	08/86-10/90	<b>SQB993</b>
Roadtrain 17.30 Tractor Unit	Solenoid 4ST		12170	08/86-10/90	<b>SRB351</b>
Roadtrain 17.30 Tractor Unit	Battery Master Switch		12170	08/86-10/90	<b>SSB101</b>
Roadtrain 17.32 Tractor Unit	Panel Switch	Lighting	14000	11/85-01/89	<b>33742</b>
Roadtrain 17.32 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	11/85-01/89	<b>SQB992</b>
Roadtrain 17.32 Tractor Unit	Column Switch	Wipe/Wash	14000	11/85-01/89	<b>SQB993</b>
Roadtrain 17.32 Tractor Unit	Solenoid 4ST		14000	11/85-01/89	<b>SRB351</b>
Roadtrain 17.32 Tractor Unit	Battery Master Switch		14000	11/85-01/89	<b>SSB101</b>
Roadtrain 17.34 Tractor Unit	Panel Switch	Lighting	10000	10/84-10/86	<b>33742</b>
Roadtrain 17.34 Tractor Unit	Column Switch	DI, Horn, Lighting	10000	10/84-10/86	<b>SQB992</b>
Roadtrain 17.34 Tractor Unit	Column Switch	Wipe/Wash	10000	10/84-10/86	<b>SQB993</b>
Roadtrain 17.34 Tractor Unit	Solenoid 4ST		10000	10/84-10/86	<b>SRB351</b>
Roadtrain 17.34 Tractor Unit	Battery Master Switch		10000	10/84-10/86	<b>SSB101</b>
Roadtrain 17.35 Tractor Unit	Panel Switch	Lighting	12170	08/86-01/89	<b>33742</b>
Roadtrain 17.35 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	08/86-01/89	<b>SQB992</b>
Roadtrain 17.35 Tractor Unit	Column Switch	Wipe/Wash	12170	08/86-01/89	<b>SQB993</b>
Roadtrain 17.35 Tractor Unit	Solenoid 4ST		12170	08/86-01/89	<b>SRB351</b>
Roadtrain 17.35 Tractor Unit	Battery Master Switch		12170	08/86-01/89	<b>SSB101</b>
Roadtrain 20.29, 20.32 6x2 Tractor Unit	Panel Switch	Lighting	10013	01/86-01/89	<b>33742</b>
Roadtrain 20.29, 20.32 6x2 Tractor Unit	Column Switch	DI, Horn, Lighting	10013	01/86-01/89	<b>SQB992</b>
Roadtrain 20.29, 20.32 6x2 Tractor Unit	Column Switch	Wipe/Wash	10013	01/86-01/89	<b>SQB993</b>
Roadtrain 20.29, 20.32 6x2 Tractor Unit	Solenoid 4ST		10013	01/86-01/89	<b>SRB351</b>

→



Description

Function

Engine Info

cc

OE

Part No.

→ LEYLAND DAF

Roadtrain 20.29, 20.32 6x2 Tractor Unit	Battery Master Switch		10013	01/86-01/89	<b>SSB101</b>
Roadtrain 20.33 6x2 Tractor Unit	Solenoid 4ST		12170	02/88-12/90	<b>SRB351</b>
Roadtrain 20.33 6x2 Tractor Unit	Panel Switch	Lighting	12170	02/88-90	<b>33742</b>
Roadtrain 20.33 6x2 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	02/88-90	<b>SQB992</b>
Roadtrain 20.33 6x2 Tractor Unit	Column Switch	Wipe/Wash	12170	02/88-90	<b>SQB993</b>
Roadtrain 20.33 6x2 Tractor Unit	Battery Master Switch		12170	02/88-90	<b>SSB101</b>
Roadtrain 20.34 6x2 Tractor Unit	Solenoid 4ST		12170	01/86-89	<b>SRB351</b>
Roadtrain 20.34 6x2 Tractor Unit	Panel Switch	Lighting	12170	1986-89	<b>33742</b>
Roadtrain 20.34 6x2 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	1986-89	<b>SQB992</b>
Roadtrain 20.34 6x2 Tractor Unit	Column Switch	Wipe/Wash	12170	1986-89	<b>SQB993</b>
Roadtrain 20.34 6x2 Tractor Unit	Battery Master Switch		12170	1986-89	<b>SSB101</b>
Roadtrain 20.35 6x2 Tractor Unit	Panel Switch	Lighting	12170	11/86-01/89	<b>33742</b>
Roadtrain 20.35 6x2 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	11/86-01/89	<b>SQB992</b>
Roadtrain 20.35 6x2 Tractor Unit	Column Switch	Wipe/Wash	12170	11/86-01/89	<b>SQB993</b>
Roadtrain 20.35 6x2 Tractor Unit	Solenoid 4ST		12170	11/86-01/89	<b>SRB351</b>
Roadtrain 20.35 6x2 Tractor Unit	Battery Master Switch		12170	11/86-01/89	<b>SSB101</b>
Super Mastiff SM2200 6x4 Tipper, Truck	Ignition Switch		8830	10/72-11/79	<b>31973</b>
Super Mastiff SM2200 6x4 Tipper, Truck	Panel Switch	Lighting	8830	1978-08/82	<b>33742</b>
Super Mastiff SM2200 6x4 Tipper, Truck	Column Switch	DI, Horn, Lighting	8830	1978-11/79	<b>SQB992</b>
Super Mastiff SM2200 6x4 Tipper, Truck	Column Switch	Wipe/Wash	8830	1978-11/79	<b>SQB993</b>
Super Mastiff SM2400 6x4 Tipper, Truck	Ignition Switch		8830	10/72-81	<b>31973</b>
Super Mastiff SM2400 6x4 Tipper, Truck	Column Switch	DI, Horn, Lighting	8830	1978-81	<b>SQB992</b>
Super Mastiff SM2400 6x4 Tipper, Truck	Column Switch	Wipe/Wash	8830	1978-81	<b>SQB993</b>
Super Mastiff SM2400 6x4 Tipper, Truck	Panel Switch	Lighting	8830	1979-10/83	<b>33742</b>
Terrier TR650 4x2 Tipper, Truck	Ignition Switch			09/72-07/84	<b>31973</b>
Terrier TR650 4x2 Tipper, Truck	Panel Switch	Hazard Warning		09/72-77	<b>30386</b>
Terrier TR650 4x2 Tipper, Truck	Panel Switch	Fog		1978-07/84	<b>33816</b>
Terrier TR650 4x2 Tipper, Truck	Column Switch	DI, Horn, Lighting		1978-07/84	<b>SQB992</b>
Terrier TR650 4x2 Tipper, Truck	Column Switch	Wipe/Wash		1978-07/84	<b>SQB993</b>
Terrier TR650 4x2 Tipper, Truck	Panel Switch	Lighting		1979-07/84	<b>33742</b>
Terrier TR738 4x2 Tipper, Truck	Ignition Switch			03/73-09/84	<b>31973</b>
Terrier TR738 4x2 Tipper, Truck	Panel Switch	Hazard Warning		03/73-77	<b>30386</b>
Terrier TR738 4x2 Tipper, Truck	Panel Switch	Fog		1978-09/84	<b>33816</b>
Terrier TR738 4x2 Tipper, Truck	Column Switch	DI, Horn, Lighting		1978-09/84	<b>SQB992</b>
Terrier TR738 4x2 Tipper, Truck	Column Switch	Wipe/Wash		1978-09/84	<b>SQB993</b>
Terrier TR738 4x2 Tipper, Truck	Panel Switch	Lighting	3770	1979-09/84	<b>33742</b>
Terrier TR850 4x2 Tipper, Truck	Ignition Switch		5655	09/72-11/83	<b>31973</b>
Terrier TR850 4x2 Tipper, Truck	Panel Switch	Hazard Warning	5655	09/72-77	<b>30386</b>
Terrier TR850 4x2 Tipper, Truck	Panel Switch	Fog	5655	1978-11/83	<b>33816</b>
Terrier TR850 4x2 Tipper, Truck	Column Switch	DI, Horn, Lighting	5655	1978-11/83	<b>SQB992</b>
Terrier TR850 4x2 Tipper, Truck	Column Switch	Wipe/Wash	5655	1978-11/83	<b>SQB993</b>
Terrier TR850 4x2 Tipper, Truck	Panel Switch	Lighting	5655	1979-11/83	<b>33742</b>
Terrier TR950 4x2 Tipper, Truck	Ignition Switch		5655	09/72-06/84	<b>31973</b>
Terrier TR950 4x2 Tipper, Truck	Panel Switch	Hazard Warning	5655	09/72-77	<b>30386</b>
Terrier TR950 4x2 Tipper, Truck	Panel Switch	Fog	5655	1978-06/84	<b>33816</b>
Terrier TR950 4x2 Tipper, Truck	Panel Switch	Lighting	5655	1979-06/84	<b>33742</b>
Titan TL11 6LXB Double Deck Bus	Column Switch	Di, Horn, Lighting		1979 >>	<b>35497</b>
WF 360 Truck (2.2), (2.5) Diesel	Solenoid 4ST			1973-74	<b>SRB325</b>
WF 420 Truck (2.5), (2.5) Diesel	Solenoid 4ST		2520	1974-75	<b>SRB325</b>
WF 420 Truck (3.8) Diesel	Solenoid 4ST		3770	1973-75	<b>SRB325</b>
WF 830 Truck (4.0)	Solenoid 4ST		3993	1973-74	<b>SRB325</b>
WF 830 Truck (5.7) Diesel	Solenoid 4ST		5655	1973-75	<b>SRB325</b>

## LINER CONCRETE

10NTR Mixer (Lister-Petter PH2, SR2)	Ignition Switch		PH2	1976 >>	<b>34680</b>
7T Mixer (Lister-Petter PH1, SR1)	Ignition Switch		PH1	1976 >>	<b>34680</b>
Giraffe Forklift	Ignition Switch		2711E	4150 1976 >>	<b>34680</b>
Giraffe Forklift	Panel Switch	Rotary	2711E	4150 1976 >>	<b>SPB121</b>
Giraffe Forklift	Panel Switch	Horn/Dip	2711E	4150 1976 >>	<b>SPB140</b>

## LOTUS

Eclat 2.0	Panel Switch	2 position rocker	1973	1975-80	<b>39824</b>
Eclat 2.2	Panel Switch	2 position rocker	2174	1980	<b>39824</b>
Elan Plus 2, 2S	Solenoid 4ST		1558	1969-70	<b>SRB325</b>
Elan Plus 2, 2S	Solenoid 4ST		(2S) 1558	1970-71	<b>SRB335</b>
Elan Plus 2S 130	Solenoid 4ST		1558	1971-74	<b>SRB335</b>
Elan S4	Solenoid 4ST		1558	1969-70	<b>SRB325</b>
Elan S4	Solenoid 4ST		1558	1970-71	<b>SRB335</b>
Elan Sprint	Solenoid 4ST		1558	1971-73	<b>SRB335</b>

→



Description
Function
Engine Info
cc
OE
Part No.

→ LOTUS

Elite 2.0	Panel Switch	2 position rocker	4 Cyl DOHC	1973	1974-80	<b>39824</b>
Elite 2.2	Panel Switch	2 position rocker	4 Cyl DOHC	2174	1980	<b>39824</b>
Esprit S1 2.0	Panel Switch	3 position lever	907	1973	1976-78	<b>39823</b>
Esprit S1 2.0	Panel Switch	2 position rocker	907	1973	1976-78	<b>39824</b>
Esprit S1 2.0 (Mk II)	Panel Switch	Lighting	907	1973	1978	<b>34224</b>
Esprit S2 2.0	Panel Switch	3 position lever		1973	1978-80	<b>39823</b>
Esprit S2 2.0	Panel Switch	2 position rocker		1973	1978-80	<b>39824</b>
Esprit S2 2.0 (Mk II)	Panel Switch	Lighting		1973	1978-80	<b>34224</b>
Esprit S3 (Facelift) 2.2 SE	Panel Switch	Window lift		2174	1987-92	<b>33852</b>
Esprit S3 (Facelift) 2.2 Turbo	Panel Switch	Window lift		2174	1987-90	<b>33852</b>
Esprit S3 (Facelift) 2.2 Turbo S	Panel Switch	Window lift		2174	1990-91	<b>33852</b>
Esprit S3 (Facelift) 2.2 Turbo SE	Panel Switch	Window lift		2174	1989-92	<b>33852</b>
Esprit S3 2.2	Panel Switch	Window lift		2174	1980-87	<b>33852</b>
Esprit S3 2.2 SE	Panel Switch	Window lift		2174	1985-87	<b>33852</b>
Esprit S3 2.2 Turbo	Panel Switch	Window lift		2174	1983-87	<b>33852</b>

### LTi CARBODIES

FL2 Hire Car 2.25D	Solenoid 4ST			2286	1972-73	<b>SRB325</b>
FL2 Hire Car 2.25D	Panel Switch	2 position lever	4 Cyl 22E	2286	1972-85	<b>31780</b>
FL2 Hire Car 2.25D	Panel Switch	Hazard Warning	4 Cyl 22E	2286	1978-85	<b>39976</b>
FL2 Hire Car 2.25D	Panel Switch	Door Lock Actuator	4 Cyl 22E	2286	1979-85	<b>33727</b>
FL2 Hire Car 2.25D	Panel Switch	3 position lever	4 Cyl 22E	2286	1981-85	<b>35927</b>
FL2 Hire Car 2.2D (55, 68 bhp)	Solenoid 4ST			2178	1969-72	<b>SRB325</b>
FX Fairway 2.7D	Panel Switch	Lighting	TD 27	2663	1987 >>	<b>30713</b>
FX Fairway 2.7D	Panel Switch	Progressive push-pull	TD 27	2663	1987 >>	<b>31120</b>
FX Fairway 2.7D	Column Switch	Wipe/Wash	TD 27	2663	1987 >>	<b>SQB121</b>
FX Fairway 2.7D	Column Switch	DI, Horn, Lighting	TD 27	2663	1987 >>	<b>SQB803</b>
FX4 Taxi 2.25D	Solenoid 4ST			2286	1972-73	<b>SRB325</b>
FX4 Taxi 2.25D	Panel Switch	2 position lever	4 Cyl 22E	2286	1972-85	<b>31780</b>
FX4 Taxi 2.25D	Panel Switch	3 position lever	4 Cyl 22E	2286	1972-85	<b>31788</b>
FX4 Taxi 2.25D	Panel Switch	Hazard Warning	4 Cyl 22E	2286	1978-85	<b>39976</b>
FX4 Taxi 2.25D	Panel Switch	Door Lock Actuator	4 Cyl 22E	2286	1979-85	<b>33727</b>
FX4 Taxi 2.25D	Panel Switch	3 position lever	4 Cyl 22E	2286	1981-85	<b>35927</b>
FX4 Taxi 2.25D	Panel Switch	Interior Light Switch		2286	1986 >>	<b>35478</b>
FX4 Taxi 2.25D	Panel Switch	Heated Rear Window Switch		2286	1986 >>	<b>35480</b>
FX4 Taxi 2.25D	Panel Switch	Heated Fan Switch		2286	1986 >>	<b>35481</b>
FX4 Taxi 2.25D	Panel Switch	Heated Fan Switch	Alternative	2286	1986 >>	<b>35498</b>
FX4 Taxi 2.2D (55/68 bhp)	Solenoid 4ST				1969-72	<b>SRB325</b>
FX4R Taxi 2.25D	Panel Switch	2 position lever	4 Cyl 22E	2286	1982-85	<b>31780</b>
FX4R Taxi 2.25D	Panel Switch	Door Lock Actuator	4 Cyl 22E	2286	1982-85	<b>33727</b>
FX4R Taxi 2.25D	Panel Switch	3 position lever	4 Cyl 22E	2286	1982-85	<b>35927</b>
FX4R Taxi 2.25D	Panel Switch	Hazard Warning	4 Cyl 22E	2286	1982-85	<b>39976</b>
FX4R Taxi 2.25D	Ignition Switch		4 Cyl 22E	2286	1989-93	<b>36633</b>
FX4S Taxi 2.5D	Panel Switch	Lighting	4 Cyl 25V	2494	1986-89	<b>30713</b>
FX4S Taxi 2.5D	Panel Switch	2 position lever	4 Cyl 25V	2494	1986-89	<b>31780</b>
FX4S Taxi 2.5D	Panel Switch	Rheostat	4 Cyl 25V	2494	1986-89	<b>78353</b>
FX4S Taxi 2.5D	Column Switch	Wipe/Wash	4 Cyl 25V	2494	1986-89	<b>SQB121</b>
FX4S Taxi 2.5D	Column Switch	DI, Horn, Lighting	4 Cyl 25V	2494	1986-89	<b>SQB803</b>

### MARSHALL TRACTORS

154 Tractor	Ignition Switch	Heater-Start, 3 position lever			1970-79	<b>33940</b>
154 Tractor	Panel Switch	Lighting			1970-79	<b>35698</b>
154 Tractor	Ignition Switch	4 position lever			1976-79	<b>35628</b>
2100 Tractor	Ignition Switch	Heater-Start, 3 position lever		5655	1970-81	<b>33940</b>
2100 Tractor	Panel Switch	3 position lever		5655	1977-81	<b>31788</b>
2100 Tractor	Panel Switch	Wiper		5655	1977-81	<b>39710</b>
2100 Tractor	Panel Switch	Hazard Warning		5655	1978-81	<b>30386</b>
245 Tractor	Ignition Switch	Heater-Start, 3 position lever		2500	1973-81	<b>33940</b>
245 Tractor (QM Cab)	Panel Switch	Lighting		2500	1976-81	<b>30377</b>
245 Tractor (QM Cab)	Panel Switch	2 position rocker		2500	1976-81	<b>30593</b>
245 Tractor (QM Cab)	Panel Switch	3 position lever		2500	1976-81	<b>31743</b>
245 Tractor (QM Cab)	Panel Switch	Wiper	Front	2500	1976-81	<b>39710</b>
245 Tractor (QM Cab)	Panel Switch	Fan		2500	1976-81	<b>39745</b>
245S Tractor	Ignition Switch	Heater-Start, 3 position lever		2500	1973-81	<b>33940</b>
245S Tractor	Panel Switch	2 position rocker		2500	1976-81	<b>30593</b>
245S Tractor	Panel Switch	3 position lever		2500	1976-81	<b>31743</b>
245S Tractor	Panel Switch	Fan		2500	1976-81	<b>39745</b>
245S Tractor (QM Cab)	Panel Switch	Lighting		2500	1976-81	<b>30377</b>
245S Tractor (QM Cab)	Panel Switch	Wiper	Front	2500	1976-81	<b>39710</b>

→





Description

Function

Engine Info

cc

OE

Part No.

## → MARSHALL TRACTORS

255 Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1973-76	<b>33940</b>
262 Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1976-81	<b>33940</b>
262 Tractor (QM Cab)	Panel Switch	Lighting	3770	1976-81	<b>30377</b>
262 Tractor (QM Cab)	Panel Switch	2 position rocker	3770	1976-81	<b>30593</b>
262 Tractor (QM Cab)	Panel Switch	3 position lever	3770	1976-81	<b>31743</b>
262 Tractor (QM Cab)	Panel Switch	Wiper	3770	1976-81	<b>39710</b>
262 Tractor (QM Cab)	Panel Switch	Fan	3770	1976-81	<b>39745</b>
262S Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1977-81	<b>33940</b>
262S Tractor (QM Cab)	Panel Switch	Lighting	3770	1977-81	<b>30377</b>
262S Tractor (QM Cab)	Panel Switch	2 position rocker	3770	1977-81	<b>30593</b>
262S Tractor (QM Cab)	Panel Switch	3 position lever	3770	1977-81	<b>31743</b>
262S Tractor (QM Cab)	Panel Switch	Wiper	3770	1977-81	<b>39710</b>
262S Tractor (QM Cab)	Panel Switch	Fan	3770	1977-81	<b>39745</b>
270 Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1973-76	<b>33940</b>
272 Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1969-81	<b>33940</b>
272 Tractor (QM Cab)	Panel Switch	Lighting	3770	1976-81	<b>30377</b>
272 Tractor (QM Cab)	Panel Switch	2 position rocker	3770	1976-81	<b>30593</b>
272 Tractor (QM Cab)	Panel Switch	3 position lever	3770	1976-81	<b>31743</b>
272 Tractor (QM Cab)	Panel Switch	Wiper	3770	1976-81	<b>39710</b>
272 Tractor (QM Cab)	Panel Switch	Fan	3770	1976-81	<b>39745</b>
272S Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1977-81	<b>33940</b>
272S Tractor (QM Cab)	Panel Switch	Lighting	3770	1977-81	<b>30377</b>
272S Tractor (QM Cab)	Panel Switch	2 position rocker	3770	1977-81	<b>30593</b>
272S Tractor (QM Cab)	Panel Switch	3 position lever	3770	1977-81	<b>31743</b>
272S Tractor (QM Cab)	Panel Switch	Wiper	3770	1977-81	<b>39710</b>
272S Tractor (QM Cab)	Panel Switch	Fan	3770	1977-81	<b>39745</b>
285 Tractor	Ignition Switch	Heater-Start, 3 position lever	5655	1974-81	<b>33940</b>
285 Tractor	Panel Switch	3 position lever	5655	1977-81	<b>31788</b>
285 Tractor	Panel Switch	Wiper	5655	1977-81	<b>39710</b>
285 Tractor	Panel Switch	Hazard Warning	5655	1978-81	<b>30386</b>
285-4 Tractor	Ignition Switch	Heater-Start, 3 position lever	4 Cyl	1974-81	<b>33940</b>
285-4 Tractor	Panel Switch	3 position lever	4 Cyl	1977-81	<b>31788</b>
285-4 Tractor	Panel Switch	Wiper	4 Cyl	1977-81	<b>39710</b>
285-4 Tractor	Panel Switch	Hazard Warning	4 Cyl	1978-81	<b>30386</b>
4100 Tractor	Ignition Switch	Heater-Start, 3 position lever	5655	1974-81	<b>33940</b>
4100 Tractor	Panel Switch	3 position lever	5655	1977-81	<b>31788</b>
4100 Tractor	Panel Switch	Wiper	5655	1977-81	<b>39710</b>
4100 Tractor	Panel Switch	Hazard Warning	5655	1978-81	<b>30386</b>
472S Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1977-81	<b>33940</b>
472S Tractor (QM Cab)	Panel Switch	Lighting	3770	1977-81	<b>30377</b>
472S Tractor (QM Cab)	Panel Switch	2 position rocker	3770	1977-81	<b>30593</b>
472S Tractor (QM Cab)	Panel Switch	3 position lever	3770	1977-81	<b>31743</b>
472S Tractor (QM Cab)	Panel Switch	Wiper	3770	1977-81	<b>39710</b>
472S Tractor (QM Cab)	Panel Switch	Fan	3770	1977-81	<b>39745</b>
485 Tractor	Ignition Switch	Heater-Start, 3 position lever	5655	1976-79	<b>33940</b>
485 Tractor	Panel Switch	3 position lever	5655	1977-79	<b>31788</b>
485 Tractor	Panel Switch	Wiper	5655	1977-79	<b>39710</b>
485 Tractor	Panel Switch	Hazard Warning	5655	1978-79	<b>30386</b>
502 Tractor	Panel Switch	Lighting	2500	1981-85	<b>33742</b>
502 Tractor	Ignition Switch	Heater-Start, 3 position lever	2500	1981-85	<b>33940</b>
502 Tractor	Column Switch	DI, Horn, Lighting	2500	1981-85	<b>SQB992</b>
502S Tractor	Ignition Switch	Heater-Start, 3 position lever	2500	1981-85	<b>33940</b>
602 Tractor	Panel Switch	Lighting	3770	1981-85	<b>33742</b>
602 Tractor	Ignition Switch	4 position lever	3770	1981-85	<b>35628</b>
602 Tractor	Column Switch	DI, Horn, Lighting	3770	1981-85	<b>SQB992</b>
602 Tractor (Explorer Cab)	Panel Switch	Lighting	3770	1985	<b>33742</b>
602 Tractor (Explorer Cab)	Ignition Switch	4 position lever	3770	1985	<b>35628</b>
602 Tractor (Explorer Cab)	Column Switch	DI, Horn, Lighting	3770	1985	<b>SQB992</b>
602S Tractor	Panel Switch	Lighting	3770	1981	<b>33742</b>
602S Tractor	Ignition Switch	Heater-Start	3770	1981	<b>35703</b>
602S Tractor	Column Switch	DI, Horn, Lighting	3770	1981	<b>SQB992</b>
602XL Tractor	Panel Switch	Lighting	3770	1981-85	<b>33742</b>
602XL Tractor	Ignition Switch	4 position lever	3770	1981-85	<b>35628</b>
602XL Tractor	Column Switch	DI, Horn, Lighting	3770	1981-85	<b>SQB992</b>
604 Tractor	Panel Switch	Lighting	3770	1980-85	<b>30377</b>
604 Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1980-85	<b>33940</b>
604 Tractor	Ignition Switch	4 position lever	3770	1980-85	<b>35628</b>
604 Tractor	Ignition Switch	Heater-Start	3770	1980-85	<b>35703</b>
604 Tractor	Panel Switch	Wiper	3770	1980-85	<b>39710</b>

→



Description
Function
Engine Info
cc
OE
Part No.

→ MARSHALL TRACTORS

604 Tractor	Panel Switch	Fan	3770	1980-85	<b>39745</b>
604 Tractor	Column Switch	DI, Horn, Lighting	3770	1980-85	<b>SQB992</b>
604 Tractor (Explorer Cab)	Ignition Switch	4 position lever	3770	1985	<b>35628</b>
604 Tractor (Explorer Cab)	Column Switch	DI, Horn, Lighting	3770	1985	<b>SQB992</b>
604S Tractor	Panel Switch	Lighting	3770	1981	<b>33742</b>
604S Tractor	Ignition Switch	Heater-Start	3770	1981	<b>35703</b>
604S Tractor	Column Switch	DI, Horn, Lighting	3770	1981	<b>SQB992</b>
604XL Tractor	Ignition Switch	4 position lever	3770	1981-85	<b>35628</b>
604XL Tractor	Column Switch	DI, Horn, Lighting	3770	1981-85	<b>SQB992</b>
702 Tractor	Panel Switch	Lighting	3770	1981-85	<b>33742</b>
702 Tractor	Ignition Switch	4 position lever	3770	1981-85	<b>35628</b>
702 Tractor	Column Switch	DI, Horn, Lighting	3770	1981-85	<b>SQB992</b>
702 Tractor (Explorer Cab)	Panel Switch	Lighting	3770	1985	<b>33742</b>
702 Tractor (Explorer Cab)	Ignition Switch	4 position lever	3770	1985	<b>35628</b>
702 Tractor (Explorer Cab)	Column Switch	DI, Horn, Lighting	3770	1985	<b>SQB992</b>
702S Tractor	Panel Switch	Lighting	3770	1981	<b>33742</b>
702S Tractor	Ignition Switch	Heater-Start	3770	1981	<b>35703</b>
702S Tractor	Column Switch	DI, Horn, Lighting	3770	1981	<b>SQB992</b>
702XL Tractor	Panel Switch	Lighting	3770	1987-88	<b>33742</b>
702XL Tractor	Ignition Switch	4 position lever	3770	1987-88	<b>35628</b>
702XL Tractor	Column Switch	DI, Horn, Lighting	3770	1987-88	<b>SQB992</b>
704 Tractor	Panel Switch	Lighting	3770	1981-85	<b>33742</b>
704 Tractor	Ignition Switch	4 position lever	3770	1981-85	<b>35628</b>
704 Tractor	Column Switch	DI, Horn, Lighting	3770	1981-85	<b>SQB992</b>
704 Tractor (Explorer Cab)	Panel Switch	Lighting	3770	1985	<b>33742</b>
704 Tractor (Explorer Cab)	Ignition Switch	4 position lever	3770	1985	<b>35628</b>
704 Tractor (Explorer Cab)	Column Switch	DI, Horn, Lighting	3770	1985	<b>SQB992</b>
704XL Tractor	Panel Switch	Lighting	3770	1987-88	<b>33742</b>
704XL Tractor	Ignition Switch	4 position lever	3770	1987-88	<b>35628</b>
704XL Tractor	Column Switch	DI, Horn, Lighting	3770	1987-88	<b>SQB992</b>
802 Tractor	Panel Switch	Lighting	3770	1981-85	<b>30377</b>
802 Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1981-85	<b>33940</b>
802 Tractor	Panel Switch	Wiper	3770	1981-85	<b>39710</b>
802 Tractor	Panel Switch	Fan	3770	1981-85	<b>39745</b>
802 Tractor (Explorer Cab)	Panel Switch	Lighting	3770	1985	<b>33742</b>
802 Tractor (Explorer Cab)	Ignition Switch	4 position lever	3770	1985	<b>35628</b>
802 Tractor (Explorer Cab)	Column Switch	DI, Horn, Lighting	3770	1985	<b>SQB992</b>
802S Tractor, 804S Tractor	Panel Switch	Lighting	3770	1981	<b>33742</b>
802S Tractor, 804S Tractor	Ignition Switch	Heater-Start	3770	1981	<b>35703</b>
802S Tractor, 804S Tractor	Column Switch	DI, Horn, Lighting	3770	1981	<b>SQB992</b>
802XL Tractor	Panel Switch	Lighting	3770	1985	<b>33742</b>
802XL Tractor	Ignition Switch	4 position lever	3770	1985	<b>35628</b>
802XL Tractor	Column Switch	DI, Horn, Lighting	3770	1985	<b>SQB992</b>
804 Tractor	Panel Switch	Lighting	3770	1980-85	<b>30377</b>
804 Tractor	Ignition Switch	Heater-Start, 3 position lever	3770	1980-85	<b>33940</b>
804 Tractor	Ignition Switch	Heater-Start	3770	1980-85	<b>35703</b>
804 Tractor	Panel Switch	Wiper	3770	1980-85	<b>39710</b>
804 Tractor	Panel Switch	Fan	3770	1980-85	<b>39745</b>
804 Tractor (Explorer Cab)	Panel Switch	Lighting	3770	1985	<b>33742</b>
804 Tractor (Explorer Cab)	Ignition Switch	4 position lever	3770	1985	<b>35628</b>
804 Tractor (Explorer Cab)	Column Switch	DI, Horn, Lighting	3770	1985	<b>SQB992</b>
804XL Tractor, 904XL Tractor	Panel Switch	Lighting	3770	1985-88	<b>33742</b>
804XL Tractor, 904XL Tractor	Ignition Switch	4 position lever	3770	1985-88	<b>35628</b>
804XL Tractor, 904XL Tractor	Column Switch	DI, Horn, Lighting	3770	1985-88	<b>SQB992</b>

**MASSEY FERGUSON**

MF 250.3, 250.4 Tractor	Panel Switch	Rotary Light Switch	2500	1982 >>	<b>33714</b>
MF 250.3, 250.4 Tractor	Ignition Switch	Heater-Start, 4 position lever	2500	1982 >>	<b>35670</b>
MF 265.4 Tractor	Ignition Switch	Heater-Start, 4 position lever	3300	1976 >>	<b>35670</b>
MF 265.4 Tractor 4WD	Ignition Switch	Heater-Start, 4 position lever	3860	1984 >>	<b>35670</b>
MF 265.8 Tractor	Ignition Switch	Heater-Start, 4 position lever	3860	1977 >>	<b>35670</b>
MF 275 Tractor (Perkins 4.236)	Panel Switch	Rotary Light Switch		1979 >>	<b>33714</b>
MF 275 Tractor (Perkins 4.236)	Ignition Switch	Heater-Start, 4 position lever		1979 >>	<b>35670</b>
MF 275 Tractor (Perkins 4.276)	Panel Switch	Rotary Light Switch	276cu	1979 >>	<b>33714</b>
MF 275 Tractor (Perkins 4.276)	Ignition Switch	Heater-Start, 4 position lever	276cu	1979 >>	<b>35670</b>
MF 290 Tractor, Tractor 4WD	Panel Switch	Rotary Light Switch	3860	1980 >>	<b>33714</b>
MF 290 Tractor, Tractor 4WD	Ignition Switch	Heater-Start, 4 position lever	3860	1980 >>	<b>35670</b>
MF 298 Tractor	Panel Switch	Rotary Light Switch	5210	1983-86	<b>33714</b>
MF 298 Tractor	Ignition Switch	Heater-Start, 4 position lever	5210	1983-86	<b>35670</b>





Description

Function

Engine Info

cc

OE

Part No.

→ MASSEY FERGUSON

MF 30 Backhoe-Loader	Panel Switch	Rotary Light Switch		1985-87	<b>33714</b>
MF 30 Backhoe-Loader	Ignition Switch	Heater-Start, 4 position lever		1985-87	<b>35670</b>
MF 30 Drill	Ignition Switch	Heater-Start, 4 position lever	2500	1973-81	<b>35630</b>
MF 30 Drill	Panel Switch	Lighting	2500	1973-84	<b>35698</b>
MF 30 Drill	Ignition Switch	Heater-Start, 4 position lever	2500	1982-87	<b>35670</b>
MF 30 Drill	Panel Switch	Rotary Light Switch	2500	1984-87	<b>33714</b>
MF 30.3	Ignition Switch	Heater-Start, 4 position lever	2500	1975-81	<b>35630</b>
MF 30.3	Panel Switch	Lighting	2500	1975-84	<b>35698</b>
MF 30.3	Ignition Switch	Heater-Start, 4 position lever	2500	1982 >>	<b>35670</b>
MF 30.3	Panel Switch	Rotary Light Switch	2500	1984 >>	<b>33714</b>
MF 30.4 (Perkins 4.203, 4212)	Ignition Switch	Heater-Start, 4 position lever	3300	1969-81	<b>35630</b>
MF 30.4 (Perkins 4.203, 4212)	Panel Switch	Lighting	3300	1969-84	<b>35698</b>
MF 30.4 (Perkins 4.203, 4212)	Ignition Switch	Heater-Start, 4 position lever	3300	1982 >>	<b>35670</b>
MF 30.4 (Perkins 4.203, 4212)	Panel Switch	Rotary Light Switch	3300	1984 >>	<b>33714</b>
MF 30-825	Ignition Switch	Heater-Start, 4 position lever	107cu	>> 1981	<b>35630</b>
MF 30-825	Panel Switch	Lighting	107cu	>> 1984	<b>35698</b>
MF 30-825	Ignition Switch	Heater-Start, 4 position lever	107cu	1982 >>	<b>35670</b>
MF 30-825	Panel Switch	Rotary Light Switch	107cu	1984 >>	<b>33714</b>
MF 30C Tractor	Ignition Switch	Heater-Start, 4 position lever		>> 1981	<b>35630</b>
MF 30C Tractor	Ignition Switch	Heater-Start, 4 position lever		1982 >>	<b>35670</b>
MF 30C Tractor	Panel Switch	Rotary Light Switch		1984 >>	<b>33714</b>
MF 30D Tractor	Ignition Switch	Heater-Start, 4 position lever	3860	1982 >>	<b>35670</b>
MF 30D Tractor	Panel Switch	Lighting	3860	1982-84	<b>35698</b>
MF 30D Tractor	Panel Switch	Rotary Light Switch	3860	1984 >>	<b>33714</b>
MF 30E "Powershuttle" Tractor	Panel Switch	Rotary Light Switch	2500	1985 >>	<b>33714</b>
MF 30E "Powershuttle" Tractor	Ignition Switch	Heater-Start, 4 position lever	2500	1985 >>	<b>35670</b>
MF 30E "Powershuttle" Tractor	Panel Switch	Lighting	2500	1985 >>	<b>35698</b>
MF 30E Tractor	Ignition Switch	Heater-Start, 4 position lever	2500	1972-81	<b>35630</b>
MF 30E Tractor	Panel Switch	Lighting	2500	1972-84	<b>35698</b>
MF 30E Tractor	Ignition Switch	Heater-Start, 4 position lever	2500	1982 >>	<b>35670</b>
MF 30E Tractor	Panel Switch	Rotary Light Switch	2500	1984 >>	<b>33714</b>
MF 30H Backhoe-Loader	Ignition Switch	Heater-Start, 4 position lever	2500	>> 1981	<b>35630</b>
MF 30H Backhoe-Loader	Panel Switch	Lighting	2500	>> 1984	<b>35698</b>
MF 30H Backhoe-Loader	Ignition Switch	Heater-Start, 4 position lever	2500	1982 >>	<b>35670</b>
MF 30H Backhoe-Loader	Panel Switch	Rotary Light Switch	2500	1984 >>	<b>33714</b>
MF 40.3, 40.4 Tractor	Panel Switch	Lighting	2500	1970 >>	<b>34952</b>
MF 40.3, 40.4 Tractor	Ignition Switch	Heater-Start, 4 position lever	2500	1970 >>	<b>35630</b>
MF 40.3, 40.4 Tractor	Panel Switch	Push	2500	1970 >>	<b>SPB105</b>
MF 40B Excavator, Loader	Panel Switch	Lighting		1970 >>	<b>34952</b>
MF 40B Excavator, Loader	Ignition Switch	Heater-Start, 4 position lever		1970 >>	<b>35630</b>
MF 40B Excavator, Loader	Panel Switch	Push		1970 >>	<b>SPB105</b>
MF 40B Tractor Industrial	Panel Switch	Lighting	3860	1970 >>	<b>34952</b>
MF 40B Tractor Industrial	Ignition Switch	Heater-Start, 4 position lever	3860	1970 >>	<b>35630</b>
MF 40B Tractor Industrial	Panel Switch	Push	3860	1970 >>	<b>SPB105</b>
MF 40E Tractor	Panel Switch	Lighting		1985 >>	<b>34952</b>
MF 40E Tractor	Ignition Switch	Heater-Start, 4 position lever		1985 >>	<b>35630</b>
MF 40E Tractor	Panel Switch	Push		1985 >>	<b>SPB105</b>
MF 40U Tractor	Panel Switch	Lighting	2500	1970-81	<b>34952</b>
MF 40U Tractor	Ignition Switch	Heater-Start, 4 position lever	2500	1970-81	<b>35630</b>
MF 40U Tractor	Panel Switch	Push	2500	1970-81	<b>SPB105</b>
MF 50 Tractor (Perkins 4.203)	Panel Switch	Lighting	3300	1973 >>	<b>34952</b>
MF 50 Tractor (Perkins 4.203)	Ignition Switch	Heater-Start, 4 position lever	3300	1973 >>	<b>35630</b>
MF 50 Tractor (Perkins 4.203)	Panel Switch	Push	3300	1973 >>	<b>SPB105</b>
MF 50 Tractor (Perkins 4.203)	Ignition Switch	5 position lever	3300	1977 >>	<b>39589</b>
MF 50 Tractor (Perkins 4.212)	Panel Switch	Lighting	212cu	1973 >>	<b>34952</b>
MF 50 Tractor (Perkins 4.212)	Ignition Switch	Heater-Start, 4 position lever	212cu	1973 >>	<b>35630</b>
MF 50 Tractor (Perkins 4.212)	Panel Switch	Push	212cu	1973 >>	<b>SPB105</b>
MF 50 Tractor (Perkins 4.212)	Ignition Switch	Heater-Start, 5 position lever	212cu	1977 >>	<b>39589</b>
MF 50 Tractor (Perkins 4.236)	Panel Switch	Lighting	3860	1973-79	<b>34952</b>
MF 50 Tractor (Perkins 4.236)	Ignition Switch	Heater-Start, 4 position lever	3860	1973-79	<b>35630</b>
MF 50 Tractor (Perkins 4.236)	Panel Switch	Push	3860	1973-79	<b>SPB105</b>
MF 50 Tractor (Perkins 4.236)	Ignition Switch	Heater-Start, 5 position lever	3860	1977-79	<b>39589</b>
MF 50 Tractor (Skid-Steer)	Panel Switch	Lighting	212cu	1973 >>	<b>34952</b>
MF 50 Tractor (Skid-Steer)	Ignition Switch	Heater-Start, 4 position lever	212cu	1973 >>	<b>35630</b>
MF 50 Tractor (Skid-Steer)	Panel Switch	Push	212cu	1973 >>	<b>SPB105</b>
MF 50 Tractor (Skid-Steer)	Ignition Switch	Heater-Start, 5 position lever	212cu	1977 >>	<b>39589</b>
MF 50 Tractor Turbo	Panel Switch	Lighting	212cu	1973 >>	<b>34952</b>
MF 50 Tractor Turbo	Ignition Switch	Heater-Start, 4 position lever	212cu	1973 >>	<b>35630</b>
MF 50 Tractor Turbo	Panel Switch	Push	212cu	1973 >>	<b>SPB105</b>

→





Description      Function      Engine Info      cc      OE      Part No.

→ MASSEY FERGUSON					
Description	Function	Engine Info	cc	OE	Part No.
MF 50 Tractor Turbo	Ignition Switch	Heater-Start, 5 position lever	212cu	1977 >>	<b>39589</b>
MF 50B Excavator, Loader	Panel Switch	Lighting		1973 >>	<b>34952</b>
MF 50B Excavator, Loader	Ignition Switch	Heater-Start, 4 position lever		1973 >>	<b>35630</b>
MF 50B Excavator, Loader	Panel Switch	Push		1973 >>	<b>SPB105</b>
MF 50B Excavator, Loader	Ignition Switch	Heater-Start, 5 position lever		1977 >>	<b>39589</b>
MF 50B Tractor (Perkins 4.212)	Panel Switch	Lighting	212cu	1974 >>	<b>34952</b>
MF 50B Tractor (Perkins 4.212)	Ignition Switch	Heater-Start, 4 position lever	212cu	1974 >>	<b>35630</b>
MF 50B Tractor (Perkins 4.212)	Panel Switch	Push	212cu	1974 >>	<b>SPB105</b>
MF 50B Tractor (Perkins 4.212)	Ignition Switch	Heater-Start, 5 position lever	212cu	1977 >>	<b>39589</b>
MF 50B Tractor (Perkins 4.236)	Panel Switch	Lighting	3860	1973 >>	<b>34952</b>
MF 50B Tractor (Perkins 4.236)	Ignition Switch	Heater-Start, 4 position lever	3860	1973 >>	<b>35630</b>
MF 50B Tractor (Perkins 4.236)	Panel Switch	Push	3860	1973 >>	<b>SPB105</b>
MF 50B Tractor (Perkins 4.236)	Ignition Switch	Heater-Start, 5 position lever	3860	1977 >>	<b>39589</b>
MF 50B Tractor Industrial	Panel Switch	Lighting		1973 >>	<b>34952</b>
MF 50B Tractor Industrial	Ignition Switch	Heater-Start, 4 position lever		1973 >>	<b>35630</b>
MF 50B Tractor Industrial	Panel Switch	Push		1973 >>	<b>SPB105</b>
MF 50B Tractor Industrial	Ignition Switch	Heater-Start, 5 position lever		1977 >>	<b>39589</b>
MF 50C Tractor	Ignition Switch	Heater-Start, 4 position lever	3860	1973>>	<b>35630</b>
MF 50C Tractor	Panel Switch	Lighting	3860	1979 >>	<b>34952</b>
MF 50C Tractor	Ignition Switch	Heater-Start, 5 position lever	3860	1979 >>	<b>39589</b>
MF 50C Tractor	Panel Switch	Push	3860	1979 >>	<b>SPB105</b>
MF 50D Digger Loader	Panel Switch	Lighting	3860	1982 >>	<b>34952</b>
MF 50D Digger Loader	Ignition Switch	Heater-Start, 4 position lever	3860	1982 >>	<b>35630</b>
MF 50D Digger Loader	Ignition Switch	Heater-Start, 5 position lever	3860	1982 >>	<b>39589</b>
MF 50D Digger Loader	Panel Switch	Push	3860	1982 >>	<b>SPB105</b>
MF 50E "Powershuttle"	Ignition Switch	Heater-Start, 4 position lever	3860	1984 >>	<b>35670</b>
MF 50EX Tractor	Panel Switch	Lighting	4060	1973 >>	<b>34952</b>
MF 50EX Tractor	Ignition Switch	Heater-Start, 4 position lever	4060	1973 >>	<b>35630</b>
MF 50EX Tractor	Panel Switch	Push	4060	1973 >>	<b>SPB105</b>
MF 50EX Tractor	Ignition Switch	Heater-Start, 5 position lever	4060	1977 >>	<b>39589</b>
MF 50H, HX "Powershuttle" Backhoe-Loader	Ignition Switch	Heater-Start, 4 position lever	3860	1984 >>	<b>35670</b>
MF 520 Combine	Ignition Switch	Heater-Start, 3 position lever	5800	1971-79	<b>33940</b>
MF 520 Combine	Panel Switch	Lighting	5800	1971-79	<b>35698</b>
MF 520 Combine	Panel Switch	Push	5800	1971-79	<b>SPB106</b>
MF 525 Combine	Ignition Switch	Heater-Start, 3 position lever	5800	1971 >>	<b>33940</b>
MF 525 Combine	Panel Switch	Lighting	5800	1971 >>	<b>35698</b>
MF 525 Combine	Panel Switch	Push	5800	1971 >>	<b>SPB106</b>
MF 525 Combine Turbo	Ignition Switch	Heater-Start, 3 position lever	5800	1977 >>	<b>33940</b>
MF 525 Combine Turbo	Panel Switch	Lighting	5800	1977 >>	<b>35698</b>
MF 525 Combine Turbo	Panel Switch	Push	5800	1977 >>	<b>SPB106</b>
MF 550.3 Tractor	Panel Switch	Fan	{FR} 2500	1976-81	<b>30952</b>
MF 550.3 Tractor	Ignition Switch	Heater-Start, 4 position lever	2500	1976-81	<b>35670</b>
MF 550.3 Tractor	Panel Switch	Wiper	2500	1976-81	<b>39710</b>
MF 550.3 Tractor	Panel Switch	Fan	{GB} 2500	1976-81	<b>39745</b>
MF 550.3 Tractor	Panel Switch	Push	2500	1976-81	<b>SPB105</b>
MF 550.3 Tractor	Panel Switch	Rotary Light Switch	2500	1977-81	<b>33714</b>
MF 550.6 Tractor	Panel Switch	Fan	{FR} 5800	1979-81	<b>30952</b>
MF 550.6 Tractor	Panel Switch	Rotary Light Switch	5800	1979-81	<b>33714</b>
MF 550.6 Tractor	Ignition Switch	Heater-Start, 4 position lever	5800	1979-81	<b>35670</b>
MF 550.6 Tractor	Panel Switch	Wiper	5800	1979-81	<b>39710</b>
MF 550.6 Tractor	Panel Switch	Fan	{GB} 5800	1979-81	<b>39745</b>
MF 550.6 Tractor	Panel Switch	Push	5800	1979-81	<b>SPB105</b>
MF 565 Combine, 575 Tractor, 590 Combine	Panel Switch	Fan	{FR}	1976-81	<b>30952</b>
MF 565 Combine, 575 Tractor, 590 Combine	Panel Switch	Rotay Light Switch		1976-81	<b>33714</b>
MF 565 Combine, 575 Tractor, 590 Combine	Ignition Switch	Heater-Start, 4 position lever		1976-81	<b>35670</b>
MF 565 Combine, 575 Tractor, 590 Combine	Panel Switch	Wiper		1976-81	<b>39710</b>
MF 565 Combine, 575 Tractor, 590 Combine	Panel Switch	Fan	{GB}	1976-81	<b>39745</b>
MF 565 Combine, 575 Tractor, 590 Combine	Panel Switch	Push		1976-81	<b>SPB105</b>
MF 620 Tractor, 625 Tractor	Ignition Switch	Heater-Start, 3 position lever	372cu	1971 >>	<b>33940</b>
MF 620 Tractor, 625 Tractor	Panel Switch	Lighting	372cu	1971 >>	<b>35698</b>
MF 620 Tractor, 625 Tractor	Panel Switch	Push	372cu	1971 >>	<b>SPB106</b>
<b>MATBRO (Bray)</b>					
530, 534 Loader	Solenoid 2ST			1969-73	<b>SRB319</b>
540, 544 Loader	Solenoid 2ST			1969-77	<b>SRB319</b>
560 Loader	Solenoid 2ST			1969-71	<b>SRB321</b>
562 Loader (Perkins), 566 (Leyland UE 400, 401)	Solenoid 2ST		5800	1970-77	<b>SRB321</b>
566 Loader (Cummins), (Leyland UE 400)	Solenoid 2ST			1969-70	<b>SRB321</b>





Description

Function

Engine Info

cc

OE

Part No.

→ MATBRO

572, 577 Loader	Solenoid 2ST				1970-71	<b>SRB321</b>
577 Loader (Leyland), 588	Solenoid 2ST				1971-73	<b>SRB321</b>

**MORGAN**

Four Four 1600	Panel Switch	2 position lever	OHV	1599	1969-82	<b>31780</b>
Four Four 1600	Solenoid 4ST			1599	1969-82	<b>SRB325</b>
Four Four 1600	Column Switch	DI, Horn, Lighting	OHV	1599	1977-82	<b>SQB119</b>
Four Four 1600	Panel Switch	2 position lever	CVH	1596	1982-85	<b>31780</b>
Four Four 1600	Column Switch	DI, Horn, Lighting	CVH	1596	1982-85	<b>SQB119</b>
Four Four 1600 TC	Panel Switch	2 position lever	OHV	1599	1982-85	<b>31780</b>
Four Four 1600 TC	Column Switch	DI, Horn, Lighting	OHV	1599	1982-85	<b>SQB119</b>
Plus Eight 3.5 EFI V8	Column Switch	DI, Horn, Lighting		3528	1984-90	<b>SQB119</b>
Plus Eight 3.5 V8	Column Switch	DI, Horn, Lighting		3528	1977-86	<b>SQB119</b>
Plus Eight 3.9 V8	Column Switch	DI, Horn, Lighting	V8 OHV HC	3947	1990 >>	<b>SQB119</b>

**MORRIS >> Rover****MUIR-HILL**

A4000 Loading Shovel	Panel Switch	2 position lever		4150	1970 >>	<b>31780</b>
A4000 Loading Shovel	Panel Switch	3 position lever		4150	1970 >>	<b>31788</b>
A4000 Loading Shovel	Ignition Switch	Heater-Start, 4 position lever		3860	1970 >>	<b>35670</b>
A4000 Loading Shovel	Panel Switch	Rotary		4150	1970 >>	<b>SPB121</b>
A4000 Loading Shovel	Panel Switch	2 position lever		4150	1970 >>	<b>SPB203</b>
A4000 Loading Shovel	Panel Switch	Push		4150	1971 >>	<b>SPB160</b>
A5000 Loading Shovel	Panel Switch	2 position lever			1970 >>	<b>31780</b>
A5000 Loading Shovel	Panel Switch	3 position lever			1970 >>	<b>31788</b>
A5000 Loading Shovel	Ignition Switch	Heater-Start, 4 position lever		5800	1970 >>	<b>35670</b>
A5000 Loading Shovel	Panel Switch	Rotary			1970 >>	<b>SPB121</b>
A5000 Loading Shovel	Panel Switch	2 position lever			1970 >>	<b>SPB203</b>
A5000 Loading Shovel	Panel Switch	Push			1971 >>	<b>SPB160</b>
B4000 Loading Shovel	Panel Switch	2 position lever			1970 >>	<b>31780</b>
B4000 Loading Shovel	Panel Switch	3 position lever			1970 >>	<b>31788</b>
B4000 Loading Shovel	Ignition Switch	Heater-Start, 4 position lever			1970 >>	<b>35670</b>
B4000 Loading Shovel	Panel Switch	Rotary			1970 >>	<b>SPB121</b>
B4000 Loading Shovel	Panel Switch	Push			1970 >>	<b>SPB160</b>
B4000 Loading Shovel	Panel Switch	2 position lever			1970 >>	<b>SPB203</b>
B5000 Loading Shovel	Panel Switch	2 position lever		6220	1970 >>	<b>31780</b>
B5000 Loading Shovel	Panel Switch	3 position lever		6220	1970 >>	<b>31788</b>
B5000 Loading Shovel	Ignition Switch	Heater-Start, 4 position lever		324cu	1970 >>	<b>35670</b>
B5000 Loading Shovel	Panel Switch	Rotary		6220	1970 >>	<b>SPB121</b>
B5000 Loading Shovel	Panel Switch	2 position lever		6220	1970 >>	<b>SPB203</b>
B5000 Loading Shovel	Panel Switch	Push		6220	1971 >>	<b>SPB160</b>
F4000 Loading Shovel	Panel Switch	2 position lever		3860	1970 >>	<b>31780</b>
F4000 Loading Shovel	Panel Switch	3 position lever		3860	1970 >>	<b>31788</b>
F4000 Loading Shovel	Ignition Switch	Heater-Start, 4 position lever		3860	1970 >>	<b>35670</b>
F4000 Loading Shovel	Panel Switch	Rotary		3860	1970 >>	<b>SPB121</b>
F4000 Loading Shovel	Panel Switch	Push		3860	1970 >>	<b>SPB160</b>
F4000 Loading Shovel	Panel Switch	2 position lever		3860	1970 >>	<b>SPB203</b>
F5000 Loading Shovel	Panel Switch	2 position lever		5800	1970 >>	<b>31780</b>
F5000 Loading Shovel	Panel Switch	3 position lever		5800	1970 >>	<b>31788</b>
F5000 Loading Shovel	Panel Switch	Rotary		5800	1970 >>	<b>SPB121</b>
F5000 Loading Shovel	Panel Switch	Push		5800	1970 >>	<b>SPB160</b>
F5000 Loading Shovel	Panel Switch	2 position lever		5800	1970 >>	<b>SPB203</b>
F5000 Loading Shovel (All Wheel & Rear Wheel Steer)	Ignition Switch	Heater-Start, 4 position lever		5800	1970 >>	<b>35670</b>
M-H 111 Tractor	Panel Switch	2 position lever		5800	1973	<b>31780</b>
M-H 111 Tractor 4WD	Panel Switch	2 position lever		5800	1978-82	<b>31780</b>
M-H 111 Tractor 4WD	Panel Switch	Push		5800	1978-82	<b>SPB105</b>
M-H 121 Tractor 4WD	Panel Switch	Push		6220	1978-82	<b>SPB105</b>
M-H 161 Tractor	Solenoid 2ST			8360	1970-76	<b>SRB321</b>
M-H 171 Tractor	Column Switch	Wipe/Wash		8830	1977	<b>SQB127</b>
M-H 171 Tractor	Solenoid 2ST			8830	1977	<b>SRB321</b>

**NISSAN**

Micra (K11) 1.0i	Column Switch	DI, Lighting		998	1993-98	<b>SQB420</b>
Micra (K11) 1.0i	Column Switch	Wipe/Wash	(Lo-line)	998	1993-98	<b>SQB421</b>
Micra (K11) 1.0i	Column Switch	Front and rear Wipe/Washer	(Mid-line)	998	1993-98	<b>SQB423</b>
Micra (K11) 1.0i	Column Switch	Front and rear Wipe/Washer	(Hi-line)	998	1993-98	<b>SQB425</b>
Micra (K11) 1.3i	Column Switch	Front and rear Wipe/Washer	(Hi-line)	1275	1993-98	<b>SQB425</b>

→





Description      Function      Engine Info      cc      OE      Part No.

→ NISSAN

Primera (P10 Facelift) 2.0i	Column Switch	Wipe/Wash	1998	1994-96	<b>SQB407</b>
Primera (P10 Facelift) 2.0i GT	Column Switch	Wipe/Wash	1998	1994-96	<b>SQB409</b>
Primera (P10) 1.6	Column Switch	Wipe/Wash	1597	1990-93	<b>SQB407</b>
Primera (P10) 1.6	Column Switch	DI, Horn, Lighting	1597	1990-93	<b>SQB420</b>
Primera (P10) 1.6i	Column Switch	Wipe/Wash	1597	1992-93	<b>SQB407</b>
Primera (P10) 1.6i	Column Switch	DI, Horn, Lighting	1597	1992-93	<b>SQB420</b>
Primera (P10) 2.0D, 2.0i	Column Switch	Wipe/Wash	1973	1990-93	<b>SQB407</b>
Primera (P10) 2.0D, 2.0i	Column Switch	DI, Horn, Lighting	1973	1990-93	<b>SQB420</b>
Primera (P10) 2.0e	Column Switch	Wipe/Wash	1998	1990-92	<b>SQB407</b>
Primera (P10) 2.0e	Column Switch	DI, Horn, Lighting	1998	1990-92	<b>SQB420</b>
Primera (P10) 2.0i GT	Column Switch	Wipe/Wash	1998	1992-93	<b>SQB407</b>
Primera (P10) 2.0i GT	Column Switch	DI, Horn, Lighting	1998	1992-93	<b>SQB420</b>
Primera (W10) Estate 1.6, 2.0D, Estate 2.0i (85 kW/115 PS)	Column Switch	Wipe/Wash		1990-93	<b>SQB407</b>
Primera (W10) Estate 1.6, 2.0D, Estate 2.0i (85 kW/115 PS)	Column Switch	DI, Horn, Lighting		1990-93	<b>SQB420</b>
Serena (C23) 1.6	Column Switch	DI, Lighting	1597	1991 >>	<b>SQB420</b>
Serena (C23) 2.0 Diesel Midline	Column Switch	Front and rear Wipe/Washer	1973	1991-95	<b>SQB425</b>
Serena (C23) 2.0 Loline	Column Switch	Wipe/Wash	1998	1991 >>	<b>SQB407</b>
Serena (C23) 2.0 Turbo Diesel Hiline	Column Switch	Front and Rear Wipe/Washer	1973	1991 >>	<b>SQB417</b>
Serena (C23) 2.3 Diesel	Column Switch	Front and Rear Wipe/Washer	2283	1995 >>	<b>SQB417</b>
Terrano II 2.4i	Column Switch	DI, Lighting	2389	06/93-96	<b>SQB420</b>
Terrano II 2.7TD Hiline	Column Switch	Front and Rear Wipe/Washer	2663	06/93-96	<b>SQB417</b>
Terrano II 2.7TD Loline	Column Switch	Front and rear Wipe/Washer	2663	06/93-96	<b>SQB425</b>

**OPEL**

Ascona C 1.8i	Fuelling Relay	OHC	1796	09/82-08/86	<b>FDB501</b>
Ascona C 1.8i	Fuelling Relay	OHC	1796	09/86-08/88	<b>FDB504</b>
Ascona C 1.8i	Fuelling Relay	OHC	1796	10/85-08/86	<b>FDB501</b>
Ascona C 2.0 SRi 130, 2.0i,	Fuelling Relay	(SRi) OHC	1998	03/87-08/88	<b>FDB504</b>
Astra A 2.0 GSi 16v, 2.0i	Fuelling Relay		1998	1991-97	<b>FDB504</b>
Astra A Caravan/Estate 2.0 GSi 16v	Fuelling Relay		1998	1993-95	<b>FDB504</b>
Astra A Caravan/Estate 2.0i	Fuelling Relay	DOHC 16v	1998	1991-94	<b>FDB504</b>
Calibra 2.0i 16v (ECOTEC-4)	Fuelling Relay		1998	1994-97	<b>FDB504</b>
Calibra 2.0i 16v 4x4	Fuelling Relay		1998	1990-92	<b>FDB504</b>
Calibra 2.0i, 16v, Turbo 4x4	Fuelling Relay		1998	1990-97	<b>FDB504</b>
Corsa A (Facelift) 1.6 GSi	Fuelling Relay	OHC		1990-93	<b>FDB504</b>
Frontera A (Facelift) 2.0i Sport	Fuelling Relay		1998	1995-98	<b>FDB504</b>
Frontera A 2.0i Sport, 2.3TD, 2.4i	Fuelling Relay	(Not 2.3TD)		1991-95	<b>FDB504</b>
Kadett D 1.8 GTE	Fuelling Relay	OHC	1796	1983-84	<b>FDB501</b>
Kadett E 1.6, 1.6D, 1.6i, 1.6i, 1.7D, TD	Fuelling Relay	(1.6i) OHC	1598	04/89-08/91	<b>FDB504</b>
Kadett E 1.8i, , 1.8 GSi,	Fuelling Relay	(Cat) OHC	1796	09/86-08/91	<b>FDB504</b>
Kadett E 1.8i, , 1.8 GSi,	Fuelling Relay	OHC	1796	1984-08/86	<b>FDB501</b>
Kadett E 2.0i, 2.0 GSi, , 16v	Fuelling Relay	OHC	1998	09/86-89	<b>FDB504</b>
Kadett E Cabrio 2.0 GSi, 2.0i	Fuelling Relay	OHC	1998	1987-08/91	<b>FDB504</b>
Kadett E Caravan/Estate 1.6i, 1.6i	Fuelling Relay	OHC	1598	04/89-08/91	<b>FDB504</b>
Manta B 2.0 GT/E, GSi	Fuelling Relay	OHV	1979	09/81-06/88	<b>FDB501</b>
Monza A 2.5i, 3.0i	Fuelling Relay	25E	2490	1983-08/86	<b>FDB501</b>
Monza A 3.0i	Fuelling Relay	6 Cyl	2968	1985-86	<b>FDB501</b>
Omega A 1.8, 1.8i, 2.0i, 2.0i	Fuelling Relay	1.8i, 2.0i (Cat) OHC		1986-92	<b>FDB504</b>
Omega A 2.4i	Fuelling Relay	OHC	2410	09/88-94	<b>FDB504</b>
Omega A 2.6i	Fuelling Relay	OHC 6 Cyl	2594	1990-94	<b>FDB504</b>
Omega A 3.0i	Fuelling Relay	OHC 6 Cyl	2969	1987-94	<b>FDB504</b>
Omega A 3.0i 24v	Fuelling Relay	OHC 6 Cyl 24v	2969	1989-94	<b>FDB504</b>
Omega A Caravan/Estate 2.4i, 2.6i, 3.0i 24v	Fuelling Relay	OHC		1988-94	<b>FDB504</b>
Omega A Caravan/Estate 3.0i	Fuelling Relay	OHC 6 Cyl	2969	1988-94	<b>FDB504</b>
Senator A (Facelift) 2.5i, 3.0i	Fuelling Relay			1984-87	<b>FDB501</b>
Senator A 2.5i, 3.0i	Fuelling Relay	6 Cyl		1983-84	<b>FDB501</b>
Senator B 2.6i	Fuelling Relay	6 Cyl	2594	05/90-94	<b>FDB504</b>
Senator B 3.0i	Fuelling Relay	6 Cyl	2969	09/87-94	<b>FDB504</b>
Senator B 3.0i 24v	Fuelling Relay	6 Cyl	2969	09/89-94	<b>FDB504</b>
Vectra A 1.8, 1.8 4x4, 1.8i, 2.0i, 2.0i, 2.0i 16v	Fuelling Relay		1998	1988-95	<b>FDB504</b>
Vectra A 2.0i 16v 4x4 (150 PS), 2.0i 4x4 (115 PS)	Fuelling Relay	DOHC	1998	1989-93	<b>FDB504</b>
Vectra A 2.0i Turbo 4x4	Fuelling Relay	DOHC 16v	1998	1991-94	<b>FDB504</b>

**PEUGEOT**

505 (2.2i)	Fuelling Relay		2165	1992	<b>FDB505</b>
505 (2.2i) GTi	Fuelling Relay		2165	1984-92	<b>FDB505</b>







Description

Function

Engine Info

cc

OE

Part No.

→ PEUGEOT

505 (2.2i) Turbo	Fuelling Relay			2165	1981-88	<b>FDB505</b>
505 (2.2i) Turbo	Fuelling Relay			2165	1984-88	<b>FDB505</b>

## RELIANT

Fox	Panel Switch	Lighting		OHV	848	1983-90	<b>30731</b>
Fox	Column Switch	DI, Horn, Lighting		OHV	848	1983-90	<b>SQB996</b>
Fox	Solenoid 4ST				848	1983-90	<b>SRB335</b>
Kitten 850, Van	Solenoid 4ST				848	1975-77	<b>SRB325</b>
Kitten 850, Van	Solenoid 4ST				848	1978-83	<b>SRB335</b>
Rebel (FW4) 700	Solenoid 4ST				700	1968-71	<b>SRB325</b>
Rebel (FW4) 750	Solenoid 4ST				748	1971-73	<b>SRB325</b>
Regal (TW7) 21E 700	Solenoid 4ST				700	1969-72	<b>SRB325</b>
Regal (TW7) 21E 750	Solenoid 4ST				748	1972-74	<b>SRB325</b>
Regal (TW7) 700 Van	Solenoid 4ST				700	1969-72	<b>SRB325</b>
Regal (TW7) 750 Van	Solenoid 4ST				748	1972-74	<b>SRB325</b>
Rialto 850, Van	Panel Switch	Lighting		OHV	848	1982-95	<b>30731</b>
Rialto 850, Van	Ignition Switch			OHV	848	1982-95	<b>34680</b>
Rialto 850, Van	Column Switch	Wipe/Wash		OHV	848	1982-95	<b>SQB101</b>
Rialto 850, Van	Column Switch	DI, Horn, Lighting		OHV	848	1982-95	<b>SQB996</b>
Rialto 850, Van	Solenoid 4ST				848	1982-95	<b>SRB335</b>
Robin	Panel switch	Wiper Switch				1973-81	<b>30434</b>
Robin	Panel switch					1973-81	<b>34889</b>
Robin 750, Van	Solenoid 4ST				748	1974-75	<b>SRB325</b>
Robin 850, Van	Solenoid 4ST				848	1975-77	<b>SRB325</b>
Robin 850, Van	Solenoid 4ST				848	1978-81	<b>SRB335</b>
Scimitar 3.0 GTE	Solenoid 4ST				2994	1969-70	<b>SRB325</b>
Scimitar 3.0 GTE	Solenoid 4ST				2994	1971-74	<b>SRB335</b>
Scimitar SS1 1300	Column Switch	Wipe/Wash		CVH	1296	1985-87	<b>SQB121</b>
Scimitar SS1 1400	Column Switch	Wipe/Wash		CVH	1392	1987-90	<b>SQB121</b>
Scimitar SS1 1600	Column Switch	Wipe/Wash		CVH	1596	1985-90	<b>SQB121</b>
Scimitar SS1 1800 Ti	Column Switch	Wipe/Wash		OHC	1809	1986-90	<b>SQB121</b>
TW9B, C Mighty Ant	Panel Switch	3 position lever			1493	1969-73	<b>31788</b>
TW9B, C Mighty Ant	Ignition Switch				1493	1969-73	<b>31973</b>
TW9B, C Mighty Ant	Panel Switch	2 position lever			1493	1969-73	<b>SPB200</b>
TW9B, C Mighty Ant	Solenoid 4ST				1493	1969-76	<b>SRB325</b>
TW9E Mighty Ant	Ignition Switch				748	1969-80	<b>31973</b>
TW9E Mighty Ant	Panel Switch	3 position lever			748	1969-81	<b>31788</b>
TW9E Mighty Ant	Panel Switch	2 position lever			748	1969-81	<b>SPB200</b>
TW9E Mighty Ant	Solenoid 4ST				748	1969-81	<b>SRB325</b>

## ROLLS-ROYCE (Bentley)

Camargue	Solenoid 4ST				6750	1975-86	<b>SRB335</b>
Camargue	Body Switch	Foot dip		V8 OHV	6750	1979-86	<b>34790</b>
Corniche	Solenoid 4ST				6750	1972-86	<b>SRB335</b>
Corniche	Body Switch	Foot dip		V8 OHV	6750	1979-84	<b>34790</b>
Corniche II	Solenoid 4ST				6750	1987-89	<b>SRB335</b>
Corniche T	Solenoid 4ST				6750	1974-82	<b>SRB335</b>
Corniche T	Body Switch	Foot dip		V8 OHV	6750	1979-82	<b>34790</b>
Mulsanne	Battery Master Switch			V8 OHV	6750	1986-92	<b>SSB106</b>
Mulsanne	Battery Master Switch			V8 OHV	6750	1980-86	<b>SSB106</b>
Mulsanne	Body Switch	Foot dip		V8 OHV	6750	1981-84	<b>34790</b>
Mulsanne Turbo	Body Switch	Foot dip		V8 OHV	6750	1982-84	<b>34790</b>
Phantom VI	Solenoid 4ST				6750	1986-90	<b>SRB335</b>
Phantom VI	Solenoid 4ST				6750	1968-86	<b>SRB335</b>
Silver Shadow	Solenoid 4ST				6750	1970-77	<b>SRB335</b>
Silver Shadow II	Solenoid 4ST				6750	1977-80	<b>SRB335</b>
Silver Shadow II	Body Switch	Foot dip		V8 OHV	6750	1979-80	<b>34790</b>
Silver Spirit	Battery Master Switch			V8 OHV	6750	1980-86	<b>SSB106</b>
Silver Spirit	Body Switch	Foot dip		V8 OHV	6750	1981-84	<b>34790</b>
Silver Spirit	Battery Master Switch			V8 OHV	6750	1986-89	<b>SSB106</b>
Silver Spirit II	Battery Master Switch			V8 OHV	6750	1989-92	<b>SSB106</b>
Silver Spirit III	Battery Master Switch			V8 OHV	6750	1992-96	<b>SSB106</b>
Silver Spur	Battery Master Switch			V8 OHV	6750	1986-89	<b>SSB106</b>
Silver Spur	Battery Master Switch			V8 OHV	6750	1980-86	<b>SSB106</b>
Silver Spur	Body Switch	Foot dip		V8 OHV	6750	1981-84	<b>34790</b>
Silver Spur II	Battery Master Switch			V8 OHV	6750	1989-92	<b>SSB106</b>
Silver Spur III	Battery Master Switch			V8 OHV	6750	1992 >>	<b>SSB106</b>
T1 Series	Solenoid 4ST				6750	1970-77	<b>SRB335</b>
T2 Series	Solenoid 4ST				6750	1977-80	<b>SRB335</b>
T2 Series	Body Switch	Foot dip		V8 OHV	6750	1979-80	<b>34790</b>





Description      Function      Engine Info      cc      OE      Part No.

## ROVER

Allegro 1100, 1300, 1500, 1750	Solenoid 4ST				1973-75	<b>SRB325</b>
Allegro 1100, 1300, 1500, 1750	Solenoid 4ST		(Cold Climates)		1973-75	<b>SRB335</b>
Allegro 2 1100, 1300, 1500, 1750	Panel Switch	Lighting	(1500) R Series	1485	1975-79	<b>30452</b>
Allegro 2 1100, 1300, 1500, 1750	Panel Switch	Lighting			1975-79	<b>30731</b>
Allegro 2 1100, 1300, 1500, 1750	Solenoid 4ST		(Cold Climates)		1975-79	<b>SRB335</b>
Allegro 3 1.0, 1.1, 1.3, 1.5, 1.7	Panel Switch	Heater			1979-83	<b>54033632</b>
Allegro 3 1.0, 1.1, 1.3, 1.5, 1.7	Column Switch	DI, Horn, Lighting			1979-83	<b>SQB100</b>
Allegro 3 1.0, 1.1, 1.3, 1.5, 1.7	Solenoid 4ST		(Cold Climates)		1980-83	<b>SRB335</b>
Allegro II 1100, 1300, 1500, 1750	Solenoid 4ST				1975-79	<b>SRB325</b>
Allegro III 1.0, 1.1, 1.3, 1.5, 1.7	Solenoid 4ST				1980-83	<b>SRB325</b>
Austin 1100, 1300, GT, Countryman	Ignition Switch				1966-73	<b>31793</b>
Austin 1100, 1300, GT, Countryman	Column Switch	Di, Horn, main beam and dip			1966-73	<b>35840</b>
Austin 1100, 1300, GT, Countryman	Panel Switch	Windscreen wipers			1966-73	<b>39302</b>
Austin 1100, 1300, GT, Countryman	Solenoid 4ST				1966-73	<b>SRB325</b>
Austin-Healey Sprite (Mk 3/4)	Solenoid 4ST			1275	1969	<b>SRB325</b>
Austin-Healey Sprite (Mk 3/4)	Ignition Switch			1275	1969-72	<b>31973</b>
Maestro 1.3	Column Switch	Wipe/Wash		1275	1983-84	<b>SQB121</b>
Maestro 1.3 HLE	Column Switch	Wipe/Wash		1275	1983-84	<b>SQB121</b>
Maestro 1.6 (R Series)	Column Switch	Wipe/Wash		1598	1983-84	<b>SQB121</b>
Maestro 1.6 (S Series)	Column Switch	Wipe/Wash		1598	1984	<b>SQB121</b>
Marina 10 cwt Van, Pick-Up	Panel Switch	Lighting		1275	1971-75	<b>39463</b>
Marina 10 cwt Van, Pick-Up	Panel Switch	On/Off Switch		1275	1971-75	<b>39831</b>
Marina 10 cwt Van, Pick-Up	Solenoid 4ST			1275	1973-78	<b>SRB325</b>
Marina 10 cwt Van, Pick-Up	Panel Switch	Lighting		1275	1976-78	<b>30452</b>
Marina 1300	Panel Switch	Lighting		1275	1971-75	<b>39463</b>
Marina 1300	Panel Switch	On/Off Switch		1275	1971-75	<b>39831</b>
Marina 1300	Solenoid 4ST			1275	1971-75	<b>SRB325</b>
Marina 1800	Panel Switch	Lighting		1798	1971-75	<b>39463</b>
Marina 1800	Panel Switch	On/Off Switch		1798	1971-75	<b>39831</b>
Marina 1800	Solenoid 4ST		(TC, Estate)	1798	1971-75	<b>SRB325</b>
Marina 2 1300	Solenoid 4ST			1275	1975-78	<b>SRB325</b>
Marina 2 1300	Panel Switch	Lighting		1275	1976-78	<b>30452</b>
Marina 2 1500 Diesel	Solenoid 4ST			1489	1975-78	<b>SRB325</b>
Marina 2 1800	Solenoid 4ST			1798	1975-78	<b>SRB325</b>
Marina 2 1800	Panel Switch	Lighting		1798	1976-78	<b>30452</b>
Marina 3 1.7	Panel Switch	Lighting		1695	1978-80	<b>30452</b>
Marina 3 1.3	Solenoid 4ST			1275	1978-79	<b>SRB325</b>
Marina 3 1.3	Panel Switch	Lighting		1275	1978-80	<b>30452</b>
Marina 3 1.3	Solenoid 4ST			1275	1980	<b>SRB335</b>
Marina 3 Estate 1.3	Panel Switch	Lighting		1275	1978-80	<b>30452</b>
Marina 3 Estate 1.7	Panel Switch	Lighting		1695	1978-80	<b>30452</b>
Marina 440 Van 1.3, 575 Van, Pick-Up	Panel Switch	Lighting			1978-80	<b>30452</b>
Marina 7 cwt Van	Solenoid 4ST				1973-78	<b>SRB325</b>
Marina 7 cwt Van	Panel Switch	Lighting		1275	1976-78	<b>30452</b>
Marina 7 cwt Van 1.5 Diesel	Solenoid 4ST			1489	1973-78	<b>SRB325</b>
Marina Coupe 1300	Solenoid 4ST			1275	1970-75	<b>SRB325</b>
Marina Coupe 1800, TC	Solenoid 4ST			1798	1971-75	<b>SRB325</b>
Maxi 1500, 1750	Solenoid 4ST			1485	1969-79	<b>SRB325</b>
Maxi 1500, 1750	Panel Switch	Wiper		1485	1972-78	<b>39748</b>
Maxi 1500, 1750	Panel Switch	Lighting		1485	1972-79	<b>39746</b>
Maxi 1500, 1750	Panel Switch	Washer		1485	1973-78	<b>30365</b>
Metro 1.0	Column Switch	Wipe/Wash		998	1983-84	<b>SQB121</b>
Metro 1.0	Column Switch	DI, Hazard, Horn, Lighting		998	1988-90	<b>SQB106</b>
Metro 1.0 HLE	Solenoid 4ST			998	1980-91	<b>SRB335</b>
Metro 1.0 HLE	Column Switch	Wipe/Wash		998	1983-84	<b>SQB121</b>
Metro 1.1	Column Switch	DI, Hazard, Horn, Lighting		1120	1990-92	<b>SQB108</b>
Metro 1.1	Column Switch	Wipe variable delay, Washer		1120	1990-92	<b>SQB109</b>
Metro 1.1	Solenoid 4ST			1120	1990-95	<b>SRB335</b>
Metro 1.1i	Solenoid 4ST			1120	1990-95	<b>SRB335</b>
Metro 1.1i	Column Switch	DI, Hazard, Horn, Lighting		1120	1991-95	<b>SQB108</b>
Metro 1.1i	Column Switch	Wipe variable delay, Washer		1120	1991-95	<b>SQB109</b>
Metro 1.3	Solenoid 4ST		(GTa, LE, Sport)	1275	1980-91	<b>SRB335</b>
Metro 1.3	Column Switch	Wipe/Wash		1275	1983-84	<b>SQB121</b>
Metro 1.3	Column Switch	DI, Hazard, Horn, Lighting		1275	1988-90	<b>SQB106</b>
Metro 1.3 HLE	Solenoid 4ST			1275	1980-91	<b>SRB335</b>
Metro 1.3 HLE	Column Switch	Wipe/Wash		1275	1983-84	<b>SQB121</b>
Metro 1.4	Column Switch	DI, Hazard, Horn, Lighting		1396	1990-92	<b>SQB108</b>
Metro 1.4	Column Switch	Wipe variable delay, Washer		1396	1990-92	<b>SQB109</b>
Metro 1.4	Solenoid 4ST			1396	1990-95	<b>SRB335</b>





Description

Function

Engine Info

cc

OE

Part No.

→ ROVER

Metro 1.4 Diesel	Column Switch	DI, Hazard, Horn, Lighting		1360	1992-95	<b>SQB108</b>
Metro 1.4 Diesel	Column Switch	Wipe variable delay, Washer		1360	1992-95	<b>SQB109</b>
Metro 1.4 Diesel	Solenoid 4ST			1360	1992-95	<b>SRB335</b>
Metro 1.4 GTi 16v, Cat, 1.4i	Column Switch	DI, Hazard, Horn, Lighting		1396	1990-95	<b>SQB108</b>
Metro 1.4 GTi 16v, Cat, 1.4i	Column Switch	Wipe variable delay, Washer		1396	1990-95	<b>SQB109</b>
Metro 1.4 GTi 16v, Cat, 1.4i	Solenoid 4ST			1396	1990-95	<b>SRB335</b>
Metro 1.4i 16v	Column Switch	DI, Hazard, Horn, Lighting		1396	1990-91	<b>SQB108</b>
Metro 1.4i 16v	Column Switch	Wipe variable delay, Washer		1396	1990-91	<b>SQB109</b>
Metro 1.4i 16v	Solenoid 4ST			1396	1990-95	<b>SRB335</b>
Metro 1.4i 16v Cat	Column Switch	DI, Hazard, Horn, Lighting		1396	1991-95	<b>SQB108</b>
Metro 1.4i 16v Cat	Column Switch	Wipe variable delay, Washer		1396	1991-95	<b>SQB109</b>
Metro 310 Van 1.0, 1.3	Solenoid 4ST				1982-91	<b>SRB335</b>
Metro 310 Van 1.0, 1.3	Column Switch	Wipe/Wash			1983-84	<b>SQB121</b>
Metro 310 Van 1.0, 1.3	Column Switch	DI, Hazard, Horn, Lighting			1988-90	<b>SQB106</b>
MG Maestro 1600	Column Switch	Wipe/Wash		1598	1983-84	<b>SQB121</b>
MG Maestro 2.0 EFI	Column Switch	Wipe/Wash		1994	1984	<b>SQB121</b>
MG Metro 1300	Column Switch	DI, Horn, Lighting		1275	1982-84	<b>SQB100</b>
MG Metro 1300	Column Switch	DI, Hazard, Horn, Lighting		1275	1988-90	<b>SQB106</b>
MG Metro 1300	Column Switch	Wipe variable delay, Washer		1275	1989-90	<b>SQB109</b>
MG Metro Turbo	Solenoid 4ST			1275	1982-90	<b>SRB335</b>
MG Metro Turbo	Column Switch	DI, Horn, Lighting		1275	1983-84	<b>SQB100</b>
MG Metro Turbo	Column Switch	DI, Hazard, Horn, Lighting		1275	1988-90	<b>SQB106</b>
MG Metro Turbo	Column Switch	Wipe variable delay, Washer		1275	1989-90	<b>SQB109</b>
MG Midget 1300	Ignition Switch			1275	1969-74	<b>31973</b>
MG Midget 1300	Solenoid 4ST			1275	1969-74	<b>SRB325</b>
MG Midget 1300	Column Switch	DI, Horn, Lighting	3 Cyl OHV	1275	1969-78	<b>39309</b>
MG Midget 1500	Column Switch	DI, Horn, Lighting	4 Cyl OHV	1491	1969-78	<b>39309</b>
MG Midget 1500	Panel Switch	2 position rocker	4 Cyl OHV	1491	1975	<b>39629</b>
MG Midget 1500	Panel Switch	Lighting	4 Cyl OHV	1491	1975-77	<b>39914</b>
MG Midget 1500	Panel Switch	Fan	{US} 4 Cyl OHV	1491	1975-77	<b>39915</b>
MG Midget 1500	Column Switch	DI, Horn, Lighting	4 Cyl OHV	1491	1975-77	<b>SQB118</b>
MG Midget 1500	Column Switch	DI, Horn, Lighting	{US} 4 Cyl OHV	1491	1975-77	<b>SQB191</b>
MG Midget 1500	Panel Switch	Lighting	4 Cyl OHV	1491	1975-80	<b>39737</b>
MG Midget 1500	Solenoid 4ST			1491	1975-80	<b>SRB335</b>
MG Midget 1500	Column Switch	Wipe/Wash	4 Cyl OHV	1491	1978-80	<b>SQB127</b>
MG Midget 1500	Column Switch	DI, Horn, Lighting	4 Cyl OHV	1491	1978-80	<b>SQB194</b>
MG Midget 1500	Column Switch	DI, Horn, Lighting	4 Cyl OHV	1491	1978-80	<b>SQB197</b>
MG Midget 1500	Panel Switch	Wiper	4 Cyl OHV	1491	1979-80	<b>39736</b>
MGB	Body Switch	Foot dip	B Series	1798	1969	<b>34790</b>
MGB	Column Switch	DI, Horn, Lighting	(LHD)	1798	1969-75	<b>39309</b>
MGB	Column Switch	DI, Horn, Lighting		1798	1971-76	<b>SQB118</b>
MGB	Panel Switch	Lighting		1798	1972-76	<b>39737</b>
MGB	Panel Switch	Fan		1798	1972-76	<b>39739</b>
MGB	Panel Switch	Lighting		1798	1973-76	<b>39914</b>
MGB	Panel Switch	Fan	{US}	1798	1974-76	<b>39915</b>
MGB	Column Switch	DI, Horn, Lighting	(LHD)	1798	1974-76	<b>SQB191</b>
MGB	Column Switch	Di,Horn, Flash Main Beam & Dip		1798	1976-81	<b>30893</b>
MGB	Panel Switch	Lighting		1798	1977-81	<b>30924</b>
MGB	Panel Switch	Fan		1798	1977-81	<b>30926</b>
MGB	Panel Switch	Hazard Warning		1798	1977-81	<b>30927</b>
MGB	Panel Switch	Hazard Warning		1798	1977-81	<b>30928</b>
MGB	Panel Switch	Interior Light Switch		1798	1977-81	<b>30930</b>
MGB	Panel Switch	Lighting		1798	1977-81	<b>30949</b>
MGB	Column Switch	Wipe/Wash	{CA}, {JPI}, {US}	1798	1977-81	<b>SQB127</b>
MGB	Ignition Switch	Where Steering Lock Not Fitted		1798	1964-76	<b>31973</b>
MGB GT	Ignition Switch	Where Steering Lock Not Fitted		1798	1964-76	<b>31973</b>
MGB GT	Body Switch	Foot dip		1798	1969	<b>34790</b>
MGB GT	Column Switch	DI, Horn, Lighting	(LHD)	1798	1969-75	<b>39309</b>
MGB GT	Panel Switch	Rheostat		1798	1969-79	<b>78405</b>
MGB GT	Column Switch	DI, Horn, Lighting		1798	1971-76	<b>SQB118</b>
MGB GT	Panel Switch	Lighting		1798	1972-76	<b>39737</b>
MGB GT	Panel Switch	Fan		1798	1972-76	<b>39739</b>
MGB GT	Panel Switch	Lighting		1798	1973-76	<b>39914</b>
MGB GT	Panel Switch	Fan	{US}	1798	1974-76	<b>39915</b>
MGB GT	Column Switch	DI, Horn, Lighting	(LHD)	1798	1974-76	<b>SQB191</b>
MGB GT	Column Switch	Di,Horn, Flash Main Beam & Dip		1798	1976-81	<b>30893</b>
MGB GT	Panel Switch	Interior Light Switch		1798	1976-81	<b>30930</b>
MGB GT	Panel Switch	Lighting		1798	1977-81	<b>30924</b>
MGB GT	Panel Switch	Fan		1798	1977-81	<b>30926</b>

→





Description      Function      Engine Info      cc      OE      Part No.

→ ROVER					
Description	Function	Engine Info	cc	OE	Part No.
MGB GT	Panel Switch	Hazard Warning	1798	1977-81	<b>30927</b>
MGB GT	Panel Switch	Hazard Warning	1798	1977-81	<b>30928</b>
MGB GT	Panel Switch	Lighting	1798	1977-81	<b>30949</b>
MGB GT	Column Switch	Wipe/Wash	1798	1977-81	<b>SQB127</b>
MGB GT V8	Column Switch	DI, Horn, Lighting	3528	1972-74	<b>30404</b>
MGB GT V8	Panel Switch	2 position rocker	3528	1975-76	<b>39629</b>
MGB GT V8	Panel Switch	Lighting	3528	1975-76	<b>39737</b>
MGB GT V8	Panel Switch	Fan	3528	1975-76	<b>39739</b>
MGC, GT	Body Switch	Foot dip	6 Cyl OHV	2912 1969	<b>34790</b>
MGF 1.8i	Column Switch	DI, Lighting	1796	1995 >>	<b>SQB183</b>
MGF 1.8i VVC	Column Switch	Wipe/Wash	1796	1995 >>	<b>SQB184</b>
MGR V8	Column Switch	DI, Hazard, Horn, Lighting	3947	1993-96	<b>SQB160</b>
Mini All Models	Ignition Switch			1962-69	<b>31973</b>
Mini 1/4 Ton Van	Solenoid 4ST			1970-80	<b>SRB325</b>
Mini 1/4 Ton Van	Panel Switch	Lighting		1976-80	<b>30935</b>
Mini 1/4 Ton Van	Column Switch	DI, Horn, Lighting		1976-80	<b>SQB166</b>
Mini 1/4 Ton Van	Column Switch	Wiper/Wash	(LHD)	1976-80	<b>SQB167</b>
Mini 1/4 Ton Van	Column Switch	Wipe/Wash		1976-80	<b>SQB190</b>
Mini 1000	Solenoid 4ST		998	1969-92	<b>SRB325</b>
Mini 1000	Panel Switch	Lighting	998	1971-76	<b>39314</b>
Mini 1000	Panel Switch	Wiper	998	1971-76	<b>39315</b>
Mini 1000	Panel Switch	Hazard Warning	998	1975-92	<b>30771</b>
Mini 1000	Panel Switch	Lighting	998	1976-80	<b>30935</b>
Mini 1000	Column Switch	Wipe/Wash	998	1976-80	<b>SQB190</b>
Mini 1000	Column Switch	Wiper/Wash	998	1976-85	<b>SQB167</b>
Mini 1000	Column Switch	DI, Horn, Lighting	998	1976-85	<b>SQB189</b>
Mini 1000	Column Switch	DI, Horn, Lighting	998	1985-92	<b>SQB115</b>
Mini 1000	Column Switch	Wipe/Wash	998	1985-92	<b>SQB116</b>
Mini 1100	Panel Switch	Lighting	1098	1976	<b>39314</b>
Mini 1100	Panel Switch	Lighting	1098	1976-80	<b>30935</b>
Mini 1100	Panel Switch	Hazard Warning	1098	1976-81	<b>30771</b>
Mini 1100	Column Switch	Wiper/Wash	1098	1976-81	<b>SQB167</b>
Mini 1100	Column Switch	DI, Horn, Lighting	1098	1976-81	<b>SQB189</b>
Mini 1100	Column Switch	Wipe/Wash	1098	1976-81	<b>SQB190</b>
Mini 1300	Solenoid 4ST		1275	1991-94	<b>SRB325</b>
Mini 850	Solenoid 4ST		848	1969-80	<b>SRB325</b>
Mini 850	Panel Switch	Lighting	848	1971-76	<b>39314</b>
Mini 850	Panel Switch	Wiper	848	1971-76	<b>39315</b>
Mini 850	Panel Switch	Hazard Warning	848	1975-80	<b>30771</b>
Mini 850	Panel Switch	Lighting	848	1976-80	<b>30935</b>
Mini 850	Column Switch	Wiper/Wash	(LHD)	848 1976-80	<b>SQB167</b>
Mini 850	Column Switch	DI, Horn, Lighting	848	1976-80	<b>SQB189</b>
Mini 850	Column Switch	Wipe/Wash	848	1976-80	<b>SQB190</b>
Mini 95 Van	Panel Switch	Lighting	998	1980	<b>30935</b>
Mini 95 Van	Column Switch	Wipe/Wash	998	1980	<b>SQB190</b>
Mini 95 Van	Panel Switch	Hazard Warning	998	1980-83	<b>30771</b>
Mini 95 Van	Column Switch	DI, Horn, Lighting	(LHD)	998 1980-83	<b>SQB166</b>
Mini 95 Van	Column Switch	DI, Horn, Lighting	998	1980-83	<b>SQB189</b>
Mini 95 Van	Column Switch	Wiper/Wash	998	1981-83	<b>SQB167</b>
Mini 95 Van	Solenoid 4ST		998	1981-83	<b>SRB325</b>
Mini Cabriolet 1.3	Solenoid 4ST		1275	1991-94	<b>SRB325</b>
Mini Clubman 1000	Solenoid 4ST		998	1970-73	<b>SRB325</b>
Mini Clubman 1000	Panel Switch	Lighting	998	1971-76	<b>39314</b>
Mini Clubman 1000	Panel Switch	Wiper	998	1971-76	<b>39315</b>
Mini Clubman 1000	Solenoid 4ST		{CA}, {NO}	998 1971-80	<b>SRB335</b>
Mini Clubman 1000	Panel Switch	Hazard Warning	998	1976-80	<b>30771</b>
Mini Clubman 1000	Panel Switch	Lighting	998	1976-80	<b>30935</b>
Mini Clubman 1000	Column Switch	DI, Horn, Lighting	(LHD)	998 1976-80	<b>SQB166</b>
Mini Clubman 1000	Column Switch	Wiper/Wash	(LHD)	998 1976-80	<b>SQB167</b>
Mini Clubman 1000	Column Switch	DI, Horn, Lighting	998	1976-80	<b>SQB189</b>
Mini Clubman 1000	Column Switch	Wipe/Wash	998	1976-80	<b>SQB190</b>
Mini Clubman 1100	Panel Switch	Hazard Warning	1098	1975-80	<b>30771</b>
Mini Clubman 1100	Column Switch	DI, Horn, Lighting	(LHD)	1098 1975-80	<b>SQB166</b>
Mini Clubman 1100	Column Switch	Wiper/Wash	(LHD)	1098 1975-80	<b>SQB167</b>
Mini Clubman 1100	Column Switch	DI, Horn, Lighting	1098	1975-80	<b>SQB189</b>
Mini Clubman 1100	Column Switch	Wipe/Wash	1098	1975-80	<b>SQB190</b>
Mini Clubman 1100	Solenoid 4ST		{CA}, {NO}	1098 1975-80	<b>SRB335</b>
Mini Clubman 1100	Panel Switch	Lighting	1098	1976	<b>39314</b>
Mini Clubman 1100	Panel Switch	Wiper	1098	1976	<b>39315</b>





Description

Function

Engine Info

cc

OE

Part No.

→ ROVER

Mini Clubman 1100	Panel Switch	Lighting		1098	1976-80	<b>30935</b>
Mini Clubman 1275 GT	Column Switch	DI, Horn, Lighting		1275	1969-76	<b>SQB168</b>
Mini Clubman 1275 GT	Solenoid 4ST		(Auto)	1275	1970-73	<b>SRB325</b>
Mini Clubman 1275 GT	Solenoid 4ST		{CAI, (NO)	1275	1971-73	<b>SRB335</b>
Mini Clubman 1275 GT	Panel Switch	Lighting		1275	1971-76	<b>39314</b>
Mini Clubman 1275 GT	Panel Switch	Wiper		1275	1971-76	<b>39315</b>
Mini Clubman 1275 GT	Panel Switch	Hazard Warning		1275	1976-80	<b>30771</b>
Mini Clubman 1275 GT	Panel Switch	Lighting		1275	1976-80	<b>30935</b>
Mini Clubman 1275 GT	Column Switch	DI, Horn, Lighting	(LHD)	1275	1976-80	<b>SQB166</b>
Mini Clubman 1275 GT	Column Switch	Wiper/Wash	(LHD)	1275	1976-80	<b>SQB167</b>
Mini Clubman 1275 GT	Column Switch	DI, Horn, Lighting		1275	1976-80	<b>SQB189</b>
Mini Clubman 1275 GT	Column Switch	Wipe/Wash		1275	1976-80	<b>SQB190</b>
Mini Cooper 1.3i (SPi)	Column Switch	DI, Horn, Lighting		1275	1991-96	<b>SQB115</b>
Mini Cooper 1.3i (SPi)	Column Switch	Wipe/Wash		1275	1991-96	<b>SQB116</b>
Mini Cooper S	Solenoid 4ST			1275	1969-70	<b>SRB325</b>
Mini Cooper S	Panel Switch	Lighting		1275	1971	<b>39314</b>
Mini Cooper S	Panel Switch	Wiper		1275	1971	<b>39315</b>
Mini Cooper Si	Column Switch	DI, Horn, Lighting		1275	1992-96	<b>SQB115</b>
Mini Cooper Si	Column Switch	Wipe/Wash		1275	1992-96	<b>SQB116</b>
Mini Pick-Up 850, 1000	Solenoid 4ST				1970-83	<b>SRB325</b>
Mini Pick-Up 850, 1000	Panel Switch	Lighting			1976-80	<b>30935</b>
Mini Pick-Up 850, 1000	Column Switch	Wipe/Wash			1976-80	<b>SQB190</b>
Mini Pick-Up 850, 1000	Column Switch	DI, Horn, Lighting			1976-83	<b>SQB166</b>
Mini Pick-Up 850, 1000	Column Switch	Wiper/Wash	(LHD)		1976-83	<b>SQB167</b>
Mini Pick-Up 850, 1000	Panel Switch	Hazard Warning			1980-83	<b>30771</b>
Mini Pick-Up 850, 1000	Column Switch	DI, Horn, Lighting			1980-83	<b>SQB189</b>
Morris Ital 1.3	Panel Switch	Lighting	A Plus	1275	1980-84	<b>30452</b>
Morris Ital 1.3	Solenoid 4ST			1275	1980-84	<b>SRB335</b>
Morris Ital 1.7	Panel Switch	Lighting		1695	1980-84	<b>30452</b>
Morris Ital 2.0 Auto	Panel Switch	Lighting		1993	1980-82	<b>30452</b>
Morris Minor 1000	Solenoid 4ST			1098	1969-71	<b>SRB325</b>
Rover (100) 111	Column Switch	DI, Hazard, Horn, Lighting		1120	1990-92	<b>SQB108</b>
Rover (100) 111	Column Switch	Wipe variable delay, Washer		1120	1990-92	<b>SQB109</b>
Rover (100) 111i	Column Switch	DI, Hazard, Horn, Lighting		1120	1991-95	<b>SQB108</b>
Rover (100) 114	Column Switch	DI, Hazard, Horn, Lighting		1396	1990-92	<b>SQB108</b>
Rover (100) 114 GSi	Column Switch	Wiper variable intermittent, Washer		1396	1994-95	<b>SQB143</b>
Rover (100) 114 GTa	Column Switch	DI, Hazard, Horn, Lighting		1396	1991-94	<b>SQB108</b>
Rover (100) 114 GTi 16v	Column Switch	DI, Hazard, Horn, Lighting		1396	1990-91	<b>SQB108</b>
Rover (100) 114 GTi 16v	Column Switch	DI, Hazard, Horn, Lighting		1396	1991-94	<b>SQB108</b>
Rover (100) 114D	Column Switch	DI, Hazard, Horn, Lighting		1360	1992-94	<b>SQB108</b>
Rover (100) 114i	Column Switch	DI, Hazard, Horn, Lighting		1396	1991-94	<b>SQB108</b>
Rover (100) 114i	Column Switch	Wiper intermittent, Washer		1396	1991-95	<b>SQB141</b>
Rover (100) 114i 16v	Column Switch	DI, Hazard, Horn, Lighting		1396	1990-91	<b>SQB108</b>
Rover (100) 114i 16v	Column Switch	DI, Hazard, Horn, Lighting		1396	1991-94	<b>SQB108</b>
Rover (100) 114i 16v	Column Switch	DI, Lighting		1396	1991-95	<b>SQB140</b>
Rover (200 II Facelift) 216 16v, Cabriolet, Coupe	Column Switch	DI, Lighting		1590	1993-96	<b>SQB140</b>
Rover (200 II Facelift) 220 16v, GSi 16v, Turbo	Column Switch	Wiper variable intermittent, Washer		1994	1993-96	<b>SQB143</b>
Rover (200 II) 214	Column Switch	DI, Lighting		1396	1990-92	<b>SQB140</b>
Rover (200 II) 214	Column Switch	Wiper intermittent, Washer		1396	1990-92	<b>SQB141</b>
Rover (200 II) 214	Column Switch	Wiper variable intermittent, Washer		1396	1990-92	<b>SQB143</b>
Rover (200 II) 214 16v	Column Switch	DI, Lighting		1396	1989-92	<b>SQB140</b>
Rover (200 II) 214 16v	Column Switch	Wiper intermittent, Washer		1396	1989-92	<b>SQB141</b>
Rover (200 II) 214 16v	Column Switch	Wiper variable intermittent, Washer		1396	1989-92	<b>SQB143</b>
Rover (200 II) 214 Cabriolet	Column Switch	DI, Lighting		1396	1992-93	<b>SQB140</b>
Rover (200 II) 214 Cabriolet	Column Switch	Wiper intermittent, Washer		1396	1992-93	<b>SQB141</b>
Rover (200 II) 214 Cabriolet	Column Switch	Wiper variable intermittent, Washer		1396	1992-93	<b>SQB143</b>
Rover (200 II) 214 Cabriolet	Column Switch	DI, Lighting		1396	1992-93	<b>SQB183</b>
Rover (200 II) 216	Column Switch	DI, Lighting		1590	1989-92	<b>SQB140</b>
Rover (200 II) 216	Column Switch	Wiper variable intermittent, Washer		1590	1989-92	<b>SQB143</b>
Rover (200 II) 216 Cabriolet	Column Switch	DI, Lighting		1590	1992-93	<b>SQB140</b>
Rover (200 II) 216 Cabriolet	Column Switch	Wiper variable intermittent, Washer		1590	1992-93	<b>SQB143</b>
Rover (200 II) 216 Cabriolet	Column Switch	Wipe/Wash		1590	1992-93	<b>SQB184</b>
Rover (200 II) 216 Coupe	Column Switch	DI, Lighting		1590	1992-93	<b>SQB140</b>
Rover (200 II) 216 Coupe	Column Switch	Front and rear Wipe/Washer		1590	1992-93	<b>SQB185</b>
Rover (200 II) 216 GTi Twin Cam	Column Switch	DI, Lighting		1590	1990-93	<b>SQB140</b>
Rover (200 II) 216 GTi Twin Cam	Column Switch	Wiper variable intermittent, Washer		1590	1990-93	<b>SQB143</b>
Rover (200 II) 218D (1.7) Turbo	Column Switch	Wiper variable intermittent, Washer		1769	1991-93	<b>SQB143</b>
Rover (200 II) 218D (1.9)	Column Switch	Wiper variable intermittent, Washer		1905	1991-93	<b>SQB143</b>
Rover (200 II) 220 Coupe	Column Switch	Wiper variable intermittent, Washer		1994	1992-93	<b>SQB143</b>

→



Description
Function
Engine Info
cc
OE
Part No.

→ ROVER						
Description	Function	Engine Info	cc	OE	Part No.	
Rover (200 II) 220 Turbo Coupe	Column Switch	Wiper variable intermittent, Washer	1994	1992-93	<b>SQB143</b>	
Rover (200 III) 200vi	Column Switch	DI, Lighting	1796	1995-97	<b>SQB183</b>	
Rover (200 III) 214 16v	Column Switch	DI, Lighting	1396	1995-97	<b>SQB183</b>	
Rover (200 III) 216	Column Switch	DI, Lighting (CVT Auto)	1589	1995-97	<b>SQB183</b>	
Rover (200 III) 216	Column Switch	Front and rear Wipe/Washer	1589	1995-97	<b>SQB185</b>	
Rover (200 III) 220D, Di	Column Switch	DI, Lighting	1994	1995-97	<b>SQB183</b>	
Rover (200) 216	Column Switch	Wiper intermittent, Washer	1598	1989-90	<b>SQB141</b>	
Rover (200) 216	Column Switch	Wiper variable intermittent, Washer	1598	1989-90	<b>SQB143</b>	
Rover (200) 216 EFI	Column Switch	Wiper intermittent, Washer	1598	1989-90	<b>SQB141</b>	
Rover (200) 216 EFI	Column Switch	Wiper variable intermittent, Washer	1598	1989-90	<b>SQB143</b>	
Rover (200) 216 Vitesse	Column Switch	Wiper intermittent, Washer	1598	1989-90	<b>SQB141</b>	
Rover (200) 216 Vitesse	Column Switch	Wiper variable intermittent, Washer	1598	1989-90	<b>SQB143</b>	
Rover (400 Facelift) 414 16v	Column Switch	DI, Lighting		1992-96	<b>SQB140</b>	
Rover (400 Facelift) 414 16v	Column Switch	Wiper intermittent, Washer		1992-96	<b>SQB141</b>	
Rover (400 Facelift) 418D (1.7) Turbo	Column Switch	Wiper intermittent, Washer	1769	1992-96	<b>SQB141</b>	
Rover (400 Facelift) 418D (1.9)	Column Switch	Wiper intermittent, Washer	1905	1992-96	<b>SQB141</b>	
Rover (400 Facelift) 420 16v	Column Switch	Wiper intermittent, Washer T16	1994	1992-96	<b>SQB141</b>	
Rover (400 Facelift) 420 GSi Sport Turbo	Column Switch	Wiper intermittent, Washer T16	1994	1992-96	<b>SQB141</b>	
Rover (400 II) Hatchback 414	Column Switch	DI, Lighting	1396	1995-97	<b>SQB175</b>	
Rover (400 II) Hatchback 416	Column Switch	Front and Rear Wipe/Washer	1589	1995-97	<b>SQB176</b>	
Rover (400 II) Hatchback 416 Auto	Column Switch	Wipe/Wash	1590	1995-97	<b>SQB184</b>	
Rover (400 II) Hatchback 420	Column Switch	DI, Lighting	1994	1995-97	<b>SQB175</b>	
Rover (400) 414	Column Switch	DI, Lighting	1396	1990-92	<b>SQB140</b>	
Rover (400) 414	Column Switch	Wiper intermittent, Washer	1396	1990-92	<b>SQB141</b>	
Rover (400) 414	Column Switch	DI, Lighting	1396	1991-92	<b>SQB140</b>	
Rover (400) 414	Column Switch	Wiper intermittent, Washer	1396	1991-92	<b>SQB141</b>	
Rover (400) 416	Column Switch	Wiper intermittent, Washer	1590	1990-92	<b>SQB141</b>	
Rover (400) 416	Column Switch	DI, Lighting	1590	1990-92	<b>SQB140</b>	
Rover (400) 416 GTi Twin Cam	Column Switch	DI, Lighting	1590	1990-92	<b>SQB140</b>	
Rover (400) 416 GTi Twin Cam	Column Switch	Wiper intermittent, Washer	1590	1990-92	<b>SQB141</b>	
Rover (800 II) Coupe 827i	Column Switch	DI, Hazard, Horn, Lighting V6	2675	1992-96	<b>SQB160</b>	
Rover (800 II) Coupe 827i	Column Switch	Wipe/Wash V6	2675	1992-96	<b>SQB161</b>	
Rover (800 II) Fastback 820i	Column Switch	DI, Hazard, Horn, Lighting	1994	1991-97	<b>SQB160</b>	
Rover (800 II) Fastback 820i	Column Switch	Wipe/Wash	1994	1991-97	<b>SQB161</b>	
Rover (800 II) Fastback 825D	Column Switch	DI, Hazard, Horn, Lighting	2500	1991-97	<b>SQB160</b>	
Rover (800 II) Fastback 825D	Column Switch	Wipe/Wash	2500	1991-97	<b>SQB161</b>	
Rover (800 II) Fastback 827i	Column Switch	DI, Hazard, Horn, Lighting	2675	1991-96	<b>SQB160</b>	
Rover (800 II) Fastback 827i	Column Switch	Wipe/Wash	2675	1991-96	<b>SQB161</b>	
Rover (800) 820, 820e, 820Se	Fuel Pump	28RA (Se) M16e	1994	1986-91	<b>SRB500</b>	
Rover (800) 820i Turbo	Column Switch	DI, Hazard, Horn, Lighting	1994	1991	<b>SQB160</b>	
Rover (800) 820i Turbo	Column Switch	Wipe/Wash	1994	1991	<b>SQB161</b>	
Rover (SD1) 2000	Panel Switch	Lighting	1994	1982-86	<b>30713</b>	
Rover (SD1) 2000	Column Switch	DI, Horn, Lighting	1994	1983-86	<b>SQB113</b>	
Rover (SD1) 2000, 2300, 2400SD, 2600, 3500	Column Switch	Wiper		1985-87	<b>35414</b>	
Rover (SD1) 2300	Panel Switch	Lighting	2350	1977-87	<b>30713</b>	
Rover (SD1) 2300	Column Switch	DI, Horn, Lighting	2350	1983-87	<b>SQB113</b>	
Rover (SD1) 2400 SD Turbo	Panel Switch	Lighting	2393	1982-86	<b>30713</b>	
Rover (SD1) 2400 SD Turbo	Column Switch	DI, Horn, Lighting	2393	1983-86	<b>SQB113</b>	
Rover (SD1) 2600	Panel Switch	Lighting	2597	1977-87	<b>30713</b>	
Rover (SD1) 2600	Column Switch	DI, Horn, Lighting	2597	1983-87	<b>SQB113</b>	
Rover (SD1) 3500 EFI	Panel Switch	Lighting V8	3528	1984-86	<b>30713</b>	
Rover (SD1) 3500 V8	Panel Switch	Lighting	3528	1976-86	<b>30713</b>	
Rover (SD1) 3500 V8	Column Switch	DI, Horn, Lighting	3528	1983-86	<b>SQB113</b>	
Rover (SD1) Vitesse	Panel Switch	Lighting V8	3528	1982-86	<b>30713</b>	
Rover (SD1) Vitesse	Column Switch	DI, Horn, Lighting V8	3528	1983-86	<b>SQB113</b>	
Rover 75 1.8, 2.0 V6, Classic, Club, Connoisseur	Column Switch	DI, Lighting (no B.C)		06/99-04/05	<b>SQB426</b>	
Rover 75 1.8, 2.0 V6, Classic, Club, Connoisseur	Column Switch	DI, Lighting		06/99-04/05	<b>SQB427</b>	
Rover 75 1.8, 2.0 V6, Classic, Club, Connoisseur	Column Switch	Wipe/Wash		06/99-04/05	<b>SQB428</b>	
Rover 75 2.0 CDT, 2.5 V6 Classic, Club, Connoisseur	Column Switch	DI, Lighting (no B.C)		06/99-04/05	<b>SQB426</b>	
Rover 75 2.0 CDT, 2.5 V6 Classic, Club, Connoisseur	Column Switch	DI, Lighting		06/99-04/05	<b>SQB427</b>	
Rover 75 2.0 CDT, 2.5 V6 Classic, Club, Connoisseur	Column Switch	Wipe/Wash		06/99-04/05	<b>SQB428</b>	
Sterling 820e, Se	Fuel Pump	28RA	1994	1986-91	<b>SRB500</b>	
Triumph 1300, TC	Solenoid 4ST		1296	1969-70	<b>SRB325</b>	
Triumph 2000	Solenoid 4ST		1998	1969-71	<b>SRB325</b>	
Triumph 2500 PI	Solenoid 4ST		2498	1969-71	<b>SRB325</b>	
Triumph Dolomite 1300, 1500, 1850 HL	Panel Switch	Hazard Warning 4 Cyl OHV		1976-81	<b>39976</b>	

→

Refer to Section 2 for full product listing

**Lucas**





Description

Function

Engine Info

cc

OE

Part No.

→ ROVER

Triumph Dolomite 1300, 1500, 1850 HL	Panel Switch	Heater	4 Cyl OHV		1976-81	<b>54033632</b>
Triumph Dolomite 1300, 1500, 1850 HL	Column Switch	DI, Horn, Lighting	4 Cyl OHV	1493	1976-81	<b>SQB119</b>
Triumph Dolomite 1300, 1500, 1850 HL	Solenoid 4ST			1296	1976-81	<b>SRB335</b>
Triumph Dolomite 1300, 1500, 1850 HL	Panel Switch	Fog	4 Cyl OHV		1980-81	<b>33926</b>
Triumph Dolomite Sprint 16v	Panel Switch	Heater	4 Cyl OHC	1998	1973-81	<b>54033632</b>
Triumph Dolomite Sprint 16v	Column Switch	DI, Horn, Lighting	4 Cyl OHC	1998	1973-81	<b>SQB119</b>
Triumph Dolomite Sprint 16v	Panel Switch	Hazard Warning	4 Cyl OHC	1998	1975-81	<b>39976</b>
Triumph Dolomite Sprint 16v	Panel Switch	Fog	4 Cyl OHC	1998	1980-81	<b>33926</b>
Triumph GT6	Solenoid 4ST			1998	1969-70	<b>SRB325</b>
Triumph GT6	Solenoid 4ST			1998	1971-74	<b>SRB335</b>
Triumph Spitfire 1300	Solenoid 4ST			1296	1969-70	<b>SRB325</b>
Triumph Spitfire 1300	Solenoid 4ST			1296	1971-74	<b>SRB335</b>
Triumph Spitfire 1500	Panel Switch	Hazard Warning		1493	1976	<b>39976</b>
Triumph Spitfire 1500	Ignition Switch	Column Lock Switch		1493	1976-81	<b>30563</b>
Triumph Spitfire 1500	Panel Switch	Lighting		1493	1976-81	<b>30731</b>
Triumph Spitfire 1500	Column Switch	DI		1493	1976-81	<b>SQB126</b>
Triumph Spitfire 1500	Solenoid 4ST			1493	1976-81	<b>SRB335</b>
Triumph Spitfire 1500	Column Switch	DI, Horn, Lighting		1493	1977-81	<b>SQB195</b>
Triumph Spitfire 1500	Panel Switch	Fog		1493	1980-81	<b>33926</b>
Triumph Stag	Solenoid 4ST			2997	1972-77	<b>SRB335</b>
Triumph Stag	Panel Switch	Overdrive		2997	1973-77	<b>39166</b>
Triumph Stag	Panel Switch	Hazard Warning		2997	1973-77	<b>39976</b>
Triumph Toledo	Solenoid 4ST			1296	1971-75	<b>SRB335</b>
Triumph TR5	Solenoid 4ST			2498	1969	<b>SRB325</b>
Triumph TR6 PI (125 bhp)	Solenoid 4ST			2498	1969-75	<b>SRB325</b>
Triumph TR6 PI (125 bhp)	Body Switch	Foot dip		2498	1972-75	<b>34790</b>
Triumph TR6 PI (125 bhp)	Ignition Switch	Column Lock Switch		2498	1972-75	<b>39415</b>
Triumph TR6 PI (125 bhp)	Column Switch	DI		2498	1972-75	<b>SQB126</b>
Triumph TR6 PI (125 bhp)	Panel Switch	Hazard Warning		2498	1973-75	<b>39976</b>
Triumph TR6 PI (125 bhp)	Ignition Switch	Column Lock Switch	(NAS)	2498	1975	<b>30563</b>
Triumph TR6 PI (132/150 bhp)	Body Switch	Foot dip		2498	1969-72	<b>34790</b>
Triumph TR6 PI (132/150 bhp)	Column Switch	DI		2498	1969-72	<b>SQB126</b>
Triumph TR6 PI (132/150 bhp)	Solenoid 4ST			2498	1969-75	<b>SRB325</b>
Triumph TR7 FH Coupe, Sprint 16v	Panel Switch	Lighting		1998	1977-82	<b>34224</b>
Triumph TR7 FH Coupe, Sprint 16v	Column Switch	DI, Horn, Lighting		1998	1980-82	<b>SQB198</b>
Triumph TR8 DH Coupe	Column Switch	DI, Horn, Lighting	V8	3528	1979	<b>SQB192</b>
Triumph TR8 DH Coupe	Panel Switch	Lighting	V8	3528	1979-82	<b>34224</b>
Triumph TR8 DH Coupe	Column Switch	DI, Horn, Lighting	V8	3528	1980-82	<b>SQB198</b>
Triumph Vitesse 2 Litre	Solenoid 4ST			1998	1969-71	<b>SRB325</b>
Wolseley 1300	Ignition Switch			1275	1968-73	<b>31973</b>
Wolseley 1300	Solenoid 4ST			1275	1968-73	<b>SRB325</b>
Wolseley 18/85, 18/85.5	Ignition Switch			1798	1969-72	<b>31973</b>
Wolseley 18/85, 18/85.5	Solenoid 4ST			1798	1969-72	<b>SRB325</b>
Wolseley 2200 (Princess)	Solenoid 4ST			2227	1975	<b>SRB325</b>

**RVI (RTI)**

50 S35 L3 3.5 Ton	Solenoid 4ST			1981	1979-84	<b>SRB335</b>
50 S35 M2 3.5 Ton	Solenoid 4ST			3685	1979-86	<b>SRB335</b>
50 S35 U1, Z2 3.5 Ton	Solenoid 4ST			3860	1979-86	<b>SRB325</b>
50 S35-90, 110 3.5 Ton	Solenoid 4ST			3990	1987-93	<b>SRB325</b>
50 S46 L3 4.5 Ton	Solenoid 4ST			1981	1979-84	<b>SRB335</b>
50 S46 M2, U1, Z2 4.5 Ton	Solenoid 4ST				1979-87	<b>SRB335</b>
50 S46 Z2 4.5 Ton Turbo	Solenoid 4ST			3867	1985-86	<b>SRB325</b>
50 S46-90, 110 4.6 Ton	Solenoid 4ST			3990	1987-93	<b>SRB325</b>
50 S56 M2, U1 5.5 Ton	Solenoid 4ST				1979-87	<b>SRB335</b>
50 S56 U3 5.5 Ton	Solenoid 4ST			3867	1986-87	<b>SRB325</b>
50 S56 Z2 5.5 Ton	Solenoid 4ST			4052	1979-86	<b>SRB325</b>
50 S56-90, 110 5.6 Ton	Solenoid 4ST			3990	1987-93	<b>SRB325</b>
50 S66 M2 6.5 Ton	Solenoid 4ST			3685	1979-87	<b>SRB335</b>
50 S66 U1 6.5 Ton	Solenoid 4ST			3860	1979-87	<b>SRB325</b>
50 S66 U3 6.5 Ton	Solenoid 4ST			3867	1986-87	<b>SRB325</b>
50 S66 Z2 6.5 Ton	Solenoid 4ST			4052	1979-86	<b>SRB325</b>
50 S66-90, 110 6.6 Ton	Solenoid 4ST			3990	1987-93	<b>SRB325</b>
50 S75 U1 7.4 Ton	Solenoid 4ST			3860	1980-87	<b>SRB325</b>
50 S75 U3 7.4 Ton	Solenoid 4ST			3867	1986-87	<b>SRB325</b>
50 S75 Z2 7.4 Ton	Solenoid 4ST			4052	1980-86	<b>SRB325</b>
50 S75-90, 110 7.5 Ton	Solenoid 4ST			3990	1987-93	<b>SRB325</b>
500 K1050 16 Ton 4x2 Rigid, Truck	Ignition Switch	Heater-Start			1970-75	<b>35288</b>
500 K1050 16 Ton 4x2 Rigid, Truck	Solenoid 4ST		(12 V)		1971-75	<b>SRB341</b>

→



Description
Function
Engine Info
cc
OE
Part No.

→ RVI (RTI)					
Description	Function	Engine Info	cc	OE	Part No.
500 K1050 16 Ton 4x2 Rigid, Truck	Solenoid 4ST		(24 V)	1971-75	<b>SRB351</b>
500 K1100 16 Ton 4x2 Rigid	Solenoid 2ST		(12 V)	1969-70	<b>SRB319</b>
500 K1100 16 Ton 4x2 Rigid	Solenoid 2ST		(24 V)	1969-70	<b>SRB321</b>
500 K1100 16 Ton 4x2 Rigid	Ignition Switch	Heater-Start		1969-74	<b>35288</b>
500 K1100 16 Ton 4x2 Rigid	Solenoid 4ST		(12 V)	1971-74	<b>SRB341</b>
500 K1100 16 Ton 4x2 Rigid	Solenoid 4ST		(24 V)	1971-74	<b>SRB351</b>
500 K1613 16 Ton 4x2 Rigid	Solenoid 2ST		V8.510 (12 V)	8360 1969-70	<b>SRB319</b>
500 K1613 16 Ton 4x2 Rigid	Solenoid 2ST		V8.510 (24 V)	8360 1969-70	<b>SRB321</b>
500 K1613 16 Ton 4x2 Rigid	Ignition Switch	Heater-Start	Perkins V8	8360 1969-77	<b>35288</b>
500 K1613 16 Ton 4x2 Rigid	Solenoid 4ST		V8 (12 V)	8360 1971-77	<b>SRB341</b>
500 K1613 16 Ton 4x2 Rigid	Solenoid 4ST		V8 (24 V)	8360 1971-77	<b>SRB351</b>
500 K2011P, K2211P 20 Ton 6x2 Tractor Unit	Solenoid 2ST		(12 V)	5800 1969-70	<b>SRB319</b>
500 K2011P, K2211P 20 Ton 6x2 Tractor Unit	Solenoid 2ST		(24 V)	5800 1969-70	<b>SRB321</b>
500 K2011P, K2211P 20 Ton 6x2 Tractor Unit	Ignition Switch	Heater-Start		5800 1969-78	<b>35288</b>
500 K2011P, K2211P 20 Ton 6x2 Tractor Unit	Solenoid 4ST		(12 V)	5800 1971-78	<b>SRB341</b>
500 K2011P, K2211P 20 Ton 6x2 Tractor Unit	Solenoid 4ST		(24 V)	5800 1971-78	<b>SRB351</b>
500 K2213T 22 Ton 6x4 Rigid	Solenoid 2ST		(12 V)	8360 1969-70	<b>SRB319</b>
500 K2213T 22 Ton 6x4 Rigid	Solenoid 2ST		(24 V)	8360 1969-70	<b>SRB321</b>
500 K2213T 22 Ton 6x4 Rigid	Ignition Switch	Heater-Start		8360 1969-78	<b>35288</b>
500 K2213T 22 Ton 6x4 Rigid	Solenoid 4ST		(12 V)	8360 1971-78	<b>SRB341</b>
500 K2213T 22 Ton 6x4 Rigid	Solenoid 4ST		(24 V)	8360 1971-78	<b>SRB351</b>
500 K2413P 24 Ton 6x4 Tractor Unit	Solenoid 2ST		V8.510 (12 V)	8360 1969-70	<b>SRB319</b>
500 K2413P 24 Ton 6x4 Tractor Unit	Solenoid 2ST		V8.510 (24 V)	8360 1969-70	<b>SRB321</b>
500 K2413P 24 Ton 6x4 Tractor Unit	Ignition Switch	Heater-Start		8360 1969-78	<b>35288</b>
500 K2413P 24 Ton 6x4 Tractor Unit	Solenoid 4ST		V8 (12 V)	8360 1971-78	<b>SRB341</b>
500 K2413P 24 Ton 6x4 Tractor Unit	Solenoid 4ST		V8.510 (24 V)	8360 1971-78	<b>SRB351</b>
500 K2413R 24 Ton 6x4 Rigid	Solenoid 2ST		V8.510 (12 V)	8360 1969-70	<b>SRB319</b>
500 K2413R 24 Ton 6x4 Rigid	Solenoid 2ST		V8.510 (24 V)	8360 1969-70	<b>SRB321</b>
500 K2413R 24 Ton 6x4 Rigid	Ignition Switch	Heater-Start	Perkins V8	8360 1969-78	<b>35288</b>
500 K2413R 24 Ton 6x4 Rigid	Solenoid 4ST		V8 (12 V)	8360 1971-78	<b>SRB341</b>
500 K2413R 24 Ton 6x4 Rigid	Solenoid 4ST		V8 (24 V)	8360 1971-78	<b>SRB351</b>
500 K2413T 24 Ton 6x4 Rigid	Solenoid 2ST		V8.510 (12 V)	8360 1969-70	<b>SRB319</b>
500 K2413T 24 Ton 6x4 Rigid	Solenoid 2ST		V8.510 (24 V)	8360 1969-70	<b>SRB321</b>
500 K2413T 24 Ton 6x4 Rigid	Ignition Switch	Heater-Start	Perkins V8	8360 1969-78	<b>35288</b>
500 K2413T 24 Ton 6x4 Rigid	Solenoid 4ST		V8 (12 V)	8360 1971-78	<b>SRB341</b>
500 K2413T 24 Ton 6x4 Rigid	Solenoid 4ST		V8 (24 V)	8360 1971-78	<b>SRB351</b>
500 K2813P 28 Ton 6x4 Tractor Unit	Solenoid 2ST		V8.510 (12 V)	8360 1969-70	<b>SRB319</b>
500 K2813P 28 Ton 6x4 Tractor Unit	Solenoid 2ST		V8.510 (24 V)	8360 1969-70	<b>SRB321</b>
500 K2813P 28 Ton 6x4 Tractor Unit	Ignition Switch	Heater-Start	Perkins V8	8360 1969-78	<b>35288</b>
500 K2813P 28 Ton 6x4 Tractor Unit	Solenoid 4ST		V8 (12 V)	8360 1971-78	<b>SRB341</b>
500 K2813P 28 Ton 6x4 Tractor Unit	Solenoid 4ST		V8 (24 V)	8360 1971-78	<b>SRB351</b>
500 K3820D 38 Ton 6x4 Tractor Unit	Solenoid 2ST		(12 V)	1969-70	<b>SRB319</b>
500 K3820D 38 Ton 6x4 Tractor Unit	Solenoid 2ST		(24 V)	1969-70	<b>SRB321</b>
500 K3820D 38 Ton 6x4 Tractor Unit	Ignition Switch	Heater-Start		1969-78	<b>35288</b>
500 K3820D 38 Ton 6x4 Tractor Unit	Solenoid 4ST		(12 V)	1971-78	<b>SRB341</b>
500 K3820D 38 Ton 6x4 Tractor Unit	Solenoid 4ST		(24 V)	1971-78	<b>SRB351</b>
500 K3820P 38 Ton 6x4 Tractor Unit	Ignition Switch	Heater-Start	6 Cyl Chrysler	11946 1973-76	<b>35288</b>
500 K3820P 38 Ton 6x4 Tractor Unit	Solenoid 4ST		(12 V)	11946 1973-76	<b>SRB341</b>
500 K3820P 38 Ton 6x4 Tractor Unit	Solenoid 4ST		(24 V)	11946 1973-76	<b>SRB351</b>
500 K850 4x2 Rigid, Truck	Solenoid 2ST		(12 V)	1969-70	<b>SRB319</b>
500 K850 4x2 Rigid, Truck	Solenoid 2ST		(24 V)	1969-70	<b>SRB321</b>
500 K850 4x2 Rigid, Truck	Ignition Switch	Heater-Start		1969-78	<b>35288</b>
500 K850 4x2 Rigid, Truck	Solenoid 4ST		(12 V)	1971-78	<b>SRB341</b>
500 K850 4x2 Rigid, Truck	Solenoid 4ST		(24 V)	1971-78	<b>SRB351</b>
500 K950 4x2 Rigid, Truck	Solenoid 2ST		(12 V)	1969-70	<b>SRB319</b>
500 K950 4x2 Rigid, Truck	Solenoid 2ST		(24 V)	1969-70	<b>SRB321</b>
500 K950 4x2 Rigid, Truck	Ignition Switch	Heater-Start		1969-78	<b>35288</b>
500 K950 4x2 Rigid, Truck	Solenoid 4ST		(12 V)	1971-78	<b>SRB341</b>
500 K950 4x2 Rigid, Truck	Solenoid 4ST		(24 V)	1971-78	<b>SRB351</b>
500 KL500, KL600 Truck	Solenoid 2ST		(12 V)	5800 1969-70	<b>SRB319</b>
500 KL500, KL600 Truck	Solenoid 2ST		(24 V)	5800 1969-70	<b>SRB321</b>
500 KL500, KL600 Truck	Ignition Switch	Heater-Start		5800 1969-78	<b>35288</b>
500 KL500, KL600 Truck	Solenoid 4ST		(12 V)	5800 1971-78	<b>SRB341</b>
500 KL500, KL600 Truck	Solenoid 4ST		(24 V)	5800 1971-78	<b>SRB351</b>
500 KP1000 28 Ton 6x2 Tractor Unit	Solenoid 2ST		(12 V)	1969-70	<b>SRB319</b>
500 KP1000 28 Ton 6x2 Tractor Unit	Solenoid 2ST		(24 V)	1969-70	<b>SRB321</b>
500 KP1000 28 Ton 6x2 Tractor Unit	Ignition Switch	Heater-Start		1969-78	<b>35288</b>
500 KP1000 28 Ton 6x2 Tractor Unit	Solenoid 4ST		(12 V)	1971-78	<b>SRB341</b>
500 KP1000 28 Ton 6x2 Tractor Unit	Solenoid 4ST		(24 V)	1971-78	<b>SRB351</b>





Description
Function
Engine Info
cc
OE
Part No.

→ RVI (RTI)						
500 KP700 20 Ton 4x2 Tractor Unit	Solenoid 2ST		(12 V)		1969-70	<b>SRB319</b>
500 KP700 20 Ton 4x2 Tractor Unit	Solenoid 2ST		(24 V)		1969-70	<b>SRB321</b>
500 KP700 20 Ton 4x2 Tractor Unit	Ignition Switch	Heater-Start			1969-78	<b>35288</b>
500 KP700 20 Ton 4x2 Tractor Unit	Solenoid 4ST		(12 V)		1971-78	<b>SRB341</b>
500 KP700 20 Ton 4x2 Tractor Unit	Solenoid 4ST		(24 V)		1971-78	<b>SRB351</b>
500 KP850, 950 22 Ton 4x2 Tractor Unit	Solenoid 2ST		(12 V)		1969-70	<b>SRB319</b>
500 KP850, 950 22 Ton 4x2 Tractor Unit	Solenoid 2ST		(24 V)		1969-70	<b>SRB321</b>
500 KP850, 950 22 Ton 4x2 Tractor Unit	Ignition Switch	Heater-Start			1969-78	<b>35288</b>
500 KP850, 950 22 Ton 4x2 Tractor Unit	Solenoid 4ST		(12 V)		1971-78	<b>SRB341</b>
500 KP850, 950 22 Ton 4x2 Tractor Unit	Solenoid 4ST		(24 V)		1971-78	<b>SRB351</b>
500 KR900 22 Ton 6x2 Rigid	Solenoid 2ST		(12 V)		1969-70	<b>SRB319</b>
500 KR900 22 Ton 6x2 Rigid	Solenoid 2ST		(24 V)		1969-70	<b>SRB321</b>
500 KR900 22 Ton 6x2 Rigid	Ignition Switch	Heater-Start			1969-78	<b>35288</b>
500 KR900 22 Ton 6x2 Rigid	Solenoid 4ST		(12 V)		1971-78	<b>SRB341</b>
500 KR900 22 Ton 6x2 Rigid	Solenoid 4ST		(24 V)		1971-78	<b>SRB351</b>
500 KT900 22 Ton 6x4 Rigid	Solenoid 2ST		(12 V)		1969-70	<b>SRB319</b>
500 KT900 22 Ton 6x4 Rigid	Solenoid 2ST		(24 V)		1969-70	<b>SRB321</b>
500 KT900 22 Ton 6x4 Rigid	Ignition Switch	Heater-Start			1969-78	<b>35288</b>
500 KT900 22 Ton 6x4 Rigid	Solenoid 4ST		(12 V)		1971-78	<b>SRB341</b>
500 KT900 22 Ton 6x4 Rigid	Solenoid 4ST		(24 V)		1971-78	<b>SRB351</b>
Bantam FBH322, 398 3.0 Ton Platform Truck	Ignition Switch	Heater-Start		2266	1974-78	<b>35288</b>
Bantam FBH322, 398 3.0 Ton Platform Truck	Ignition Switch			2266	1976-78	<b>34680</b>
Bantam FBH322, 398 3.0 Ton Platform Truck	Panel Switch	Lighting		2266	1976-78	<b>36546</b>
Bantam FBTI322, 1398 3.0 Ton Platform Truck	Ignition Switch	Heater-Start		3330	1974-78	<b>35288</b>
Bantam FBTI322, 1398 3.0 Ton Platform Truck	Ignition Switch			3330	1976-78	<b>34680</b>
Bantam FBTI322, 1398 3.0 Ton Platform Truck	Panel Switch	Lighting		3330	1976-78	<b>36546</b>
CE8	Solenoid 2ST		(12 V)		1969-70	<b>SRB319</b>
CE8	Solenoid 2ST		(24 V)		1969-70	<b>SRB321</b>
CE8	Solenoid 4ST		(12 V)		1971-73	<b>SRB341</b>
CE8	Solenoid 4ST		(24 V)		1971-73	<b>SRB351</b>
Commando (100) G1111, G1175, G1185 11.2 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G1111, G1175, G1185 11.2 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G1190 11.2 Ton	Solenoid 4ST		(12 V)	5680	1974-75	<b>SRB341</b>
Commando (100) G1190 11.2 Ton	Solenoid 4ST		(24 V)	5680	1974-75	<b>SRB351</b>
Commando (100) G1195 11.2 Ton	Solenoid 4ST		(Petrol) (12 V)		1975	<b>SRB341</b>
Commando (100) G1195 11.2 Ton	Solenoid 4ST		(Truck) (24 V)		1975	<b>SRB351</b>
Commando (100) G1385 13 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G1385 13 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G1390 13 Ton	Solenoid 4ST		(12 V)	5680	1975	<b>SRB341</b>
Commando (100) G15 90 14.5 Ton Truck	Solenoid 4ST		(12 V)	5680	1974-75	<b>SRB341</b>
Commando (100) G15 90 14.5 Ton Truck	Solenoid 4ST		(24 V)	5680	1974-75	<b>SRB351</b>
Commando (100) G1511 14.5 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G1511 14.5 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G1585 14.5 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G1585 14.5 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G1590 14.5 Ton	Solenoid 4ST		(12 V)	5680	1974-75	<b>SRB341</b>
Commando (100) G1590 14.5 Ton	Solenoid 4ST		(24 V)	5680	1974-75	<b>SRB351</b>
Commando (100) G1611 16.0 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G1611 16.0 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G1611 16.0 Ton	Column Switch	DI, Horn, Lighting		5800	1974-81	<b>SQB983</b>
Commando (100) G1613 16.0 Ton	Column Switch	DI, Horn, Lighting		V8 8830	1977-81	<b>SQB983</b>
Commando (100) G1685 16.0 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G1685 16.0 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G1690 16.0 Ton	Solenoid 4ST		(12 V)	5680	1974-75	<b>SRB341</b>
Commando (100) G1690 16.0 Ton	Solenoid 4ST		(24 V)	5680	1974-75	<b>SRB351</b>
Commando (100) G1811P 18.0 Ton Tractor Unit	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G1811P 18.0 Ton Tractor Unit	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G7560 7.38 Ton	Solenoid 4ST		(12 V)	3860	1974-75	<b>SRB341</b>
Commando (100) G7560 7.38 Ton	Solenoid 4ST		(24 V)	3860	1974-75	<b>SRB351</b>
Commando (100) G7575 7.38 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G7575 7.38 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>
Commando (100) G7595 7.38 Ton	Solenoid 4ST		(12 V)	5211	1974-75	<b>SRB341</b>
Commando (100) G7595 7.38 Ton	Solenoid 4ST		(24 V)	5211	1974-75	<b>SRB351</b>
Commando (100) G8660 8.5 Ton	Solenoid 4ST		(12 V)	3860	1974-75	<b>SRB341</b>
Commando (100) G8660 8.5 Ton	Solenoid 4ST		(24 V)	3860	1974-75	<b>SRB351</b>
Commando (100) G8675, G8685 8.5 Ton	Solenoid 4ST		(12 V)	5800	1974-75	<b>SRB341</b>
Commando (100) G8675, G8685 8.5 Ton	Solenoid 4ST		(24 V)	5800	1974-75	<b>SRB351</b>

→





Description      Function      Engine Info      cc      OE      Part No.

→ RVI (RTI)						
Commando (100) G8695 8.5 Ton	Solenoid 4ST		(Petrol) (12 V)	5211	1974-75	<b>SRB341</b>
Commando (100) G8695 8.5 Ton	Solenoid 4ST		(Petrol) (24 V)	5211	1974-75	<b>SRB351</b>
Commando (100) II G08 Z3, Z4 7.38 Ton	Panel Switch	Push		5800	1981-89	<b>SPB106</b>
Commando (100) II G08 Z3, Z4 7.38 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G08 Z3, Z4 7.38 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G08 Z3, Z4 7.38 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G09 Z3, Z4 8.5 Ton	Panel Switch	Push		5800	1981-86	<b>SPB106</b>
Commando (100) II G09 Z3, Z4 8.5 Ton	Panel Switch	Hazard Warning		5800	1982-86	<b>33848</b>
Commando (100) II G09 Z3, Z4 8.5 Ton	Panel Switch	Fog		5800	1982-86	<b>34245</b>
Commando (100) II G09 Z3, Z4 8.5 Ton	Column Switch	DI, Lighting		5800	1982-86	<b>SQB984</b>
Commando (100) II G10 Z3, Z4 9.7 Ton	Panel Switch	Push		5800	1981-89	<b>SPB106</b>
Commando (100) II G10 Z3, Z4 9.7 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G10 Z3, Z4 9.7 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G10 Z3, Z4 9.7 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G11 Z3, Z4 11.2 Ton	Panel Switch	Push		5800	1981-89	<b>SPB106</b>
Commando (100) II G11 Z3, Z4 11.2 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G11 Z3, Z4 11.2 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G11 Z3, Z4 11.2 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G11 Z6 11.2 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G11 Z6 11.2 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G11 Z6 11.2 Ton	Panel Switch	Push		5800	1982-89	<b>SPB106</b>
Commando (100) II G11 Z6 11.2 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G12 Z3 12.0 Ton	Panel Switch	Push		5800	1981-89	<b>SPB106</b>
Commando (100) II G12 Z3 12.0 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G12 Z3 12.0 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G12 Z3 12.0 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G12 Z4 12.0 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G12 Z4 12.0 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G12 Z4 12.0 Ton	Panel Switch	Push		5800	1982-89	<b>SPB106</b>
Commando (100) II G12 Z4 12.0 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G12 Z6 12.0 Ton	Panel Switch	Push		5800	1981-89	<b>SPB106</b>
Commando (100) II G12 Z6 12.0 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G12 Z6 12.0 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G12 Z6 12.0 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G13 V5 13.0 Ton	Panel Switch	Push	V8	8830	1981-89	<b>SPB106</b>
Commando (100) II G13 V5 13.0 Ton	Panel Switch	Hazard Warning	V8	8830	1982-89	<b>33848</b>
Commando (100) II G13 V5 13.0 Ton	Panel Switch	Fog	V8	8830	1982-89	<b>34245</b>
Commando (100) II G13 V5 13.0 Ton	Column Switch	DI, Lighting	V8	8830	1982-89	<b>SQB984</b>
Commando (100) II G13 Z3, Z6 13.0 Ton	Panel Switch	Push		5800	1981-89	<b>SPB106</b>
Commando (100) II G13 Z3, Z6 13.0 Ton	Panel Switch	Hazard Warning		5800	1982-89	<b>33848</b>
Commando (100) II G13 Z3, Z6 13.0 Ton	Panel Switch	Fog		5800	1982-89	<b>34245</b>
Commando (100) II G13 Z3, Z6 13.0 Ton	Column Switch	DI, Lighting		5800	1982-89	<b>SQB984</b>
Commando (100) II G15 V5 14.5 Ton	Panel Switch	Hazard Warning	V8	8830	1982-86	<b>33848</b>
Commando (100) II G15 V5 14.5 Ton	Panel Switch	Fog	V8	8830	1982-86	<b>34245</b>
Commando (100) II G15 V5 14.5 Ton	Panel Switch	Push	V8	8830	1982-86	<b>SPB106</b>
Commando (100) II G15 V5 14.5 Ton	Column Switch	DI, Lighting	V8	8830	1982-86	<b>SQB984</b>
Commando (100) II G15 Z3, Z6 14.5 Ton	Panel Switch	Push		5800	1981-86	<b>SPB106</b>
Commando (100) II G15 Z3, Z6 14.5 Ton	Panel Switch	Hazard Warning		5800	1982-86	<b>33848</b>
Commando (100) II G15 Z3, Z6 14.5 Ton	Panel Switch	Fog		5800	1982-86	<b>34245</b>
Commando (100) II G15 Z3, Z6 14.5 Ton	Column Switch	DI, Lighting		5800	1982-86	<b>SQB984</b>
Commando (100) II G16 V5 16.0 Ton	Panel Switch	Push	V8	8830	1981-88	<b>SPB106</b>
Commando (100) II G16 V5 16.0 Ton	Panel Switch	Hazard Warning	V8	8830	1982-88	<b>33848</b>
Commando (100) II G16 V5 16.0 Ton	Panel Switch	Fog	V8	8830	1982-88	<b>34245</b>
Commando (100) II G16 V5 16.0 Ton	Column Switch	DI, Lighting	V8	8830	1982-88	<b>SQB984</b>
Commando (100) II G16 V7 16.0 Ton	Panel Switch	Hazard Warning	TV8	8830	1984-88	<b>33848</b>
Commando (100) II G16 V7 16.0 Ton	Panel Switch	Fog	TV8	8830	1984-88	<b>34245</b>
Commando (100) II G16 V7 16.0 Ton	Panel Switch	Push	TV8	8830	1984-88	<b>SPB106</b>
Commando (100) II G16 V7 16.0 Ton	Column Switch	DI, Lighting	TV8	8830	1984-88	<b>SQB984</b>
Commando (100) II G16 Z3, Z6 16.0 Ton	Panel Switch	Push		5800	1981-88	<b>SPB106</b>
Commando (100) II G16 Z3, Z6 16.0 Ton	Panel Switch	Hazard Warning		5800	1982-88	<b>33848</b>
Commando (100) II G16 Z3, Z6 16.0 Ton	Panel Switch	Fog		5800	1982-88	<b>34245</b>
Commando (100) II G16 Z3, Z6 16.0 Ton	Column Switch	DI, Lighting		5800	1982-88	<b>SQB984</b>
Commando (100) II G17 V5, V7 17.0 Ton	Panel Switch	Hazard Warning	V8	8830	1988-89	<b>33848</b>
Commando (100) II G17 V5, V7 17.0 Ton	Panel Switch	Fog	V8	8830	1988-89	<b>34245</b>
Commando (100) II G17 V5, V7 17.0 Ton	Panel Switch	Push	V8	8830	1988-89	<b>SPB106</b>
Commando (100) II G17 V5, V7 17.0 Ton	Column Switch	DI, Lighting	V8	8830	1988-89	<b>SQB984</b>
Commando (100) II G17 Z3, Z6 17.0 Ton	Panel Switch	Hazard Warning		5800	1988-89	<b>33848</b>
Commando (100) II G17 Z3, Z6 17.0 Ton	Panel Switch	Fog		5800	1988-89	<b>34245</b>
Commando (100) II G17 Z3, Z6 17.0 Ton	Panel Switch	Push		5800	1988-89	<b>SPB106</b>







Description

Function

Engine Info

cc

OE

Part No.

→ RVI (RTI)

Commando (100) II G17 Z3, Z6 17.0 Ton	Column Switch	DI, Lighting	5800	1988-89	<b>SQB984</b>
Commando (100) II G18 Z6 18.0 Ton					
Tractor Unit	Panel Switch	Hazard Warning	5800	1982-86	<b>33848</b>
Commando (100) II G18 Z6 18.0 Ton					
Tractor Unit	Panel Switch	Fog	5800	1982-86	<b>34245</b>
Commando (100) II G18 Z6 18.0 Ton					
Tractor Unit	Panel Switch	Push	5800	1982-86	<b>SPB106</b>
Commando (100) II G18 Z6 18.0 Ton					
Tractor Unit	Column Switch	DI, Lighting	5800	1982-86	<b>SQB984</b>
Commando (100) II G20 Z6 20.0 Ton					
Tractor Unit	Panel Switch	Push	5800	1981-89	<b>SPB106</b>
Commando (100) II G20 Z6 20.0 Ton					
Tractor Unit	Panel Switch	Hazard Warning	5800	1982-89	<b>33848</b>
Commando (100) II G20 Z6 20.0 Ton					
Tractor Unit	Panel Switch	Fog	5800	1982-89	<b>34245</b>
Commando (100) II G20 Z6 20.0 Ton					
Tractor Unit	Column Switch	DI, Lighting	5800	1982-89	<b>SQB984</b>
Commando (100) II G26, V5 26.0 Ton					
Tractor Unit	Panel Switch	Push	8830	1981-89	<b>SPB106</b>
Commando (100) II G26, V5 26.0 Ton					
Tractor Unit	Panel Switch	Hazard Warning	8830	1982-89	<b>33848</b>
Commando (100) II G26, V5 26.0 Ton					
Tractor Unit	Panel Switch	Fog	8830	1982-89	<b>34245</b>
Commando (100) II G26, V5 26.0 Ton					
Tractor Unit	Column Switch	DI, Lighting	8830	1982-89	<b>SQB984</b>
KC Walk-Thru 1 1/2, 2, 3 Ton, Diesel	Solenoid 4ST			1969-76	<b>SRB325</b>
PB 1500, 2000, 2500 (Spacevan) Diesel	Solenoid 2ST		1724	1969-70	<b>SRB319</b>
PB 1500, 2000, 2500 (Spacevan) Diesel	Solenoid 4ST		1724	1971-76	<b>SRB341</b>
PB 1500, 2000, 2500 (Spacevan) Diesel	Solenoid 4ST		1724	1976-81	<b>SRB325</b>
VC4, 5, 7	Solenoid 4ST			1969-70	<b>SRB325</b>
VC4, 5, 7	Solenoid 2ST			1970-71	<b>SRB319</b>
VC4, 5, 7	Solenoid 4ST			1971-73	<b>SRB341</b>
VC8	Solenoid 4ST		5800	1969-70	<b>SRB325</b>
VC8	Solenoid 2ST		5800	1970-71	<b>SRB319</b>
VC8	Solenoid 4ST		5800	1971-73	<b>SRB341</b>

## SEAT

Ibiza (II) 1.5i	Fuelling Relay		S/Porsche	1461	1989-93	<b>FDB505</b>
Ibiza 1.5i	Fuelling Relay		S/Porsche	1461	1987-90	<b>FDB505</b>
Malaga 1.5i	Fuelling Relay			1461	1987-91	<b>FDB505</b>

## SEDDON ATKINSON

200 (R16N358) Series	Panel Switch	Hazard Warning		5870	1976-82	<b>35476</b>
200 (R16N358) Series	Panel Switch	2 position rocker		5870	1976-82	<b>39629</b>
200 (R16N358) Series	Column Switch	Wipe/Wash		5870	1976-82	<b>SQB222</b>
200 (R16N358) Series	Column Switch	DI, Horn, Lighting		5870	1976-82	<b>SQB223</b>
200 (R16N358) Series	Solenoid 4ST		(24 V)	5870	1976-82	<b>SRB351</b>
200 (R16N358) Series	Solenoid 4ST		(12 V)	5870	1978-82	<b>SRB341</b>
201 (R17N13) Series	Panel Switch	Hazard Warning		5870	1982-85	<b>35476</b>
201 (R17N13) Series	Panel Switch	2 position rocker		5870	1982-85	<b>39629</b>
201 (R17N13) Series	Column Switch	Wipe/Wash		5870	1982-85	<b>SQB222</b>
201 (R17N13) Series	Column Switch	DI, Horn, Lighting		5870	1982-85	<b>SQB223</b>
201 (R17P16) Series	Panel Switch	Hazard Warning		5870	1983-86	<b>35476</b>
201 (R17P16) Series	Panel Switch	2 position rocker		5870	1983-86	<b>39629</b>
201 (R17P16) Series	Column Switch	Wipe/Wash		5870	1983-86	<b>SQB222</b>
201 (R17P16) Series	Column Switch	DI, Horn, Lighting		5870	1983-86	<b>SQB223</b>
210 (C17) 4x2 Rigid (Cummins 6BTAA 210)	Panel Switch	Hazard Warning		5880	1993 >>	<b>35476</b>
210 (C17) 4x2 Rigid (Cummins 6BTAA 210)	Panel Switch	2 position rocker		5880	1993 >>	<b>39629</b>
210 (C17) 4x2 Rigid (Cummins 6BTAA 210)	Column Switch	Wipe/Wash		5880	1993 >>	<b>SQB222</b>
210 (C17) 4x2 Rigid (Cummins 6BTAA 210)	Column Switch	DI, Horn, Lighting		5880	1993 >>	<b>SQB223</b>
300 (R24M466) 6x4 Rigid	Panel Switch	Hazard Warning		7640	1978-82	<b>35476</b>
300 (R24M466) 6x4 Rigid	Column Switch	Wipe/Wash		7640	1978-82	<b>SQB222</b>
300 (R24M466) 6x4 Rigid	Column Switch	DI, Horn, Lighting		7640	1978-82	<b>SQB223</b>
301 (R24L22) 6x4 Rigid (Cummins LT10-220)	Panel Switch	Hazard Warning		10013	1983-87	<b>35476</b>
301 (R24L22) 6x4 Rigid (Cummins LT10-220)	Column Switch	Wipe/Wash		10013	1983-87	<b>SQB222</b>
301 (R24L22) 6x4 Rigid (Cummins LT10-220)	Column Switch	DI, Horn, Lighting		10013	1983-87	<b>SQB223</b>
301 (R24M466) 6x4 Rigid	Panel Switch	Hazard Warning		7640	1982-85	<b>35476</b>
301 (R24M466) 6x4 Rigid	Column Switch	Wipe/Wash		7640	1982-85	<b>SQB222</b>
301 (R24M466) 6x4 Rigid	Column Switch	DI, Horn, Lighting		7640	1982-85	<b>SQB223</b>

→



Description
Function
Engine Info
cc
OE
Part No.

→ <i>SEDDON ATKINSON</i>						
301 (R30L25) 8x4 Rigid (Cummins LT10-250)	Panel Switch	Hazard Warning	10013	1985-87		<b>35476</b>
301 (R30L25) 8x4 Rigid (Cummins LT10-250)	Column Switch	Wipe/Wash	10013	1985-87		<b>SQB222</b>
301 (R30L25) 8x4 Rigid (Cummins LT10-250)	Column Switch	DI, Horn, Lighting	10013	1985-87		<b>SQB223</b>
301 (T17L25) 4x2 Tractor Unit (Cummins LT10-250)	Panel Switch	Hazard Warning	10013	1985-87		<b>35476</b>
301 (T17L25) 4x2 Tractor Unit (Cummins LT10-250)	Column Switch	Wipe/Wash	10013	1985-87		<b>SQB222</b>
301 (T17L25) 4x2 Tractor Unit (Cummins LT10-250)	Column Switch	DI, Horn, Lighting	10013	1985-87		<b>SQB223</b>
301 (T17L29) 4x2 Tractor Unit (Cummins LTA10-290)	Panel Switch	Hazard Warning	10013	1984-87		<b>35476</b>
301 (T17L29) 4x2 Tractor Unit (Cummins LTA10-290)	Column Switch	Wipe/Wash	10013	1984-87		<b>SQB222</b>
301 (T17L29) 4x2 Tractor Unit (Cummins LTA10-290)	Column Switch	DI, Horn, Lighting	10013	1984-87		<b>SQB223</b>
301 (T22L29) 6x2 Tractor Unit (Cummins LTA10-290)	Panel Switch	Hazard Warning	10013	1984-87		<b>35476</b>
301 (T22L29) 6x2 Tractor Unit (Cummins LTA10-290)	Column Switch	Wipe/Wash	10013	1984-87		<b>SQB222</b>
301 (T22L29) 6x2 Tractor Unit (Cummins LTA10-290)	Column Switch	DI, Horn, Lighting	10013	1984-87		<b>SQB223</b>
301 (T24L29) 6x4 Tractor Unit (Cummins LTA10-290)	Panel Switch	Hazard Warning	10013	1984-87		<b>35476</b>
301 (T24L29) 6x4 Tractor Unit (Cummins LTA10-290)	Column Switch	Wipe/Wash	10013	1984-87		<b>SQB222</b>
301 (T24L29) 6x4 Tractor Unit (Cummins LTA10-290)	Column Switch	DI, Horn, Lighting	10013	1984-87		<b>SQB223</b>
400 (R30G6XC) 8x4 Rigid	Panel Switch	Hazard Warning	10450	1978-80		<b>35476</b>
400 (R30G6XC) 8x4 Rigid	Column Switch	Wipe/Wash	10450	1978-80		<b>SQB222</b>
400 (R30G6XC) 8x4 Rigid	Column Switch	DI, Horn, Lighting	10450	1978-80		<b>SQB223</b>
400 (T30G6XB, T32G6XC) 8x4 Series	Panel Switch	Hazard Warning	10450	1976-78		<b>35476</b>
400 (T30G6XB, T32G6XC) 8x4 Series	Column Switch	Wipe/Wash	10450	1976-78		<b>SQB222</b>
400 (T30G6XB, T32G6XC) 8x4 Series	Column Switch	DI, Horn, Lighting	10450	1976-78		<b>SQB223</b>
400 (T34R220) 8x4 Series	Panel Switch	Hazard Warning	12170	1976-78		<b>35476</b>
400 (T34R220) 8x4 Series	Column Switch	Wipe/Wash	12170	1976-78		<b>SQB222</b>
400 (T34R220) 8x4 Series	Column Switch	DI, Horn, Lighting	12170	1976-78		<b>SQB223</b>
400 (T36C250) 8x4 Series	Panel Switch	Hazard Warning	14000	1976-80		<b>35476</b>
400 (T36C250) 8x4 Series	Column Switch	Wipe/Wash	14000	1976-80		<b>SQB222</b>
400 (T36C250) 8x4 Series	Column Switch	DI, Horn, Lighting	14000	1976-80		<b>SQB223</b>
400 (T36C250T) 8x4 Series	Panel Switch	Hazard Warning	14000	1979-80		<b>35476</b>
400 (T36C250T) 8x4 Series	Column Switch	Wipe/Wash	14000	1979-80		<b>SQB222</b>
400 (T36C250T) 8x4 Series	Column Switch	DI, Horn, Lighting	14000	1979-80		<b>SQB223</b>
400 (T36R265), (T36G8XB) 8x4 Series	Panel Switch	Hazard Warning	12170	1976-80		<b>35476</b>
400 (T36R265), (T36G8XB) 8x4 Series	Column Switch	Wipe/Wash	12170	1976-80		<b>SQB222</b>
400 (T36R265), (T36G8XB) 8x4 Series	Column Switch	DI, Horn, Lighting	12170	1976-80		<b>SQB223</b>
400 (T38C290) 8x4 Series	Panel Switch	Hazard Warning	14000	1976-80		<b>35476</b>
400 (T38C290) 8x4 Series	Column Switch	Wipe/Wash	14000	1976-80		<b>SQB222</b>
400 (T38C290) 8x4 Series	Column Switch	DI, Horn, Lighting	14000	1976-80		<b>SQB223</b>
400 (T38R280) 8x4 Series	Panel Switch	Hazard Warning	12170	1976		<b>35476</b>
400 (T38R280) 8x4 Series	Column Switch	Wipe/Wash	12170	1976		<b>SQB222</b>
400 (T38R280) 8x4 Series	Column Switch	DI, Horn, Lighting	12170	1976		<b>SQB223</b>
400 (T38R290) 8x4 Series	Panel Switch	Hazard Warning	12170	1976-80		<b>35476</b>
400 (T38R290) 8x4 Series	Column Switch	Wipe/Wash	12170	1976-80		<b>SQB222</b>
400 (T38R290) 8x4 Series	Column Switch	DI, Horn, Lighting	12170	1976-80		<b>SQB223</b>
401 (R30G23) 8x4 Rigid	Column Switch	DI, Horn, Lighting	10450	1983-85		<b>SQB223</b>
401 (R30G27), (R30R26) 8x4 Rigid	Column Switch	DI, Horn, Lighting	12700	1983-87		<b>SQB223</b>
401 (T17C25) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	1982-85		<b>SQB223</b>
401 (T17C29) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	1979-85		<b>SQB223</b>
401 (T17C32) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	1984-87		<b>SQB223</b>
401 (T17G23, 30, 32) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting		1985-87		<b>SQB223</b>
401 (T17L25) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	10013	1982-87		<b>SQB223</b>
401 (T17L29) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	10013	1984-87		<b>SQB223</b>
401 (T17R26) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	1980-85		<b>SQB223</b>
401 (T17R30) 4x2 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	1984-87		<b>SQB223</b>
401 (T22C29, 32) 6x2 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	1984-87		<b>SQB223</b>
401 (T22R30) 6x2 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	1984-87		<b>SQB223</b>
401 (T24C32) 6x4 Tractor Unit	Column Switch	DI, Horn, Lighting	14000	1984-87		<b>SQB223</b>
401 (T24R30) 6x4 Tractor Unit	Column Switch	DI, Horn, Lighting	12170	1984-87		<b>SQB223</b>
Municipal M16P12, P15 4x2	Panel Switch	2 position rocker	5870	1982-90		<b>39629</b>





Description

Function

Engine Info

cc

OE

Part No.

→ **SEDDON ATKINSON**

Municipal M17P16 4x2	Panel Switch	2 position rocker		6000	1984-90	<b>39629</b>
Municipal M17P21 4x2	Panel Switch	2 position rocker		6000	1990 >>	<b>39629</b>
Municipal M23P21 6x4	Panel Switch	2 position rocker		6000	1992 >>	<b>39629</b>
Municipal M24P16 6x4	Panel Switch	2 position rocker		5870	1984 >>	<b>39629</b>
Municipal M24P18 6x4	Panel Switch	2 position rocker		6000	1986-90	<b>39629</b>
Municipal M25, M26P21 6x4	Panel Switch	2 position rocker		6000	1992 >>	<b>39629</b>
Municipal N17P16 4x2	Panel Switch	2 position rocker		6000	1984-90	<b>39629</b>
Municipal N17P21 4x2	Panel Switch	2 position rocker		6000	1990 >>	<b>39629</b>
Municipal N22P21 6x2, N24P21 6x4	Panel Switch	2 position rocker		6000	1990-92	<b>39629</b>
Pennine VII	Panel Switch	2 position rocker			1975	<b>39629</b>

**SIMCA >> Talbot****TALBOT (Matra, Simca)**

Alpine 1.3	Solenoid 4ST			1294	1975-85	<b>SRB325</b>
Alpine 1.5	Solenoid 4ST			1442	1975-82	<b>SRB325</b>
Alpine Coupe	Solenoid 4ST			1725	1971-75	<b>SRB325</b>
Avenger 1250	Solenoid 4ST		Estate	1248	1970-73	<b>SRB325</b>
Avenger 1300	Solenoid 4ST		Estate	1295	1973-81	<b>SRB325</b>
Avenger 1500, GT, Tiger, Estate	Solenoid 4ST			1498	1972-73	<b>SRB325</b>
Avenger All Models	Solenoid 4ST			1598	1973-81	<b>SRB325</b>
Hunter All Models	Solenoid 4ST			1725	1966-79	<b>SRB325</b>
Imp, California, Husky, Sports, Van	Solenoid 4ST			875	1965-76	<b>SRB325</b>
Rapier, H 120	Solenoid 4ST			1725	1967-76	<b>SRB325</b>

**TRIUMPH >> Rover****TVR**

3000M	Solenoid 4ST		Turbo	2994	1972-80	<b>SRB325</b>
3000S, Turbo	Solenoid 4ST			2994	1979-80	<b>SRB325</b>
Taima	Panel Switch	Lighting		2994	1976-77	<b>39914</b>
Taima	Ignition Switch	Column Lock Switch	{US}	2994	1977	<b>30563</b>
Taimar Turbo	Panel Switch	Lighting		2994	1976-77	<b>39914</b>
Taimar Turbo	Ignition Switch	Column Lock Switch	{US}	2994	1977	<b>30563</b>
Tasmin 2.8i	Panel Switch	Window lift		2792	1980-83	<b>33852</b>

**VAUXHALL**

Agilia 1.0 12v 1.2 16v	Column Stalk	Front & Rear Wiper Washer			09/00 >>	<b>SQB224</b>
Agilia 1.0 12v 1.2 16v	Column Stalk	DI,Dip/Main Beam. Flash			09/00 >>	<b>SQB225</b>
Astra 1800 GTE	Fuelling Relay		4 Cyl OHC	1796	1983-84	<b>FDB501</b>
Astra 2 1.8i	Fuelling Relay		OHC	1796	1986-91	<b>FDB504</b>
Astra 2 1.8i GTE	Fuelling Relay		OHC	1796	1984-86	<b>FDB501</b>
Astra 2 2.0i GTE	Fuelling Relay		OHC	1998	1987-91	<b>FDB504</b>
Astra 2 2.0i GTE 16v (DOHC)	Fuelling Relay		16v	1998	1988-91	<b>FDB504</b>
Astra 2 Convertible 2.0i	Fuelling Relay		OHC	1998	1991-93	<b>FDB504</b>
Astra 2 Convertible 2.0i GTE	Fuelling Relay		OHC	1998	1987-91	<b>FDB504</b>
Astra 3 2.0 GSi 16v	Fuelling Relay			1998	1991-94	<b>FDB504</b>
Astra 3 2.0i	Fuelling Relay		DOHC	1998	1991-93	<b>FDB504</b>
Astra 3 2.0i 16v	Fuelling Relay			1998	1994-98	<b>FDB504</b>
Astra 3 Convertible 2.0i	Fuelling Relay		DOHC	1998	1993-94	<b>FDB504</b>
Astra Belmont 1.8i	Fuelling Relay		OHC	1796	1989-91	<b>FDB504</b>
Astra III All models	Column Stalk	Front & Rear Wiper Washer			07-92-09/98	<b>SQB224</b>
Astra III All models	Column Stalk	DI,Dip/Main Beam. Flash			07-92-09/98	<b>SQB225</b>
Astra IV All Models	Column Stalk	Front & Rear Wiper Washer			10/98-02/03	<b>SQB224</b>
Astra IV All Models	Column Stalk	DI,Dip/Main Beam. Flash			10/98-02/03	<b>SQB225</b>
Belmont 1.3, 1.6, 1.6D, 1.8i	Fuelling Relay		(1.8i) OHC	1796	1986-89	<b>FDB504</b>
Calibra 2.0i,2.0i 16v, 4x4, Turbo	Fuelling Relay		4 Cyl OHC	1998	1990-97	<b>FDB504</b>
Calibra All Models	Column Stalk	Front & Rear Wiper Washer			03/91-06/97	<b>SQB224</b>
Calibra All Models	Column Stalk	DI,Dip/Main Beam. Flash			03/91-06/97	<b>SQB225</b>
Carlton 3 1.8, 1.8i, 2.0i	Fuelling Relay		(Not 1.8)		1986-92	<b>FDB504</b>
Carlton II 2.0i	Fuelling Relay			1998	1990-95	<b>FDB504</b>
Carlton II 2.6i	Fuelling Relay			2594	1990-94	<b>FDB504</b>
Cavalier III 2.0 SRI	Fuelling Relay			1998	1988-92	<b>FDB504</b>
Cavalier III 2.0 SRI	Fuelling Relay		OHC	1998	1990-94	<b>FDB504</b>
Cavalier III 2.0i	Fuelling Relay			1998	1988-95	<b>FDB504</b>
Cavalier III 2.0i 16v (ECOTEC-4)	Fuelling Relay			1998	1994-95	<b>FDB504</b>
Cavalier III 2.0i 4x4	Fuelling Relay		OHC	1998	1988-92	<b>FDB504</b>
Cavalier III 2.0i Turbo 4x4	Fuelling Relay			1998	1992-94	<b>FDB504</b>

→



Description      Function      Engine Info      cc      OE      Part No.

→ VAUXHALL					
Description	Function	Engine Info	cc	OE	Part No.
Caverlier III All Models	Column Stalk	Front & Rear Wiper Washer		09/88-11/95	<b>SQB224</b>
Caverlier III All Models	Column Stalk	DI,Dip/Main Beam. Flash		09/88-11/95	<b>SQB225</b>
Chevette 1300,	Solenoid 4ST		1256	1975-79	<b>SRB335</b>
Corsa All Models	Column Stalk	Front & Rear Wiper Washer		07/94-10/01	<b>SQB224</b>
Corsa All Models	Column Stalk	DI,Dip/Main Beam. Flash		07/94-10/01	<b>SQB225</b>
Cresta (PC),	Solenoid 4ST		3294	1969-72	<b>SRB335</b>
Frontera 2.0i, 2.4i	Fuelling Relay			1991-997	<b>FDB504</b>
Magnum 1800,	Solenoid 4ST		1759	1973-77	<b>SRB335</b>
Magnum 2300, Coupe,	Solenoid 4ST		2279	1973-77	<b>SRB335</b>
Nova (Facelift) 1.6 GSi	Fuelling Relay		1598	1990-93	<b>FDB504</b>
Omega	Column Stalk	Front & Rear Wiper Washer		03/94-02/01	<b>SQB224</b>
Omega	Column Stalk	DI,Dip/Main Beam. Flash		03/94-02/01	<b>SQB225</b>
Senator 2 2.5i	Fuelling Relay		2490	1987-90	<b>FDB501</b>
Senator 2 3.0i	Fuelling Relay		2969	1987-92	<b>FDB501</b>
Senator 2 3.0i 24v	Fuelling Relay		2969	1989-94	<b>FDB504</b>
Senator 2.5i, 3.0i	Fuelling Relay			1984-87	<b>FDB501</b>
Sintra MPV All Models	Column Stalk	Front & Rear Wiper Washer		11/96-04/99	<b>SQB224</b>
Sintra MPV All Models	Column Stalk	DI,Dip/Main Beam. Flash		11/96-04/99	<b>SQB225</b>
Tigra All models	Column Stalk	Front & Rear Wiper Washer		07/94-12/00	<b>SQB224</b>
Tigra All models	Column Stalk	DI,Dip/Main Beam. Flash		07/94-12/00	<b>SQB225</b>
Vectra All Models	Column Stalk	Front & Rear Wiper Washer		11/95-09/00	<b>SQB224</b>
Vectra All Models	Column Stalk	DI,Dip/Main Beam. Flash		11/95-09/00	<b>SQB225</b>
Ventora FE 3300	Solenoid 4ST		3294	1972-76	<b>SRB335</b>
Victor FD 3300	Solenoid 4ST		3294	1968-72	<b>SRB335</b>
Victor FD 1600	Solenoid 4ST		1599	1969-72	<b>SRB335</b>
Victor FE 2300,	Solenoid 4ST		2279	1972-76	<b>SRB335</b>
Viscount 3300	Solenoid 4ST		3294	1969-72	<b>SRB335</b>
Viva HA	Solenoid 4ST		1057	1963-66	<b>SRB335</b>
Viva HB 1100, 90/SL	Solenoid 4ST		1159	1966-70	<b>SRB335</b>
Viva HB 1100, 90/SL, Brabham	Solenoid 4ST		1159	1966-70	<b>SRB335</b>
Viva HB 1600	Solenoid 4ST		1599	1968-70	<b>SRB335</b>
Viva HB 2000 GT	Solenoid 4ST		1975	1968-70	<b>SRB335</b>
Viva HC 1100, SL90	Solenoid 4ST		1159	1970-71	<b>SRB335</b>
Viva HC 1256,	Solenoid 4ST		1256	1971-79	<b>SRB335</b>
Viva HC 1300	Solenoid 4ST		1256	1971-79	<b>SRB335</b>
Viva HC 1600	Solenoid 4ST		1599	1970-72	<b>SRB335</b>
Viva HC 1800,	Solenoid 4ST		1759	1973-79	<b>SRB335</b>
Viva HC 2300,	Solenoid 4ST		2279	1972-73	<b>SRB335</b>
Viva HC Coupe 1256 E	Solenoid 4ST		1256	1971-75	<b>SRB335</b>
VX 1800	Solenoid 4ST		1759	1976-78	<b>SRB335</b>
VX 2000 4/90	Solenoid 4ST		1975	1969-71	<b>SRB335</b>
VX 2300, 4/90	Solenoid 4ST		2279	1972-78	<b>SRB335</b>
Zafira All Models	Column Stalk	Front & Rear Wiper Washer		09/99-09/00	<b>SQB224</b>
Zafira All Models	Column Stalk	DI,Dip/Main Beam. Flash		09/99-09/00	<b>SQB225</b>

### VAUXHALL LCV

Astramax III All models	Column Stalk	Front & Rear Wiper Washer		07-92-09/98	<b>SQB224</b>
Astramax III All models	Column Stalk	DI,Dip/Main Beam. Flash		07-92-09/98	<b>SQB225</b>
Corsa Combo	Column Stalk	Front & Rear Wiper Washer		03/93-09/00	<b>SQB224</b>
Corsa Combo	Column Stalk	DI,Dip/Main Beam. Flash		03/93-09/00	<b>SQB225</b>

### VOLVO LEYLAND (AEC)

Atlantean	Body Switch	Foot dip		1969-83	<b>34790</b>
Atlantean	Panel Switch	Horn/Dip		1969-83	<b>SPB140</b>
Fleet Line 30, 33	Body Switch	Foot dip	10450	1972-81	<b>34790</b>
Fleet Line 30, 33	Panel Switch	Rotary	10450	1975-81	<b>SPB121</b>
Fleet Line 36	Body Switch	Foot dip	10450	1972-81	<b>34790</b>
Fleet Line 36	Panel Switch	Rotary	10450	1972-81	<b>SPB121</b>
National II	Panel Switch	2 position lever		1973-78	<b>31780</b>
National II	Ignition Switch			1973-78	<b>39798</b>
National II	Solenoid 4ST			1973-75	<b>SRB346</b>
National II	Solenoid 4ST			1976-78	<b>SRB351</b>
Olympian	Panel Switch	Rotary	9783	1970-76	<b>SPB121</b>
Olympian	Panel Switch	Horn/Dip	9783	1970-76	<b>SPB140</b>
RELH, RELL (6HLW, HLX, HLW)	Panel Switch	Rotary		1969-82	<b>SPB121</b>
RELH, RELL (6HLW, HLX, HLW)	Panel Switch	Horn/Dip		1970-82	<b>SPB141</b>
Reliance 6MU2L, R, 6MU3L, R, 6MU4R	Body Switch	Foot dip		1969-78	<b>34790</b>
Reliance 6U2R (AV691/6)	Body Switch	Foot dip		1969-76	<b>34790</b>
Reliance 6U2R (AV760/6)	Body Switch	Foot dip		1969-78	<b>34790</b>

→





Description

Function

Engine Info

cc

OE

Part No.

→ VAUXHALL

Reliance 6U3L/ZRE	Body Switch	Foot dip		1969-76	<b>34790</b>
Reliance 6U3ZL/ZRE	Body Switch	Foot dip		1969-78	<b>34790</b>
Reliance 8U3ZL/ZR (AV691/6)	Body Switch	Foot dip		1969-76	<b>34790</b>
Reliance 8U3ZL/ZR (AV760/6)	Body Switch	Foot dip		1969-78	<b>34790</b>
RESH (6HLX)	Panel Switch	Rotary		1969-82	<b>SPB121</b>
RESH (6HLX)	Panel Switch	Horn/Dip		1970-82	<b>SPB141</b>
RESL (6HLW, HLX)	Panel Switch	Rotary		1969-82	<b>SPB121</b>
RESL (6HLW, HLX)	Panel Switch	Horn/Dip		1970-82	<b>SPB141</b>
Royal Tiger	Panel Switch	Rotary		1969-76	<b>SPB121</b>
Royal Tiger	Panel Switch	Horn/Dip		1969-76	<b>SPB140</b>
Titan	Solenoid 4ST			1979	<b>SRB351</b>
Titan (Leyland TL11)	Panel Switch	2 position lever		1979	<b>31780</b>
Titan (Leyland TL11)	Ignition Switch			1979	<b>33838</b>
Titan (Leyland TL11)	Ignition Switch	Rear		1979	<b>39798</b>
Titan (Leyland TL11)	Panel Switch	Heater		1979	<b>54033632</b>
Victory (Gardner 6LX) (Leyland 680)	Panel Switch	Push		1970-73	<b>SPB160</b>
Victory (Gardner 6LX) (Leyland 680)	Ignition Switch	Heater-Start, 3 position lever		1971-73	<b>33940</b>
Victory (Gardner 6LX) (Leyland 680)	Body Switch	Foot dip		1971-73	<b>34790</b>
Victory J (Gardner 6LX)	Panel Switch	Push	10450	1970-73	<b>SPB160</b>
Victory J (Gardner 6LX)	Ignition Switch	Heater-Start, 3 position lever	10450	1971-73	<b>33940</b>
Victory J (Gardner 6LX)	Body Switch	Foot dip	10450	1971-73	<b>34790</b>
Victory, J (Gardner 6LXB)	Ignition Switch	Heater-Start, 3 position lever	10450	1974-77	<b>33940</b>
Victory, J (Gardner 6LXB)	Body Switch	Foot dip	10450	1974-77	<b>34790</b>
Victory, J (Gardner 6LXB)	Panel Switch	Push	10450	1974-77	<b>SPB160</b>
Worldmaster	Panel Switch	Rotary		1969-78	<b>SPB121</b>
Worldmaster	Panel Switch	Horn/Dip		1969-78	<b>SPB140</b>

**VW**

Corrado 1.8 G60	Fuelling Relay		4 Cyl DOHC	1781	10/88-94	<b>FDB507</b>
Golf (II) 1.8	Fuelling Relay		4 Cyl OHC GX	1781	1984-07/85	<b>FDB509</b>
Golf (II) 1.8 GT/Xi	Fuelling Relay		4 Cyl OHC	1781	08/85-04/87	<b>FDB511</b>
Golf (II) 1.8 GT/Xi	Fuelling Relay		4 Cyl OHC	1781	1984-07/85	<b>FDB509</b>
Golf (II) 1.8 GT/Xi	Fuelling Relay		{CH} 4 Cyl OHC	1781	1984-07/85	<b>FDB509</b>
Golf (II) 1.8 GTi G60	Fuelling Relay		4 Cyl DOHC 16v	1781	04/90-07/91	<b>FDB507</b>
Golf (II) 1.8 Rallye	Fuelling Relay		4 Cyl DOHC 16v	1763	08/90-10/91	<b>FDB507</b>
Golf (II) 1.8 Syncro	Fuelling Relay		4 Cyl OHC	1781	02/86-07/88	<b>FDB509</b>
Jetta (II) 1.8	Fuelling Relay		4 Cyl OHC	1781	1984-07/85	<b>FDB509</b>
Jetta (II) 1.8	Fuelling Relay		{CH} 4 Cyl OHC	1781	1984-07/85	<b>FDB509</b>
Jetta (II) 1.8 GT/X	Fuelling Relay		4 Cyl OHC	1781	08/85-04/87	<b>FDB511</b>
Jetta (II) 1.8 GT/X	Fuelling Relay		{CH} 4 Cyl OHC	1781	08/85-07/86	<b>FDB511</b>
Jetta (II) 1.8 Syncro	Fuelling Relay		4 Cyl OHC	1781	02/86-07/88	<b>FDB509</b>
Jetta 1800i	Fuelling Relay		4 Cyl OHC	1781	08/82-07/83	<b>FDB510</b>
Passat (II) 2.0i Syncro	Fuelling Relay		5 Cyl OHC	1994	08/85-02/88	<b>FDB510</b>
Passat (II) 2.2i	Fuelling Relay		5 Cyl OHC	2226	08/85-03/88	<b>FDB510</b>

